
Overview

 
Firmware update tool is an application used to update monitor firmware.

Firmware Update Pre-requisites

1 Connect the monitor to a power source, during the firmware update process.

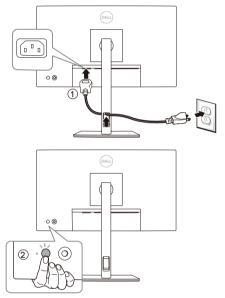

2 Make sure there is only ONE video input source, for example, DisplayPort or HDMI, from the computer to the monitor.



3 Connect the USB Type-C to Type-A cable directly between the monitor and your computer. Do not use any other device between this connection.




NOTE: Ensure that other USB cables and USB devices between the monitor and the computer are unplugged.



NOTE: Disconnect all other monitors from the notebook or desktop. This will ensure that only one display is connected while conducting firmware update.

NOTE: It is recommended to update the firmware with a notebook as the monitor screen may go blank during the firmware update process.

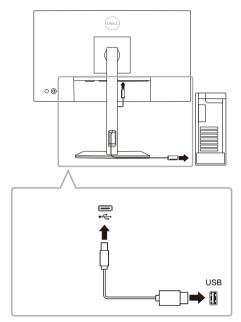

4 Exit DDM (Dell Display Manager) application before conducting firmware update.


NOTE: Do not unplug the cables till the updating process is complete.

NOTE: Please disable sleep mode before you launch the firmware update.

NOTE: Update one monitor at a time. Do not conduct firmware update on multiple monitors at a given time.

Updating firmware

- 1 Double-click the ISP icon 🔜.
- 2 Initializing for device status.

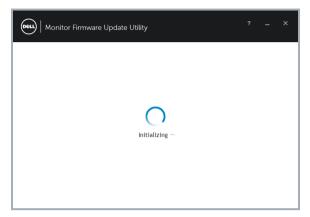

3 The utility will load the firmware file automatically. Or, you can select your file manually by clicking ... and navigating to the UPG firmware file.

File Path C:\De Model No U242 Current Firmware M3B1 New Firmware M3B1 File Checksum 716B	01	
() Update takes up to 6 minutes. Do not po	ower off or disconnect cable while updating.	


4 Click **Update**. The utility will start updating the new firmware.

Monitor Firmv	vare Update Utility	?	-)
File Path	C:\Dell\firmware\U2424H\62\M3B102\U2424H_M3B102.	UPG		
Model No	U2424H			
Current Firmware	M3B101			
New Firmware	M3B102			
File Checksum	716B			
Updating .	es. Do not power off or disconnect cable while updating.			
			lose	

5 Once the updating process is completed, please follow the on-screen instructions to restart your monitor.



 NOTE: Update takes up to 6 minutes. Do not power off or disconnect cable while updating.



Troubleshooting

Errors	Possible Solutions			
File permission error	 Save the firmware file in another location. Check if the firmware file has read permission. Check if you have owner rights for the firmware file. Run the utility with administrator privileges. 			
Monitor not detected	Follow Firmware Update Pre-requisites to check if the power and USB cables are properly connected to your computer and reopen the Monitor Firmware Update Utility.			
Write protection error	Re-try updating with the following steps:			
Flash erase error	1 Close the Monitor Firmware Update Utility.			
Update error	 2 Turn off the monitor by pressing the power button. 3 Re-plug the power cord. 			
Monitor firmware checksum error	4 Turn on the monitor.5 Try updating again with the Monitor Firmware Update Utility.			
USB device inactive after new firmware installation.	Re-try the updating steps from 1 to 4 as stated above.			
A warning message appears: "Firmware update was not completed. Please update the monitor firmware again."	Re-try updating the monitor's firmware. Do not turn off the ISP tool until the update is complete.			