

USER MANUAL

Pro Lite

LCD Monitor

ENGLISH

Pro Lite TE8614MIS
Pro Lite TE7514MIS
Pro Lite TE6514MIS

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



Scan the QR code to find out additional software/services available for your IYAMA product or go to:
iiyama.com/signup



Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at <https://iiyama.com>

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- | if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

- | model number *
- | purchase receipt and serial number *
- | name and address for collection
- | telephone/fax number, for availability during the day
- | convenient collection date (date, time)
- | short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our evaluation for improvements.

* see the identification plate on the back of the case.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IYAMA CORPORATION: Wijkmeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL8614U / PL7514U / PL6514U



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: <https://iiyama.com>

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- Eprel registration number
TE6514MIS-B2AG : 1941671 TE7514MIS-B2AG : 1941902 TE8614MIS-B2AG : 1941952

TABLE OF CONTENTS

FOR YOUR SAFETY.....	1
SAFETY PRECAUTIONS.....	1
SPECIAL NOTES ON LCD MONITORS.....	3
CUSTOMER SERVICE.....	5
CLEANING.....	5
BEFORE YOU OPERATE THE MONITOR.....	6
FEATURES.....	6
CHECKING THE CONTENTS OF THE PACKAGE.....	6
UNPACKING.....	7
SPECIAL NOTES ON THE TOUCH PANEL.....	7
INSTALLATION.....	8
CONTROLS AND CONNECTORS : MONITOR.....	10
FUNCTIONS OF THE REMOTE CONTROL.....	13
PREPARING THE REMOTE CONTROL.....	14
BASIC OPERATION.....	16
CONNECTING YOUR MONITOR.....	19
COMPUTER SETTING.....	22
OPERATING THE MONITOR.....	23
ADJUSTMENT MENU CONTENTS.....	25
STANDBY FEATURE.....	50
TROUBLE SHOOTING.....	51
RECYCLING INFORMATION.....	52
APPENDIX.....	53
SPECIFICATIONS : ProLite TE8614MIS-B2AG.....	53
SPECIFICATIONS : ProLite TE7514MIS-B2AG.....	55
SPECIFICATIONS : ProLite TE6514MIS-B2AG.....	57
DIMENSIONS : ProLite TE8614MIS.....	59
DIMENSIONS : ProLite TE7514MIS.....	59
DIMENSIONS : ProLite TE6514MIS.....	60
COMPLIANT TIMING.....	60

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

- The following symptoms are normal with LCD monitors and do not indicate a problem.

NOTE

- When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.
- This LCD cannot be used outdoors.
 - This LCD cannot be used with the screen facing upwards.
 - If you use a cable longer than the supplied one, the picture quality is not guaranteed. Touch function can be disrupted if the USB cable length exceeds 3m.

USAGE CONFIRMATION

The display is compatible for usage in Landscape applications.

IMAGE PERSISTENCE / IMAGE STICKING

Please be aware that all LCD screens can experience Image Persistence or Image Sticking. This occurs when a residual image remains visible on a screen when static images are displayed for long periods of time. LCD Image Persistence is not permanent but constant images being displayed for a long period of time should be avoided.

To counteract Image Persistence, turn off the monitor for as long as the previous image was displayed, so if an image was on the monitor for 1 hour and there is evidence of a residual or "ghost" image, you should turn off the monitor for 1 hour in order to clear the residual image.

For all LFD products, iiyama recommends displaying moving images and utilising a moving screen saver at regular intervals whenever the screen is idle. You could also turn off the monitor when not in use to assist the prevention.

Other ways to reduce the risk of Image Persistence will be to utilise the FAN-on function (if available), Low Backlight and Low Brightness settings.

FOR EXTENDED USE AS A PUBLIC DISPLAY

■ Image Sticking on LCD Panel

When a static image is displayed for hours, an electric charge trace remains near the electrode inside the LCD producing a "ghost" image. (Image Persistence).

Image Persistence is not a permanent feature.

■ Recommendations

To prevent Image Sticking and promote longer life expectancy of display, we recommend the following:

1. Avoid static images displayed for long periods – change static images on continuous loop.
2. Turn off monitor when not in use, either by remote control or use Standby or Schedule functions.
3. Check the Monitor Menu Settings for "Pixel Shift" etc. and activate it when available. This will reduce the Image Sticking Effect.
4. When monitor is installed in high ambient temperature environment(s) or in an enclosed position, utilise the Cooling Fan, Screen Saver and Low Brightness functions.
5. Suitable ventilation for any monitor is an expectation of any installation – climate control systems may need to be employed.
6. We strongly recommend utilisation of active cooling with fans for long operation times or high ambient temperature environments.

CUSTOMER SERVICE

NOTE

- If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

WARNING

- If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.

CAUTION

- For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Benzine	Abrasive cleaner
Spray-type cleaner	Wax	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.

CABINET

Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.

LCD

Periodic cleaning with a soft dry cloth is recommended.

SCREEN

Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- ◆ Supports Resolutions up to 3840 × 2160
- ◆ High Contrast 4000:1 (Typical: without glass) / Brightness 435cd/m² (Typical: without glass) : ProLite TE8614MIS / ProLite TE6514MIS
- ◆ High Contrast 5000:1 (Typical: without glass) / Brightness 435cd/m² (Typical: without glass) : ProLite TE7514MIS
- ◆ Digital Character Smoothing
- ◆ Automatic Set-up
- ◆ USB Type-C / RJ45 Connectors
- ◆ USB Power Delivery supports up to 100W
- ◆ 2 × 8W + 2 × 18W (Typical) Stereo Speakers
- ◆ VESA Mounting Standard (800mm×600mm) Compliant : ProLite TE8614MIS
- ◆ VESA Mounting Standard (800mm×400mm) Compliant : ProLite TE7514MIS
- ◆ VESA Mounting Standard (600mm×400mm) Compliant : ProLite TE6514MIS
- ◆ Glass with AG coating

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- | | | |
|---|------------------|--------------------------------------|
| ■ Power Cable* | ■ HDMI Cable | ■ Touch USB Cable |
| ■ Remote Control | ■ Battery (2pcs) | ■ Touch Pen (Dual head: 4pcs) |
| ■ Cable ties (For cable management, 6pcs) | | ■ Mounting bracket for webcam (1set) |
| ■ Mounting bracket for NUC | ■ Safety Guide | ■ Quick Start Guide |

CAUTION

* All guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVVF, 3G, 0.75mm² must be used.

UNPACKING

CAUTION

Moving the monitor requires at least two people. If not, it may drop and could result in a serious injury.

SPECIAL NOTES ON THE TOUCH PANEL

CAUTION


Permanent damage can occur if Sharp Edged, Pointed or Metal items are used to activate Touch. This could invalidate any remaining warranty. We recommend you use a plastic stylus (tip \varnothing 2mm or over) or finger.

INSTALLATION

CAUTION

- Follow the manual instructions for the type of mount you have selected. Refer all servicing to qualified service personnel.
- Moving the monitor requires at least two people.
- Before installation, please make sure the wall is strong enough to hold the necessary weight of the display and the mount.

[WALL MOUNTING]

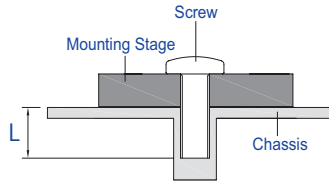

CAUTION

When using the wall mounting, consideration of thickness of the mounting stage needs to be taken. Tighten the M8 Screws (4pcs) which "L" length is 25mm to fasten the monitor. Using a screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.


[INSTALLATION NOTE]

The touch kit of this monitor is an optical device that utilizes infrared light source and sensitive sensors for touch detection.

Notice the incident light that contains large quantities of infrared light may affect touch screen operation and performance.



Please install it with care as follows to ensure reliable touch performance.

Intense light / Specular light / Focus spotlight / Wide spread light / Direct sunlight / Indirect sunlight from the window and/or the glass door. / Not install the touch monitor right under the light source.

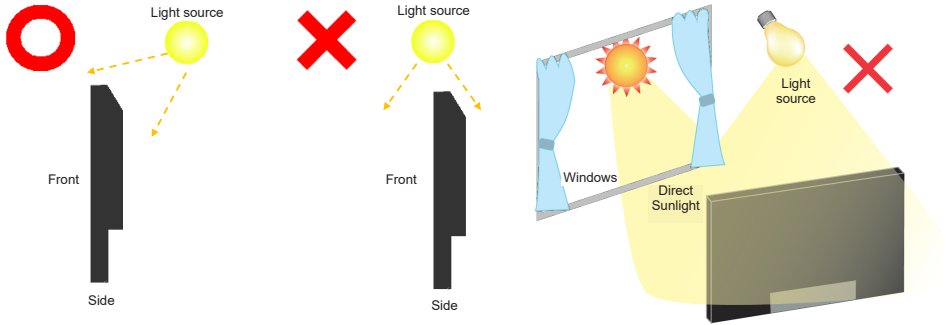


[ROTATING THE DISPLAY]


It is designed to be compatible in landscape mode.

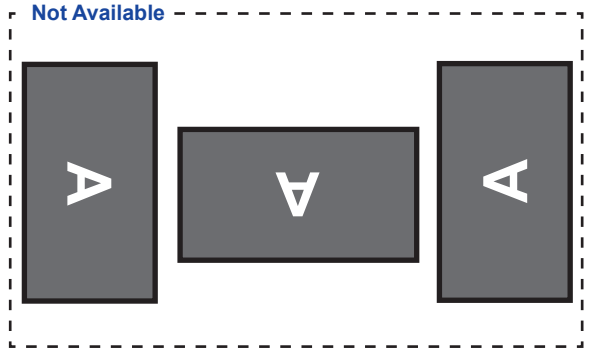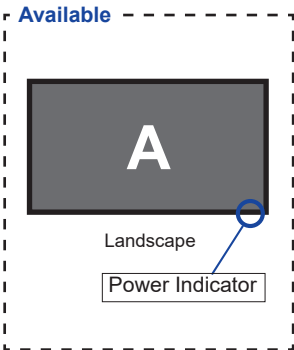

CONTROLS AND CONNECTORS : MONITOR

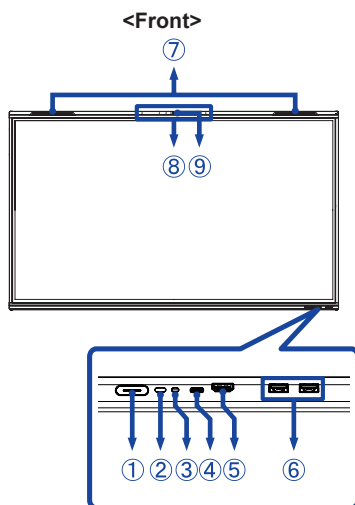

①	Power Button		Power Off Pressing and holding the Power Button on the front for 3-5 seconds.
	Power Indicator	White	Normal Operation
		Red	Standby Mode When the power indicator light is lighting red, the display is in Power Save Mode. To turn the screen back on, you can press the power button on the front or the remote control.
		Red & White Flashing slow	The Screen Off function is active. To turn the screen back on, you can touch the screen or any button on the remote control.
	Red & White Flashing fast	Going to the Standby Mode or system is updating.	
②	Remote Sensor		
③	Light Sensor		
④	TYPE C2 IN	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) DisplayPort 1.2 ALT mode / Touch / Power Delivery 100W	
⑤	HDMI4 IN	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3	
⑥	USB3.2	USB Type-A Connector USB3.2 Gen 1 (5Gbps, 5V, 900mA)	
⑦	Speakers (Facing forward, 8W×2)		
⑧	Microphone Array *		
⑨	Microphone Indicator	White	Microphone is in used.

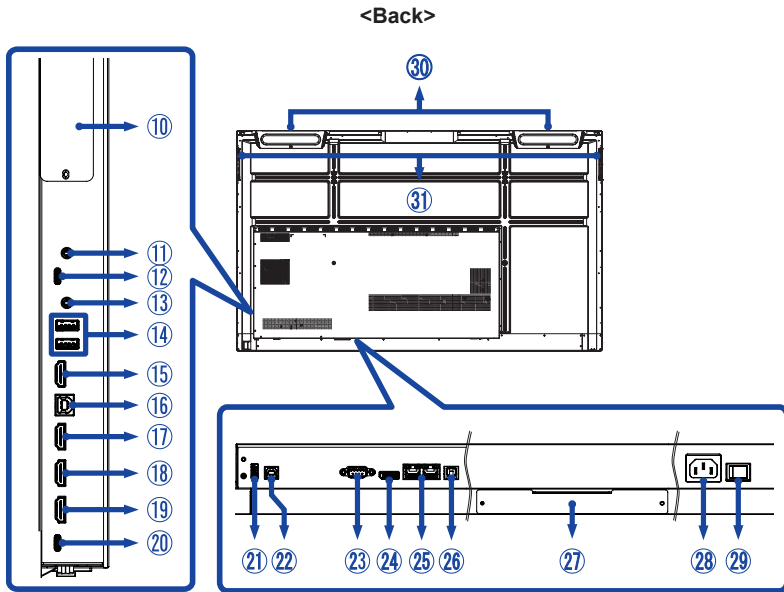


⑩	Option PC module slot	
⑪	AUDIO IN	Audio Connector ø 3.5mm RTS mini jack
⑫	USB-C3.2 OUT	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 1A)
⑬	AUDIO OUT	Audio Connector ø 3.5mm RTS mini jack
⑭	USB3.2	USB Type-A Connector USB3.2 Gen 1 (5Gbps, 5V, 900mA) Touch Out for HDMI OUT
⑮	HDMI OUT	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3
⑯	TOUCH1 (for HDMI1/HDMI2)	USB Tybe-B Connector USB2.0 (480 Mbps, 5V, 500mA)
⑰	HDMI1 IN	Standard HDMI Connector HDMI2.0 3840×2160 60Hz HDCP 2.3
⑱	HDMI2 IN	
⑲	HDMI3 IN	
⑳	TYPE C1 IN	USB Type-C Connector USB3.2 Gen 1 (5Gbps, 5V, 3A) DisplayPort 1.2 ALT model / Touch / Power Delivery 15W
㉑	USB2.0 (for software update)	USB Type-A Connector USB 2.0 (480 Mbps, 5V, 500mA)
㉒	TOUCH2 (for HDMI3/DisplayPort)	USB Type-B Connector USB2.0 (480 Mbps, 5V, 500mA)
㉓	RS232C	DB-9 Connector

②④	DisplayPort IN	Standard DisplayPort Connector DisplayPort1.2 3840×2160 30Hz HDCP 2.3
②⑤	LAN	RJ45 Gigabit Ethernet
②⑥	SPDIF OUTPUT	SPDIF Connector
②⑦	Option WiFi/BT module slot (OWM002)	
②⑧	AC IN	AC Connector(~ : Alternating current) (AC-IN)
②⑨	AC SWITCH (ON) / (OFF)	Main Power Switch
③⑩	Speakers (Facing upward, 18W×2)	
③①	Handles	2x

* After connecting the laptop to the display via Touch cable or USB-C cable, you may see "Microphone (Built-in Audio)" listed in the devices.

FUNCTIONS OF THE REMOTE CONTROL

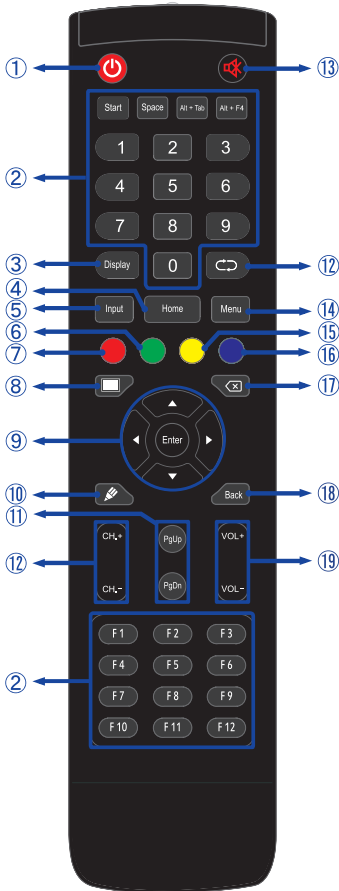

①		Turn the monitor ON and OFF.
②	Number (1-9) / Other / Function (F1-F12)	Under iiWare: 0-9 numeric input Under Windows: 0-9 numeric input, Start/Space/ALT+Tab/ALT+F4/F1-12 for Keyboard function
③	Display	Provide source and resolution information.
④	Home	Android system main screen button.
⑤	Input	Select the source.
⑥	Green	Lock and unlock Buttons function.
⑦	Red	Lock and unlock Buttons and Touch function.
⑧	Screen Off	Turn the backlight On and Off.
⑨		Navigate through submenus and settings. ▲: Up Button ▼: Down Button ◀: Left Button ▶: Right Button
	Enter	Confirm your selection or save changes.
⑩		Quickly start "Writing Software".
⑪	PgUp / PgDn	When select File: The first / Last When Internet browser: Scroll Up / Scroll Down
⑫		Not available on this model.
⑬		Turn on or off the mute function when the Menu is not displayed.
⑭	MENU	Display the "Screen Setting" menu when the Android system is not displayed.
⑮	Yellow	Lock and unlock Touch function.
⑯	Blue	Freeze the picture.
⑰		Backspace
⑱	Back	Return to a previous menu or closes the OSD Menu.
⑲	VOL+ / VOL-	VOL+: Increase the sound volume. VOL-: Decrease the sound volume.


PREPARING THE REMOTE CONTROL

To use the remote control, insert the two dry batteries.


CAUTION

- Do not use any other batteries other than those specified in this manual for the Remote Control.
- Do not insert old and new batteries together in the Remote Control.
- Make sure that the terminals match the "+" and "-" indications in the battery compartment.
- Remove the dead batteries immediately to prevent them from liquid leaking into the battery compartment.
- Burst batteries or the electrolyte from these batteries may cause stains, fire or injury.


- ① Open back cover of battery component on the back of remote control.

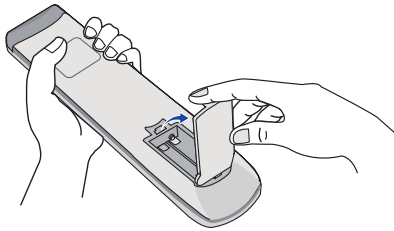

- ② Align and insert two AAA batteries according to their plus and minus ports (as indicated in the remote control).

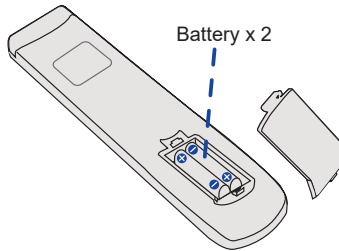

- ③ After battery is installed, close the back cover of battery components, and make the following clip buckled to the bottom.

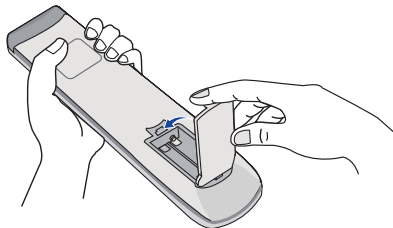

NOTE

- Refer to the above instructions when taking out the batteries.
- Replace with new batteries when the Remote Control does not work close to the monitor.
Use AAA dry batteries. Risk of explosion if battery is replaced by an incorrect type.
- Operate the Remote Control by pointing it toward the Remote Sensor on the monitor.
- Other manufacturers remote control will not work with this monitor. Use the provided Remote Control ONLY.
- Used batteries needed to follow the city rule to be discarded. (suggestion: to dispose of used batteries please follow correct policy as per your council regulations)
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- If you do not intend to use the remote control for a long period, remove the batteries.

BASIC OPERATION


■ Turning the monitor ON

The monitor is turned On and the Power Indicator turns to White when you press the Power Button on the monitor or the Remote Control. The monitor is turned Off and the Power Indicator turns to Red when you press the Power Button on the monitor or the Remote Control. Press again to turn On the monitor.

NOTE

Even when using the standby mode or turning OFF the Power Switch, the monitor will consume a small amount of electricity. Turn OFF the Power Switch or disconnect the Power Cable from the power supply whenever the monitor is not in use or during the night, to avoid unnecessary power consumption.

[Monitor]

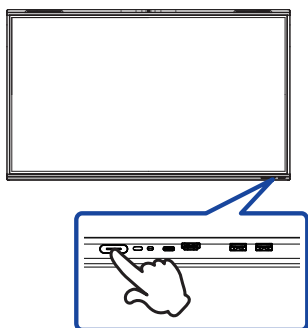

[Remote Control]



■ Display the adjustment menu page

The menu page appears on the screen when you press the Menu Button on the Remote Control.

The menu page disappears when you press the Back Button on the Remote Control.

[Remote Control]



■ Move the cursor vertically

Select adjustment by pressing the ▲ / ▼ Button on the remote control while the menu page is displayed on the screen.

[Remote Control]



■ Move the cursor horizontally

Select menu or setting, or perform the adjustment by pressing the ◀ / ▶ Button on the remote control while the menu page is displayed on the screen.

[Remote Control]



■ Adjust the volume of sound

Press the VOL- / VOL+ Button on the remote control to adjust the volume of sound when the menu page is not displayed on the screen.

[Remote Control]



■ Switch the input signal

The Input setting menu appears on the screen when you press the Input Button on the remote control.

[Remote Control]



CONNECTING YOUR MONITOR

- ① Ensure that both the computer and the monitor are switched off .
 - ② Connect the computer to the monitor with the signal cable.
 - ③ Connect the computer to the monitor with the Touch USB Cable.
 - ④ Connect the computer to the monitor with the USB Type-C Cable when viewing images on your monitor through the USB Type-C Connector or when using the monitor's USB hub function.*
 - ⑤ Connect the Power Cable to the monitor first and then to the power source.
 - ⑥ Turn on your monitor (Main Power Switch and Power Button) and computer.
- * ● When charging connected device via USB Type-C Connector, check if the device is equipped with a USB Type-C Connector that supports charging function via USB PD (=Power Delivery).
- The connected device can be charged via USB Type-C Connector even when the monitor is in standby mode.
 - The USB power delivery is up to 100W. If the connected device required more than 100W for operation or for boot up (when the battery is drained), use the original power adapter that came with the device.
 - If a separately purchased USB Type-C Cable is used, make sure the cable is certified by USB-IF and is full-featured with power delivery and video / audio / data transfer functions.
 - USB C to A cable is not included with the monitor. If you use a USB C to A cable, please note that you can only transfer data.
 - Compatibility with all connected devices is not guaranteed due to different user environments.


NOTE

- Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- Make sure you tighten the finger screws at each end of the Signal Cable.
- The touch function is ready for use about 5 seconds after connecting the USB cable and can be operated with a pen, finger or any other pointer.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

[Example of Connection]

<Back>

ENGLISH

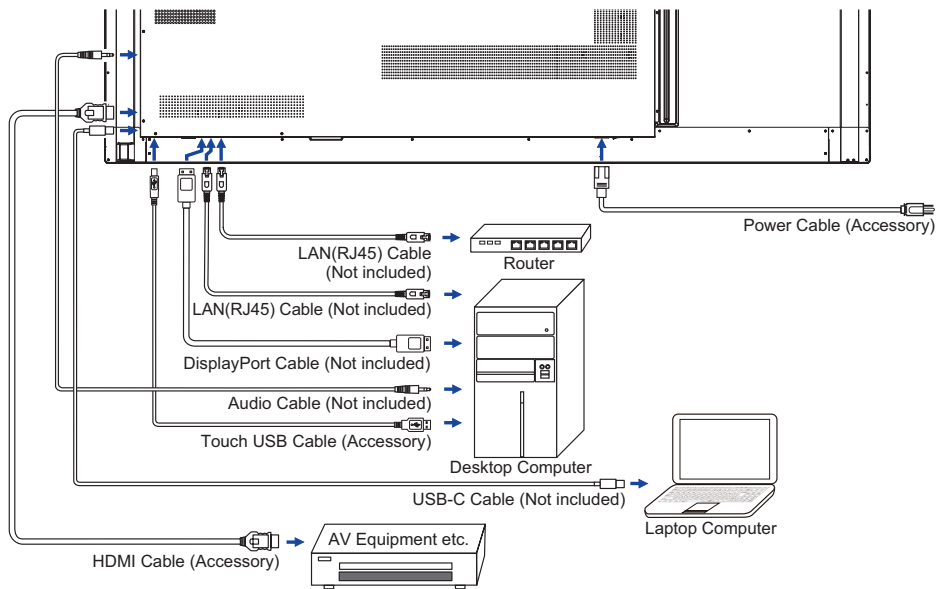


[Connection example with the peripheral device]

CAUTION

Turn off the power switch and unplug the monitor and peripherals before connection to avoid an electric shock or a damage.

NOTE

- Refer to the user manual of peripherals at the same time.
- Ensure you have the necessary cables as required.

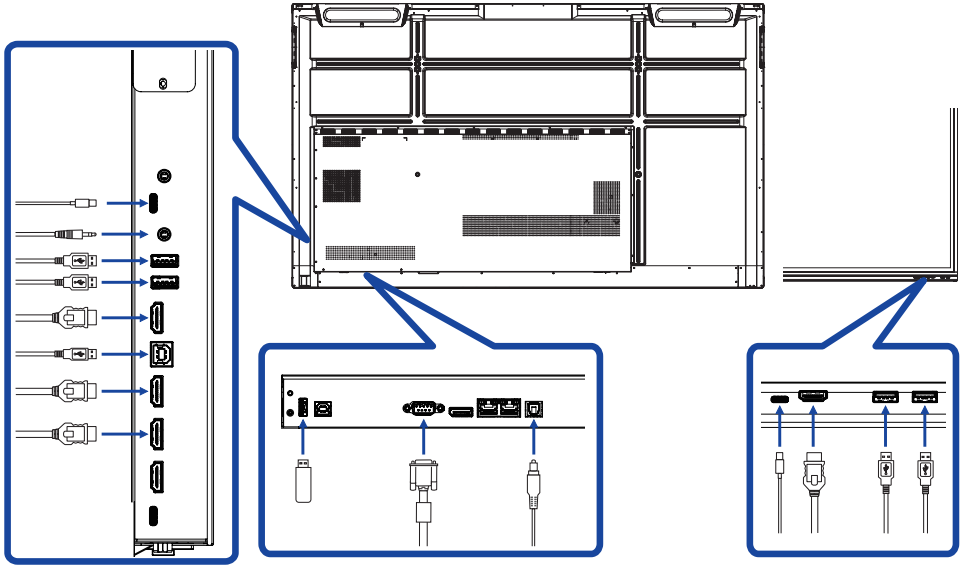

COMPUTER SETTING

■ Signal Timing

Change to the desired signal timing listed on page 60: COMPLIANT TIMING.

■ Procedure for turning ON the Power Switch

Turn ON the monitor first, and then the computer.

■ MULTI-TOUCH :

This monitor complies with DDC2B of VESA standard. (Plug&play compliant)

The MULTI-TOUCH function runs on Windows7/8/8.1/10/11 by connecting the monitor to DDC2B compliant computer with the USB cable supplied.

■ TOUCH support operation system :

Microsoft Windows 2000 (64 bit and 32 bit)

Microsoft Windows XP (64 bit and 32 bit)

Microsoft Windows Vista (64 bit and 32 bit)

Microsoft Windows 7 (64 bit and 32 bit)

Microsoft Windows 8/8.1/10/11 (64 bit and 32 bit)

Mac OS X V13.1 & higher HID for single touch only

Linux 3.0 & higher need patch for multi-touch

3.5 & higher HID for multi-touch

Not support Windows earlier versions.

	Windows 7* ⁵ ,8/8.1* ⁶ ,10* ^{6,7,8} ,11* ^{6,7,8}	Windows7* ⁴	Vista	XP	2000	Mac OSX	Linux
Default mouse* ¹	○	○	○	○	○	○	○
Touch digitizer* ²	○	○	○	×	×	×	×
Windows gestures* ³	○	×	×	×	×	×	×

*¹ Default mouse (click, drag, double-click and right-click)

*² Touch digitizer (click, drag /selection, double-click, right-click, flick and visual feedback)

*³ Digitizer with Windows7/8/8.1/10 multi-touch gestures

*⁴ Windows 7 - Starter and Home Basic version

*⁵ Windows 7 - Home Premium, Professional, Enterprise and Ultimate versions

*⁶ Windows 8/8.1/10/11 need non-OEM version for multi-touch support


*⁷ Windows10/11 - Home, Pro, Enterprise, Education, IoT Core


Not supported for Mobile and Mobile Enterprise.

*⁸ Windows10/11 - Touch do no support for "touchpad gestures". Touchpad gesture is for touchpad on notebook.


OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 60. You are also able to adjust the picture by following the button operation shown below.

- ① Take middle point position on the bottom of display screen as starting point, use the touch pen to drag towards screen center position to call up source menu as shown below. You can also access the Menu by clicking  on the navigation toolbar or press Input Button on the remote control.

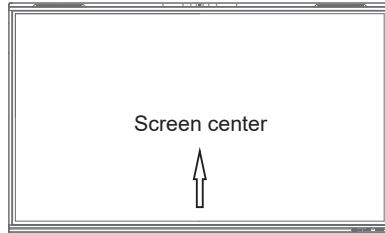


- ② Start the On Screen Display feature. There are additional Menu items which can be switched by using the ▲ / ▼ Buttons on the remote control or with the touch pen.

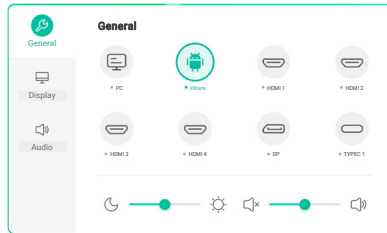

- ③ Select the Menu item of the adjustment you want to make. Press the ► button. Then, use the ▲ / ▼ Buttons on the remote control or with the touch pen to highlight the desired adjustment item. Then, press the Enter button on the remote control.
- ④ Use the ◀ / ▶ Buttons on the remote control or with the touch pen to make the appropriate adjustment or setting.
- ⑤ Press the Back Button on the remote control or click blank area outside menu with the touch pen to exit menu.

For example, to correct for brightness, select Menu item of "Display". Select "Brightness" by using the ▲ / ▼ Buttons on the remote control or with the touch pen.

Use the ◀ / ▶ Buttons on the remote control or with the touch pen to change the brightness settings. The brightness of the overall display should be changing accordingly while you are doing this.

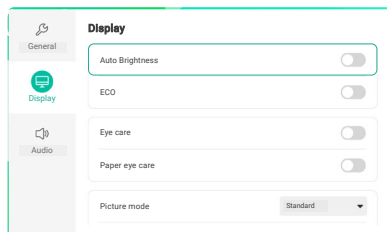


Press the Back Button on the remote control or click blank area outside menu with the touch pen, it ends, all changes are saved in the memory.

NOTE

- The Back Button on the remote control can be used to return previous menu item.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for Image Position and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.









 
Direct * Available for Remote Control only.

- **Freeze Function:**
Press the Blue button when Menu is not displayed.
Repeat successively to activate/deactivate the function.
- **Backlight Function:**
Press the Screen Off button when Menu is not displayed.
Repeat successively to On/Off the function.
- **Input Function:**
Press the Input Button when Menu is not displayed.
- **Volume Function:**
Press the VOL+/VOL- Buttons when Menu is not displayed.
- **Mute Function:**
Press the  Button when Menu is not displayed.
Repeat successively to On/Off the function.
- **Kiosk Mode Function:**
Disable touch functions, buttons, Menu etc.
Turn off "iiWare Enable" in Debug menu (Input + 2580)

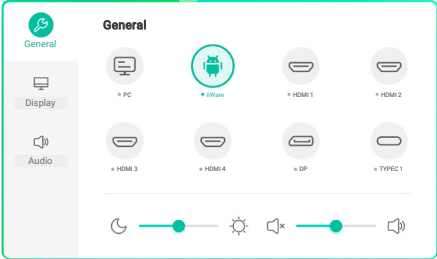[LOCK MODE] * Available for Remote Control only.

- **Front Power Button:**
Press the Green Button when Menu is not displayed, will lock/unlock the Front Power Button.
- **Touch function:**
Press the Yellow Button when Menu is not displayed, will lock/unlock the Touch function.
- **Front Power Button & Touch function:**
 - Press the Red Button when Menu is not displayed, will lock/unlock the Front Power Button and Touch function.


ADJUSTMENT MENU CONTENTS

General settings				
Adjustment Item		Problem / Option		Button to Press
Input *1	Direct	PC *2	Select the PC input.	
		iiWare	Select the iiWare input.	
		HDMI1	Select the HDMI1 input.	
		HDMI2	Select the HDMI2 input.	
		HDMI3	Select the HDMI3 input.	
		HDMI4	Select the HDMI4 input.	
		DP	Select the DisplayPort input.	
		Type-C1	Select the Type-C1 input.	
		Type-C2	Select the Type-C2 input.	
Volume	Direct	Too soft Too loud		   
Backlight	Direct	Brightness of backlight is reduced.		   

*1 The switching of the signal input take a few seconds.


*2 Available when Slot-PC is installed only.

Display settings

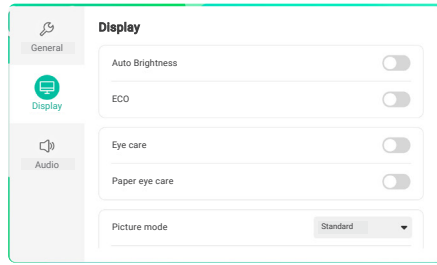

Adjustment Item	Problem / Option		Button to Press
Auto brightness	<input type="radio"/>	The image brightness can be automatically adjusted according to the ambient light.	
		Auto brightness is turned off.	
ECO	<input type="radio"/>	Brightness of back-light is reduced.	
		ECO is turned off.	
Eye care	<input type="radio"/>	Blue light is reduced.	
		Eye care is turned off.	
Paper eye care	<input type="radio"/>	The screen simulates a paper-like texture, reducing eye strain with a grainy effect.	
		Paper eye care is turned off.	
Picture mode *1	Standard	For general windows environment and monitor default setting.	
	Bright	Enlarge brightness and vivid.	
	Soft	Reduce brightness and soften.	
	Custom	Displays a picture on a screen set by Image Settings adjustments.	
Brightness *2,3	Too dark		
	Too bright		
Contrast *3	Too dull		
	Too intense		
Saturation *3	Too weak		
	Too strong		
Sharpness *3	Too soft		
	Too sharp		
Color Temperature	Too cool		
	Too warm		

Display settings

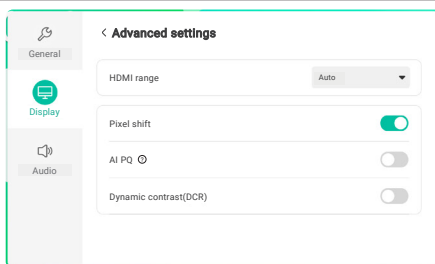


Adjustment Item	Problem / Option		
Advanced settings	HDMI range	Select the range of the HDMI. Auto / 16~235 / 0~255	
	Pixel Shift	○	The screen image will move around slightly every 2 minutes.
			Pixel Shift is turned off.
	AI PQ	○	Enhances and improves the monitor's image quality by using AI, resulting in crisper, more lifelike visuals.
			AI PQ is turned off.
	Dynamic contrast (DCR)	○	Dynamic Contrast Ratio
			DCR is turned off.

*1 Picture mode is disabled when iiWare input.

*2 Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

*3 Adjustable when "Custom" of Picture Mode is activated.

Audio settings

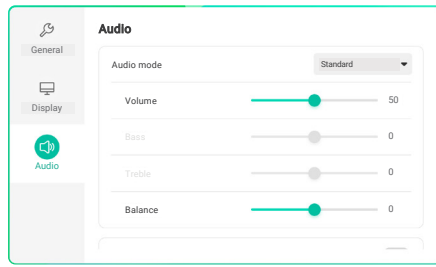

Adjustment Item	Problem / Option		Button to Press
Audio Mode	Standard	Standard	
	Meeting	Sound quality suitable for the conference.	
	Class	Sound quality suitable for the classroom.	
	Custom	Custom sound quality.	
Volume Direct	Too soft		⬅️ ➡️
	Too loud		⬅️ ➡️
Bass	Too weak		⬅️ ➡️
	Too strong		⬅️ ➡️
Treble	Too weak		⬅️ ➡️
	Too strong		⬅️ ➡️
Balance	Left side speaker louder		⬅️ ➡️
	Right side speaker louder		⬅️ ➡️
Mute Direct	○	Return the sound volume to the previous level.	
		Turn off the sound.	

[Debug Menu] * Available for Remote Control only. Input + 2580

- **Initial Touch Panel**

The default settings will be restored.

- **Unknown sources: On / Off**

Enables / disables Unknown sources.

- **iiWare Enable: On / Off**

Enables / disables Kiosk mode.

- **HDMI OUT Enable: On / Off**

Enables / disables HDMI OUT function.




- **HDMI IN OUT Enable: On / Off**



Enables / disables "HDMI OUT Enable" when input source is HDMI.


- **Exit**

[Application]

■ Settings


Click  on the display screen,  on the navigation toolbar or pull down the screen menu with the touch pen. Then, click  with the touch pen.

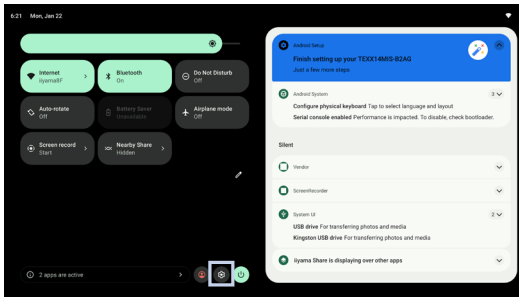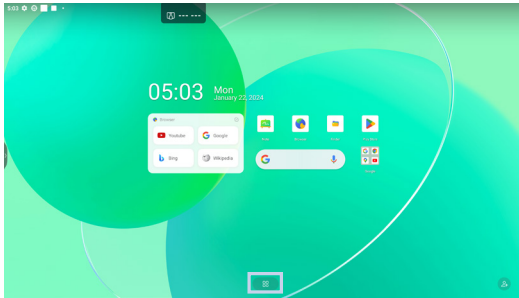


 xxxxxx :

When connecting a LAN or Option WiFi module, the password for a notebook or a smartphone, etc. to connect to iiyama Share, is displayed on the screen. (Automatically generated)

 : Click to display the All Apps.

 : Click to display the iiyama Account.

Adjustment Item	Problem / Option		
Network & internet	Internet	Wi-Fi ^{*1,2}	Set the WiFi function On / Off and pairing to WiFi device.
		Network preferences	Turn on Wi-Fi automatically / Notify for public networks / Install certificates / Wi-Fi Direct
		Saved networks	Save wifi networks on this monitor.
		Non-carrier data usage	The data consumption on the monitor that does not occur through the carrier's network.
	Ethernet	Set the wired network. Ethernet : On / Off, Local network setting, IP address, Default gateway, Netmask, DNS, Proxy, MAC address	
	Airplane mode	Disables all wireless communications on the monitor.	
	Hotspot & tethering	Wi-Fi hotspot ^{*1,2}	Set the Hotspot and tethering function. Use Wi-Fi hotspot: On/Off, Hotspot Name, Security, Hotspot password, Extend compatibility: On/Off
	Data Saver	Reduces data consumption on the monitor. Use Data Saver : On / Off, Unrestricted data	
VPN	Set the VPN.		
Private DNS	Select Private DNS Mode. Off / Automatic / Private DNS provider hostname		
Connected devices	Pair with multiple devices or select from saved pairings. Other devices / Saved devices		
	Connection preferences	Set preferences for various connectivity options. Bluetooth / NFC / Cast / Android Beam / Printing / Nearby Share	
Apps	Application management Default apps, Screen time, Unused apps, Special app access		
Notifications	App settings	Disable / Enable the notifications from each app.	
	Notification history	Display recent notifications and snoozed notifications.	
	Conversations	Display the conversations labeled with priority or modified.	
	Bubbles	Display the conversations as floating icons on top of other apps.	
	Device & app notifications	Control which apps and devices can read notifications.	
	Notifications on lock screen	Set the notifications displayed on the locked screen of the monitor.	
	Sensitive notifications	Show sensitive content when locked.	
	Do not disturb	Disable / Enable the interruption function.	
People		Set people, apps, alarm and other interruptions causing disturbance not to display notifications.	
Apps			
Alarms & other interruptions			
Schedules	Disable / Enable interruption function during sleeping mode and events.		

Adjustment Item	Problem / Option		Button to Press	
Notifications	Do not disturb	Duration for Quick Settings	Set the duration for the "Do Not Disturb" mode to remain active. (Until you turn off / For 1 hour / Ask every time)	
		Display options for hidden notifications	Choose the display method for hidden notifications. (No sound from notifications / No visuals or sound from notifications / Custom)	
	Wireless emergency alerts	Disable / Enable to receive critical emergency alerts.		
		Extreme threats	Receive the emergency alerts for extreme threats and severe threats.	Severe threats
		AMBER alerts		Receive the emergency alerts for missing children.
		Test alerts	Receive carrier tests and monthly tests from the safety alert system.	Emergency alert history
		Alert reminder	Set the reminders for emergency alerts. (Once / Every 2 minutes / Every 15 minutes / Never)	Hide silent notifications in status bar
		Allow notification snoozing	Disable/Enable to hide notifications marked as "silent" from appearing in the status bar.	Notification dot on app icon
		Enhanced notification	Disable / Enable the temporary dismissal of notifications for a specific period, after which they will reappear.	Storage
	Do not Disturb	Disable / Enable the addition of a small dot to the app icons on your home screen, indicating unread notifications for those apps.	Media volume	
Enhanced notification	Disable / Enable to receive suggested actions, replies, and more.	Call volume		
Storage	Display and adjust the device storage. Storage manager, Free up space			
	Media volume			
Sound	Call volume	Too soft		
	Alarm volume	Too loud		
	Notification volume		Do not Disturb	
	Do not Disturb	(Please refer to the "Do not Disturb" setting in the "Notifications" options.)	Live Caption	
	Live Caption	Detects speech on your device and automatically generates captions. Languages, Hide profanity, Show sound labels, Live Caption in volume control	Media	
	Pin media player	Disable / Enable for quick resumption of playback, as the media player remains accessible in the Quick Settings menu.		
	Show media recommendations		Show media recommendations	Disable / Enable the display of media content recommendations based on your usage patterns and preferences.

Adjustment Item	Problem / Option		
Sound	Default notification sound	Select the sound that will play for notifications by default.	
	Default alarm sound	Select the sound that will play for alarm by default.	
	Screen locking sound	Disable / Enable the sound that plays when the screen is locked.	
	Touch sounds	Disable / Enable the sounds that play when you touch the screen.	
	Audio output channel	Audio output channel	Set the Audio output channel. Speaker / Line out / Mixed
		Mic	Set the microphone input. AUTO / OFF / USB-Audio-Touch Device
		Input source naming	Input Alias Switch : On / Off Change the Input name to Nickname.
		HDMI OUT format	3840 × 2160_60Hz / 1080P_60Hz / 480P_60Hz / AUTO
		TypeC OUT format	3840 × 2160_60Hz / 1080P_60Hz / 480P_60Hz / AUTO
	Display	Lock screen	Set the information or features displayed on the lock screen. Privacy, Addusers from lock screen, Add text on lock screen, Show wallet, Show device controls, Control from locked device, Double-line clock
Screen timeout		Set the Screen timeout duration. (15 seconds / 30 seconds / 1 minute / 2 minute / 5 minute / 10 minute / 30 minute / Never)	
Dark theme		Use Dark theme	Disable / Enable the dark theme mode for the display interface.
		Schedule	Set when the dark theme mode is activated. (None / Turns on at custom time / Turns on from sunset to sunrise)
Display size and text		Set the font and display size.	
		Bold text	Disable / Enable bold text.
		High contrast text	Disable / Enable high contrast text.
		Reset settings	Display size and text settings will be restored to factory-preset data.
Screen saver		Disable / Enable Screen saver. Clock / Colors / Landscape / Photos	
		Screen saver	Set the Screen Saver duration. (Never / 15 min / 30 min / 60 min / 90min)
Eye protection mode		Disable / Enable Eye Protection Mode.	
Auto backlight		The brightness of the backlight decreases automatically.	
Pixel shift		Set the interval of Pixel Shift function. (Off / 2 mins / 3 mins / 5 mins / 30 mins / 60 mins)	
Wallpaper	Set the Wallpaper.		

Adjustment Item	Problem / Option			
Wallpaper	Dark theme	Disable / Enable the dark theme mode for the display interface.		
	Themed icons	Disable / Enable the use of themed icons.		
Accessibility	Accessibility Menu	Accessibility Menu shortcut	Disable/Enable the "Accessibility Menu shortcut".	
		Settings	Large buttons : Disable/Enable to increase the size of the icons in the Accessibility menu.	
	OCR-INPUT	Use OCR-INPUT	Disable / Enable OCR input.	
		OCR-INPUT shortcut	Disable / Enable the "OCR-INPUT shortcut".	
	Select to speak	Select to Speak shortcut	Disable / Enable the "Select to Speak shortcut".	
		Settings	Text to speech settings, Disable / Enable (Read in background / Read text on images)	
	TalkBack	Use TalkBack	Disable / Enable TalkBack.	
		TalkBack shortcut	Disable / Enable the "TalkBack shortcut".	
		Settings	Adjust TalkBack settings.	
	Display size and text	(Please refer to the "Display size and text" setting in the "Display" options.)		
	Color and motion	Color inversion	Disable / Enable (Color inversion / Color inversion shortcut).	
		Dark theme	(Please refer to the "Dark theme" setting in the "Display" options.)	
		Color correction	Disable / Enable Color correction. Red-green / Red-green / Blue-yellow / Grayscale Disable / Enable the "Color correction shortcut".	
		Remove animations	Reduce movement on the screen.	
		Large mouse pointer	Make the mouse pointer more noticeable.	
	Magnification	Magnification shortcut	Disable / Enable the "Magnification shortcut".	
		Magnification type	Select how to magnify. Magnify full screen / Magnify part of screen / Switch between full and partial screen	
		Magnify typing	Magnifier follows text as you type.	
	Timing controls	Touch & hold delay	Sets the duration required for a tap on the screen to be recognized as a touch & hold action. (Short / Medium / Long)	
		Time to take action (Accessibility timeout)	Select the duration for displaying temporary messages prompting you to take action. (Default / 10 seconds / 30 seconds / 1 minute / 2 minutes)	



Adjustment Item	Problem / Option			
Accessibility	Timing controls	Autoclick (dwell timing)	Set the cursor to take action automatically when the cursor remains stationary for a specified duration. (Autoclick off / short / Medium / Long / Custom)	
	System controls	System navigation	Set how you navigate the system. (Gesture navigation / 3-button navigation / Traditional navigation)	
	Live Caption	Use Live Caption	Disable / Enable Live Caption.	
		Settings	Languages, Disable / Enable (Hide profanity / Show sound labels / Live Caption in volume control)	
	Caption preferences	Show caption	Disable / Enable Caption.	
		Caption size and style	Set captions size and style.	
		More options	Set captions language.	
	Audio description	Disable / Enable Audio description.		
	Audio adjustment	Mono audio	Disable / Enable Mono audio.	
		Audio balance	Adjust the balance between left and right audio channels on sound devices.	
	Accessibility shortcuts	Accessibility button	Quickly access accessibility features. Location / Size / Fade when not in use / Transparency when not in use	
		Shortcut from lock screen	Disable / Enable shortcut to access features from the lock screen.	
	Text-to-speech output	Set the preferred engine, language, speech rate and pitch.		
	Startup & shutdown	Startup source	Last shutdown channel / PC ⁺ / iiWare / HDMI1 / HDMI2 / HDMI3 / HDMI4 / DP / Type-C1 / Type-C2	
		Standby (Black screen) after startup	Turn off the backlight. NOTE Press the Screen Off button on the remote control or touch the screen to return to the screen.	
Auto standby		Enable the Auto standby function. (Never / 15 mins / 30 mins / 60 mins / 90mins / 120 mins)		
Auto shutdown		Enable the Auto shutdown function. (Never / 30 mins / 60 mins / 90mins / 120 mins / 240 mins) NOTE The Auto shutdown function is enabled as default setting. The monitor turns off automatically 4 hours after the key or touch operation stops. Disable Auto shutdown function when you use the monitor continuously for more than 4 hours.		
No Signal Power Off		Enable the No signal power off function. (Off / 1 min / 3 mins / 5mins / 10 mins / 15 mins / 30 mins / 45 mins / 60 mins)		

Adjustment Item	Problem / Option		
Accessibility	Startup & shutdown	Startup / shutdown task	Select the time of each, and select day of the week or everyday or the business days.
		Ask before shutting down	Disable/Enable prompt for confirmation before initiating a shutdown.
Security	Google Play Protect	Scans all apps for harmful software, ensuring the security of your device.	
	Find My Device	Use the web to locate, ring, or remotely wipe your device.	
	Security update	Android security update	
	Screen lock	Choose the method to unlock your screen.	
	More Security settings	Smart Lock, Device admin apps, Encryption & credentials, Trust agents, App pinning	
Privacy	Privacy dashboard	Review privacy settings and manage privacy preferences.	
	Permission manager	Set app permissions.	
	Show passwords	Disable / Enable display password feature.	
	Notifications on lock screen	Select how notifications are displayed on lock screen.	
	Android System Intelligence	Configure Android System Intelligence. Device learning, Keyboard, Clear data	
	App content	Disable / Enable apps to send content to the Android system.	
	Show clipboard access	Disable / Enable showing a message when apps access text, images, or other content you have copied.	
	Autofill service from Google	Disable / Enable Autofill service.	
	Activity controls	Choose the activities and info you allow Google to save.	
	Ads	Manage ads personalization. Reset advertising ID, Opt out of Ads Personalization, Ads by Google	
	Usage & diagnostics	Disable / Enable Usage & diagnostics.	
Location	Use location	Disable / Enable location services.	
	App location permissions	Set App location permissions.	
	Location services	Earthquake alerts, Emergency Location Service, Google Location Sharing, Wi-Fi scanning, Bluetooth scanning	
	Country & region	Set country and region.	
Safety & emergency	Medical information	Set personal medical information for preventing emergencies. Name, Blood type, Allergies, Medications, Address, Medical notes, Organ donor	
	Emergency contacts	Specify contacts to be contacted in an emergency.	

[ Settings]

Adjustment Item	Problem / Option		
Safety & emergency	Emergency SOS	Set up Emergency SOS to quickly initiate an emergency call or signal for help.	
	Crisis alerts	Disable / Enable receiving notifications about critical situations.	
	Emergency Location Service	Disable / Enable the emergency services to access location from the device.	
	Earthquake alerts	Disable / Enable receiving notifications about earthquakes.	
	Wireless emergency alerts	(Please refer to the "Wireless emergency alerts" setting in the "Notifications" options.)	
Passwords & accounts	Set accounts and passwords.		
	Automatically sync app data	Disable / Enable automatic synchronization of app data.	
Digital Wellbeing & parental controls	Display a daily summary of your device usage and app activity frequency.		
	Dashboard	Customize the settings of Bedtime mode and Focus mode.	
	Bedtime mode		
	Focus mode		
	Manage notifications	Customize notifications and control interruptions.	
	Do not Disturb		
	Heads Up		
	Show icon in the app list	Add content restrictions and set other limits to help your child balance their screen time.	
Parental controls			
Google	Access settings related to Google services. Ads, Autofill, Backup, Devices & sharing, Find My Device, Parental controls, Personalize using shared data, Set up & restore, Settings for Google apps		
Advanced	Date format	Select the Date format.	
	Country & region	The region setting ensures that your router will only let you use the wifi channels valid in your location.	
	Input & output	(Please refer to the "Audio output channel" setting in the "Sound" options.)	
	OS update	Check and update to latest Windows OS.	
	Show Android status bar	Disable / Enable Android status bar.	
	Pen type	Select the type of stylus.	
	Startup & shutdown	(Please refer to the "Startup & shutdown" setting in the "Accessibility" options.)	
	Display	(Please refer to the setting in the "Display" options.)	
	Multi-Windows mode	Set the Multi-Window mode On/Off.	
		Window control bar *4	Set the position of the window control bar. (On top / Left side / Right side)
Show multi-window tips *4		Disable / Enable Multi-window Tips.	


Adjustment Item	Problem / Option			
Advanced	Gesture	Five fingers control	Customize the settings to enable the touch gestures function. (Slide left / Slide right / Slide up / Slide down / Slide shrink / Slide spread)	
		Camera gesture control	Customize the settings to enable the Camera gestures function.	
	Email	Set the Email. Email Settings, Logout Email Account		
Administrator	Enable Administrator	Grant or revoke administrative privileges for specific apps or services on the device.		
	Change administrator password	Reset administrator password.		
	Wake On Lan	Set the Wake On Lan function On/Off.		
	HDMI CEC	Set the HDMI CEC function On/Off.		
	Wake On Active Source	Set the Wake On Active Source function On/Off.		
	USB clone	Import	Import from signage folder under USB/SD. USB storage / SD card	
		Export	Export to signage folder under USB/SD. USB storage / SD card	
	Default startup item	Select Startup Item (None / Browser URL / Browser / Calculator / Calendar / Camera / Chrome / Clock / Cloud Drive / Contacts / Drive / Finder / Gmail / Google / Google TV / iiyama account / iiyama DMS / iiyama Share / Keep Notes / Keeper / Map / Meet / Note / Palette / Photos / PIP / Play store / Safty / Settings / Visualizer / YouTube / YT Music)		
Auto remove files	Storage period (None / 1day / 7days / 30days) Type of removed file (Video / Audio / Images / Documents / Other files)			
Security lock	Disable / Enable (Settings Lock / Network Lock / USB Lock / Unknown Source* ⁵)			
System	Languages & input	Languages	Set display language, keyboard and input method.	
		App Languages	Language: Català / Čeština / Dansk / Deutsch / Eesti / English / Español / Français / Italiano / Latviešu / Lietuvių / Magyar / Nederlands / Norsk Bokmål / Polski / Suomi / Svenska / Русский / Українська	
		On-screen keyboard		
		Physical keyboard		
		Voice input	Set Voice input.	
		Text-to-speech output	Set the preferred engine, language, speech rate and pitch.	
		Spell checker	Disable / Enable Spell checker. Languages, Default spell checker	
		Personal dictionary	For all languages, Chinese (China), English (United States), Japanese	


Adjustment Item	Problem / Option		Button to Press
System	Languages & input	Pointer speed	Too slow  Too fast 
	Gestures	System navigation	Set how you navigate the system. (Gesture navigation / 3-button navigation / Traditional navigation)
		Press and hold power button	Disable / Enable the feature to activate the assistant.
		Five fingers control Camera gesture control	(Please refer to the "Gesture" setting in the "Advanced" options.)
	Date & time	Set the Date and Time. Date, Time, Use location to set time zone, Time zone, Use locale default, Use 24-hour format, Date Format	
	Backup	Back up the data with Google one.	
	System update	Check and update to latest FirmWare version.	
	Multiple users	Manage multiple users and guest.	
	Reset options	Reset Wi-Fi, mobile & Bluetooth, Reset app preferences, Erase all data (factory reset)	
	OS update	(Please do the OS update in the Advanced settings.)	
About	Main info in About: Legal Information / Model / Serial number / Android Version / iiWare Version / IP address / Wi-Fi MAC address / Device Wi-Fi MAC address / Bluetooth address / Up time / Build number Automatically search update .zip from USB or SD card. When you select the updated .zip file, the monitor will restart and the update will start.		

- *1 WiFi, Hotspot and Bluetooth can only be used when Option WiFi Module or Slot-PC is installed.
- *2 WiFi will be turned off when the Ethernet is turned on.
- *3 Available only when Option Slot-PC is installed.
- *4 Only available for Multi-Window Mode enable. See page 42 for more details.
- *5 APK from unknown sources can be installed, the installation is done on customer own risk, manufacture will not take any responsibility and not give any support for the installed APK's. Input + 2580 (Debug Menu : Unknown sources)

■ Navigation toolbar appears

The navigation toolbar can be displayed on either left side or right side of the screen.


 : Back

 : Home

 : Back Stage

Clean all : Remove all in-progress apps


- Application -

 : All Apps (Browser, Calculator, Calendar, Camera, Chrome, Clock, Cloud Drive, Contacts, Drive, Finder, Gmail, Google, Google TV, iiyama Account, iiyama DMS, iiyama Share, Keep Notes, Keeper, Maps, Meet, Note, Palette, Photos, PIP, Play Store, Safety, Settings, Visualizer, YouTube, YT Music)

- Tools -

You can customize up to 4 tools from "More" to the navigation bar.

(Click Edit in the "More" window or press and hold the icon. And add/remove to from the navigation bar by clicking the "+" / "-" displayed on the icon.)

 : Mark

Pen: Annotate

Brush: Marker

Clean: Clean the annotations, Gesture eraser

Save: Save current annotations in the screen content to picture in the storage.

Finder: Short cut to the folder of Finder.

Insert: Insert the picture (complete screen image) to Note.

Share: Share Annotation

Users can scan the QR code with a smartphone and download the annotation image to a smartphone.

Cloud: Google Drive / One Drive

Save to Cloud Drive

Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account


When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive.


Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re) name the file.

Close: Exit

 : Menu

 : More (All tools)

 : Timer (CountDown)


 : Freeze (Freeze the picture)

Zoom +


Zoom -


Full-screen


Close: Exit

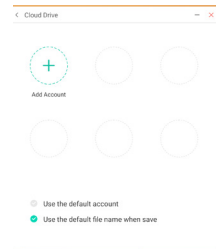


 : StopWatch

 : SpotLight
Setting: Zoom / Clarity
Exit

 : Screen Lock (Lock/unlock the screen)
Lock / unlock is possible by setting "Lock Screen Password" in Settings.

 : Crop (Screen Capture)
Freedom size
Full size
Window size
Save: Save in internal storage
Insert: Edit the captured image in Note, send to Note
Exit


 : AirClass(WiFi Teamwork)
(Available when the optional WiFi Module OWM002/SI07 is installed or with a working LAN connection. Participants need to be on the same network.)
Voter / Responder / Selector / Message / Manager / Exit


 : Record
Screen Recording

 : PC (Select the PC input)

 : Calculator

 : PIP (Display the sub screen in the main screen)

 : Display center
Duplicate: Make the content of the primary monitor to be duplicated on multiple displays simultaneously
Extend: The desktop to be extended across multiple displays
(See page 44 for more details)

 : iiyama Share
iiyama Share is a multi-screen interaction software for smartphone to interactive intelligent panel. (The device such as a computer or smartphone on the same network.)
Mirroring: It is an application that displays the screen of a device such as a computer or smartphone on the monitor.
Desktop Sync: It is an application that can control the screen of Monitor by displaying it on a device such as a computer or Smartphone.
Remote: It is an application that allows to remotely control the monitor on a smartphone. The Smartphone works as a Mouse/Touchpad for the screen.
Airplay/Chromecast: The device without installed iiyama Share app can still connect to iiyama Share via Airplay/Chromecast. (Compatibility is not guaranteed)
Miracast: The device without installed iiyama Share app can still connect to iiyama Share via miracast. (Compatibility is not guaranteed)

 : Adjust the Brightness.

 : Adjust the Volume.

■ Shortcut*

- App -
Drag and drop the App icon from "All apps" to create a shortcut icon on the screen.
- File / Folder -
Drag and drop a File or Folder from the Finder to create a shortcut icon on the screen.
- Website -
Create a shortcut by opening the desired website and clicking "Send the quick-link to Desktop" in the settings menu.
- Move -
Move by long-pressing the icon and dragging and dropping.
- Remove -
Remove it by long-pressing the icon and clicking Remove from the menu.


* Available after login in iiyama account.


■ Multi-Windows

To use the Multi-Windows feature, first turn on Settings > Advanced > Multi-Windows Mode.

- Resize Windows to display 4 apps on the screen at the same time.
- Drag content between apps.
Press and hold the image on the browser and drag the image to NOTE.
<Support>
Image : NOTE, Finder
Text : NOTE, Finder



<How to use AirClass>

- 1 The teacher click the  AirClass.
- 2 Use the device to scan the QR code. (device: Android and mobile device on the same network) The students can also join the class by entering the URL in browser.
- 3 After all students have joined the class, click "ENTER THE CLASS".

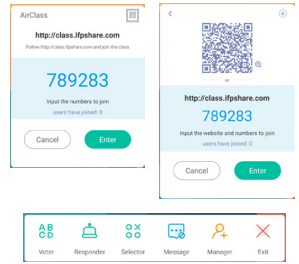


4 Answer

1. The teacher write a question on the note and click the Voter.
2. The teacher select Single Choice Mode or Multiple Choice Mode.
3. The number of students who are logged in is displayed. Then click BEGIN.
4. After the student submitted the answer, the teacher can click "Finish", and the answer's statistics data will be shown on the screen.
5. Teacher selects the correct answer on the screen; the correct answer will be green coloured, and the wrong answer will be red coloured.

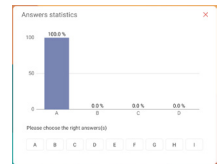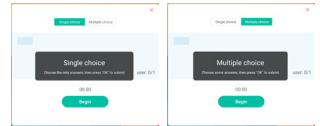


5 Responder

After teacher clicks the Responder. The 1st student who clicks the "Be Fast" icon the Notebook/Smartphone will be selected.

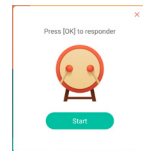


6 Selector

The teacher can click on the Selector to randomly select one student to answer the questions.

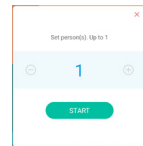

7 Message

 1. The teacher can enable the Message function to allow students' messages be presented on the screen.
2. The students write their own opinions on their Notebook or Smartphone and click to Send.



8 Manager


The teacher can click the Manager to display the QR code to let other students to enter the class at any time.

<How to use Display center>

- 1 Click the  Display center.

This function is to identify the connection to external monitor with HDMI OUT or Type C OUT.

- 2 Pop-up window.

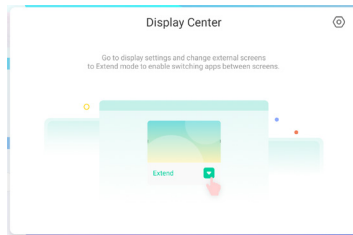



- 3 Display settings

Manager:

Choose your desired modes for multi-monitor displays : Duplicate or Extend.

Layout:


Press and hold (or click) the display, then drag to rearrange the position.

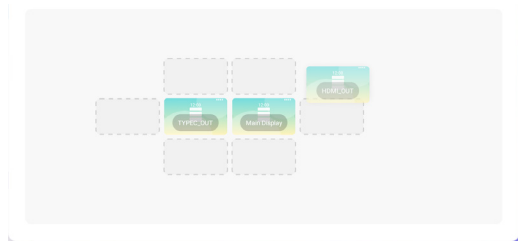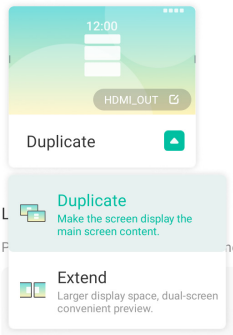

- 4 Extend Mode

App toggle:

Select a background app and move to a monitor to use the app on that monitor.

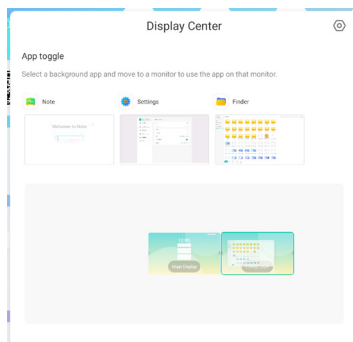

[Note]

This is a writing software.

Can write the characters, Lines and pictures like a whiteboard. Also, can insert an image or file.

Click  with the touch pen.

- Tools -

Menu: Display menu of Note.

New: Save the Note writing and open a new Note.

Open: Open the file.

Save: Save the current document to image format to file browser.

Save as: Save the current document to a new location with the same name or a different title.

Import: Import the picture. (IMG/PDF/SVG)

Export : Export as IMG/PDF/SVG/IWB.

Cloud Storage: Google Drive / One Drive

Save to Cloud Drive

Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account

When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive.

Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re)name the file.

Theme: Change the color of the background.

Send Email: Send the captured image by Email.

Settings:

Eraser mode: Eraser / Erase selection

Palm rejection disabled/enabled:

Enabled: When enabled, ignores the palm resting on the screen.

Multi-finger writing disabled/enabled:

Multi-finger is allowed when turned on, and multi-finger is preview when turned off.

Automatic brightness disabled/enabled:

Enabled: Reducing the brightness automatically when writhing the Note.

Customise toolbars: You can customize the toolbar by choosing tool from "Customize toolbar"

Exit: Return to main screen.

Share: Share Note

Users can scan the QR code with a smartphone and download the annotation image to a smartphone.

List: List up all the opened Notes.

Select: Select the object being edit, can move, can zoom.


Pen: Customize the color of your pen while handwriting.

Change the width and color of the stroke. (Pen/Handwriting size/Handwriting color)

Eraser: Erase the specified object.

Clean All: Erase the all object.

Ruler: Ruler function

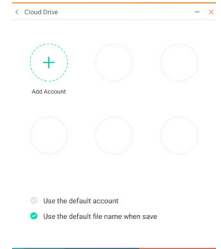

Shape: Draw the shape.

Table: Table creation

Mind map: Visual thinking tool

Sticky-Notes: Brainstorming tool

Preview: Display image

Grid: Grid notes tool

Undo: Cancel

Redo : Redo

Add: Add new page after the last page.

< : To the previous page.

> : To the next page.

2/7 : Page number

- Extension function of the pen -

After selecting the handwriting, the handwriting can be turn to intelligent text and for further processing.

Tools : Color, Smartwrite, Search, Flip, Top, Clone, Delete


- Image expansion function -

After selecting the image, the image can be transformed into vector image, and the image can be mirrored.

Tools : Crop, SVG, Flip, Top, Clone, Delete

[Finder (File Browser)]

Click  with the touch pen.

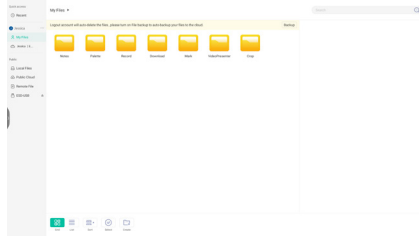

Browse the files stored in the internal storage device, the USB storage, Public Cloud, Remote File and your Cloud storage.

● Supported Format

DOC : PPT, Word, Excel, PDF (Open the file by using the WPS Office)


Note : Note files, screenshot


Movie : .3g2 .3gp .avi .flv .f4v .mkv .mov .mp4 .VOB .mpg/MPEG .ts

Picture : .jpg .jpeg .png .bmp .gif

Music : .aac .ape .flac .m4a .mp3 .ogg .wav

- Tools -

 : Search

 : Minimization

 : Maximization / restoration

 : Exit

 : Grid

 : List

 : Sort (Sorts Name, Time, Size, Type.)

 : Select

 : Select All

 : Cancel

 : Create

 : New Win

 : Copy

 : Paste

 : Cut

 : Delete

 : Rename

 : Send

My Files

"My files" folder will be created in your OneDrive or Google Drive once connected to your iiyama account.

Public Cloud (Google Drive / One Drive)

Save to Cloud Drive


Users can save notes and annotations in Note directly to one of the cloud drives by clicking on the Cloud Storage icon in the menu. To change the way files are saved to the Cloud Drive, users can select two options in the cloud storage overview.

Use the default account

When checked, all notes will be saved automatically to the default Cloud Drive. Users will not be able to select a cloud drive.

Use the default file name when save

When checked, all notes will be saved to the selected Cloud Drive with the default file name. Users will not be able to (re)name the file.

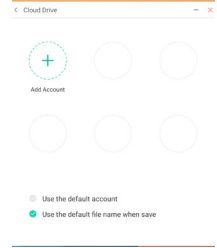


Remote File

Support access to SAMBA(SMB1.0) and FTP server.


[Browser (Web Browser)]

Connect the network, and browse the web.

Click  with the touch pen.


[Camera]

Take photos and record videos.

Click  with the touch pen.

[Clock]

Set alarms, check the time, and use a stopwatch and timer.

Click  with the touch pen.

[Cloud Drive]

Connect the network, and the Cloud Drive.

Click  with the touch pen.

[Contacts]

Manage phone numbers, emails, and addresses.

Click  with the touch pen.

[iiyama Account]

This is a single sign-on authentication scheme for customer identity and access management.

Click  with the touch pen.

[iiyama DMS]

This software provides organizations with a convenient and fast unified management solution for terminal equipment, builds an efficient and real-time equipment management system, helps digitize the campus environment and makes campus management more convenient.

Click  with the touch pen.

[iiyama Share]

This is the software that can wirelessly share the screen with other notebook etc..

Click  with the touch pen.

[Keeper]

This is the software to clean up the running application.

Double click  with the touch pen.

One Key Optimize : Memory and Garbage clean

Memory Clean : Clean memory

Garbage Clean : Clean storage


[Palette]

This is an illustration writing software.

Click  with the touch pen.

[Visualizer]


Visualizer is an app that allows users to connect webcam or visualizer(document camera) for capturing live instructions or physical materials and then projecting them onto a display for viewing and annotating.

Click  with the touch pen.

STANDBY FEATURE

■ Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to red. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

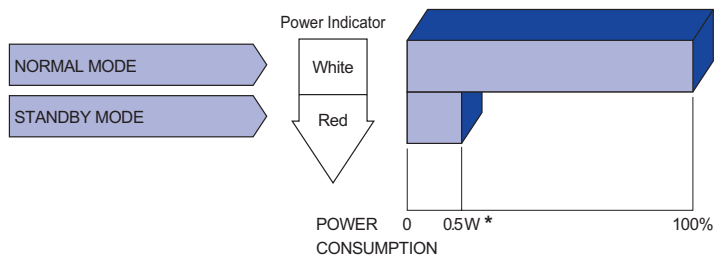

* When the USB devices are not connected.

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem	Check
① The picture does not appear. (Power indicator does not light up.) (Power indicator is white.) (Power indicator is red.)	<input type="checkbox"/> The Power Cable is firmly seated in the socket. <input type="checkbox"/> The Power Switch is turned ON. <input type="checkbox"/> The AC socket is live. Please check with another piece of equipment. <input type="checkbox"/> If the blank screen saver is in active mode, touch the keyboard or the mouse. <input type="checkbox"/> Increase the Contrast and/or Brightness. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the display. <input type="checkbox"/> If the monitor show "No Signal", touch the keyboard or the mouse. <input type="checkbox"/> The computer is ON. <input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the display.
② The screen is not synchronized.	<input type="checkbox"/> The Signal Cable is properly connected. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
③ The screen position is not in the center.	<input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
④ The screen is too bright or too dark.	<input type="checkbox"/> The video output level of the computer is within the specification of the monitor.
⑤ The screen is shaking.	<input type="checkbox"/> The power voltage is within the specification of the monitor. <input type="checkbox"/> The signal timing of the computer is within the specification of the monitor.
⑥ No sound.	<input type="checkbox"/> The audio equipment (computer etc.) is ON. <input type="checkbox"/> The Audio Cable is properly connected. <input type="checkbox"/> The Volume is turned up. <input type="checkbox"/> The Mute is OFF. <input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑦ The sound is too loud or too quiet.	<input type="checkbox"/> The audio output level of the audio equipment is within the specification of the monitor.
⑧ A strange noise is heard.	<input type="checkbox"/> The Audio Cable is properly connected.

Problem

- ⑨ The touch screen shows no response.
- ⑩ The touch position does not deviate.

Check

- The USB Cable is firmly seated in the socket.
- Touch screen driver software is installed.
- The calibration function set up correctly.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor.
Please visit our web site: <https://iiyama.com> for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite TE8614MIS-B2AG

Touch Screen	Technology	Android: 40points touch Windows: 50points touch
	Light transmission	92%
	Hardness	7H
	Thickness	3mm
	Communication system	USB serial transfer
	Response time	≤2.5ms
Size Category		86"
LCD Panel	Panel technology	VA
	Size	Diagonal: 85.6" (217.43cm)
	Pixel pitch	0.4935mm H × 0.4935mm V
	Brightness	400cd/m ² (Typical: with Glass), 435cd/m ² (Typical: without Glass) 325cd/m ² (Default / Energy Saving)
	Contrast ratio	4000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	6.5ms (Typical, Gray to Gray)
Display Colors		Approx.1.07B
Sync Frequency		HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Supported max. resolution		HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz
Input Connector		HDMI ×4, DisplayPort ×1, USB-C ×2
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A
Input Audio Connector		ø 3.5mm mini jack (Stereo)
LAN		RJ45 ×2 (in/out)
Serial Port		RS-232C In
Input Sync Signal		Separate sync: TTL, Positive or Negative
Input Video Signal		HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)

Input Audio Signal	2.0Vrms maximum
Output Connector	HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz
SPDIF out Connector	SPDIF
Output Audio connector	ø 3.5mm mini jack (Stereo)
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)
iiWare Version	V12E (Android 13 OS)
Maximum Screen Size	1895.0mm W × 1066.0mm H / 74.6" W × 42.0" H
Power Source	100-240VAC, 50/60Hz, 6.0A
Power Consumption*2	267W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions / Net Weight	1957.0 × 1171.0 × 86.0mm / 77.0 × 46.1 × 3.4" (W×H×D) 63.6kg / 140.1lbs
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals	CE, UKCA, EAC, TÜV-Bauart

NOTE *1 Only available when the OPS is unplugged; otherwise it will back to 65W.
It needs a full-function type C-C cable with EMARK certification.

*2 When the USB devices are not connected.

SPECIFICATIONS : ProLite TE7514MIS-B2AG

Touch Screen	Technology	Android: 40points touch Windows: 50points touch
	Light transmission	92%
	Hardness	7H
	Thickness	3mm
	Communication system	USB serial transfer
	Response time	≤2.5ms
Size Category		75"
LCD Panel	Panel technology	VA
	Size	Diagonal: 74.52" (189.3cm)
	Pixel pitch	0.42975mm H × 0.42975mm V
	Brightness	400cd/m ² (Typical: with Glass), 435cd/m ² (Typical: without Glass) 280cd/m ² (Default / Energy Saving)
	Contrast ratio	5000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	8ms (Typical, Gray to Gray)
Display Colors		Approx. 1.07B
Sync Frequency		HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Supported max. resolution		HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz
Input Connector		HDMI ×4, DisplayPort ×1, USB-C ×2
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A
Input Audio Connector		ø 3.5mm mini jack (Stereo)
LAN		RJ45 ×2 (in/out)
Serial Port		RS-232C In
Input Sync Signal		Separate sync: TTL, Positive or Negative
Input Video Signal		HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)
Input Audio Signal		2.0Vrms maximum
Output Connector		HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz

SPDIF out Connector	SPDIF
Output Audio connector	ø 3.5mm mini jack (Stereo)
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)
iiWare Version	V12E (Android 13 OS)
Maximum Screen Size	1650.0mm W × 928.0mm H / 65.0" W × 36.5" H
Power Source	100-240VAC, 50/60Hz, 5.0A
Power Consumption* ²	209W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions / Net Weight	1709.0 × 1031.0 × 86.0mm / 67.3 × 40.6 × 3.4" (W×H×D) 51.5kg / 113.4lbs
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals	CE, UKCA, EAC, TÜV-Bauart

NOTE

*¹ Only available when the OPS is unplugged; otherwise it will back to 65W.

It needs a full-function type C-C cable with EMARK certification.

*² When the USB devices are not connected.

SPECIFICATIONS : ProLite TE6514MIS-B2AG

Touch Screen	Technology	Android: 40points touch Windows: 50points touch
	Light transmission	92%
	Hardness	7H
	Thickness	3mm
	Communication system	USB serial transfer
	Response time	≤2.5ms
Size Category		65"
LCD Panel	Panel technology	VA
	Size	Diagonal: 64.5" (163.9cm)
	Pixel pitch	0.372mm H × 0.372mm V
	Brightness	400cd/m ² (Typical: with Glass), 435cd/m ² (Typical: without Glass) 255cd/m ² (Default / Energy Saving)
	Contrast ratio	4000 : 1 (Typical: without glass)
	Viewable angle	Horizontal : 89 degrees, Vertical: 89 degrees (Typical)
	Response time	6.5ms (Typical, Gray to Gray)
Display Colors		Approx.1.07B
Sync Frequency		HDMI1/2/3/4: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz DisplayPort: Horizontal: 23.97-135.0kHz, Vertical: 24-30Hz USB-C IN: Horizontal: 30.0-135.0kHz, Vertical: 24-60Hz
Native Resolution		3840 × 2160, 8.3 MegaPixels
Supported max. resolution		HDMI1/2/3/4: 3840 × 2160 60Hz (YUV420/RGB444/YUV444) DisplayPort: 3840 × 2160 30Hz USB-C IN: 3840 × 2160 60Hz
Input Connector		HDMI ×4, DisplayPort ×1, USB-C ×2
USB Standard		USB2.0 (DC5V, 500mA) ×1 (for software update) USB3.2 Gen1 (5Gbps, DC5V, 900mA) ×4 (Front: 2, Side: 2) Type C 2 (3.2 Gen1 5Gbps, 5V, 3A / 9V, 3A / 15V, 3A / 20V, 3.25A / 20V, 5A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 100W*) Type C 1 (3.2 Gen1 5Gbps, 5V, 3A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 15W) Type C OUT (3.2 Gen1 5Gbps, 5V, 1A) ×1 (DisplayPort 1.2 ALT mode/Touch/Power Delivery 5W)
Number of USB Ports Connector shape		3 : Type C 2 Upstream : Type B (for touch) 5 Downstream : Type A
Input Audio Connector		ø 3.5mm mini jack (Stereo)
LAN		RJ45 ×2 (in/out)
Serial Port		RS-232C In
Input Sync Signal		Separate sync: TTL, Positive or Negative
Input Video Signal		HDMI, DisplayPort, USB-C 3.1 Gen1 (DisplayPort 1.2)
Input Audio Signal		2.0Vrms maximum
Output Connector		HDMI 3840 × 2160 60Hz USB-C 3840 × 2160 60Hz

SPDIF out Connector	SPDIF
Output Audio connector	ø 3.5mm mini jack (Stereo)
Speakers	Internal: 8W ×2 (Facing forward) + 18W ×2 (Facing upward) (Stereo speakers)
iiWare Version	V12E (Android 13 OS)
Maximum Screen Size	1428.5mm W × 803.5mm H / 56.2" W × 31.6" H
Power Source	100-240VAC, 50/60Hz, 4.0A
Power Consumption* ²	150W (Default / Energy Saving) Standby Mode: 0.5W maximum, Off mode: 0.3W maximum
Dimensions / Net Weight	1488.0 × 908.0 × 86.0mm / 58.6 × 35.7 × 3.4" (W×H×D) 39.0kg / 86.0lbs
Environmental Considerations	Operating: Temperature 0 to 40°C / 32 to 104°F Humidity 10 to 90% (No condensation) Storage: Temperature -20 to 60°C / 4 to 140°F Humidity 10 to 90% (No condensation)
Approvals	CE, UKCA, EAC, TÜV-Bauart


NOTE

*¹ Only available when the OPS is unplugged; otherwise it will back to 65W.

It needs a full-function type C-C cable with EMARK certification.

*² When the USB devices are not connected.

DIMENSIONS : ProLite TE6514MIS

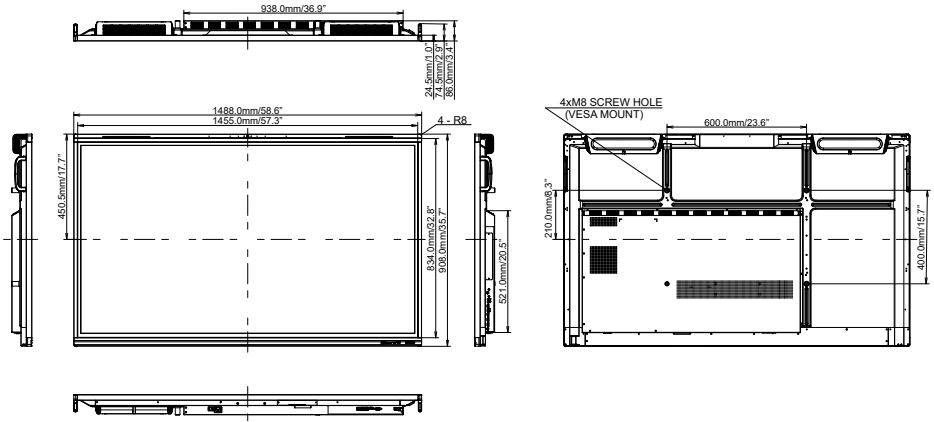

ENGLISH

COMPLIANT TIMING

Timing		fH (kHz)	fV (Hz)	Dot clock (MHz)	HDMI1	HDMI2	HDMI3	HDMI4	DisplayPort	Type C1	Type C2
VESA	VGA 640x480	31.5	60.0	25.175	○	○	○	○	○	○	○
	SVGA 800x600	37.9	60.0	40.000	○	○	○	○	○	○	○
	XGA 1024x768	48.4	60.0	65.000	○	○	○	○	○	○	○
	QVGA 1280x960	64.0	60.0	108.000	○	○	○	○	○	○	○
	SXGA 1280x1024	64.0	60.0	108.000	○	○	○	○	○	○	○
	WXGA 1366x768	47.7	60.0	85.500	○	○	○	○	○	○	○
	CVT 1440x900	55.9	60.0	106.500	○	○	○	○	○	○	○
	UXGA 1680x1050	65.3	60.0	146.250	○	○	○	○	○	○	○
	FHD 1920x1080	67.5	60.0	148.500	○	○	○	○	○	○	○
	2048x1152	70.9	60.0	156.750	○	○	○	○	○	○	○
	2560x1080	66.0	60.0	198.000	○	○	○	○	○	○	○
	2560x1440	88.8	60.0	241.700	○	○	○	○	○	○	○
	2560x1600	98.7	60.0	268.500	○	○	○	○	○	○	○
	3200x1800	111.1	60.0	391.140	○	○	○	○	○	○	○
4K 3840x2160	67.5	30.0	297.000	○	○	○	○	○	○	○	○
	135.0	60.0	594.000	○	○	○	○	○	○	○	○
IBM	720x400	31.5	70.0	28.320	○	○	○	○	○	○	○
SD	480i	60Hz	15.7	60.0	27.000	○	○	○	○	○	○
	576i	50Hz	15.6	50.0	13.500	○	○	○	○	○	○
	480p	60Hz	31.5	60.0	27.000	○	○	○	○	○	○
	576p	50Hz	31.3	50.0	27.000	○	○	○	○	○	○
HD	720p	50Hz	37.5	50.0	27.000	○	○	○	○	○	○
		60Hz	45.0	60.0	74.250	○	○	○	○	○	○
	1080i	50Hz	28.1	50.0	74.250	○	○	○	○	○	○
		60Hz	33.7	60.0	74.250	○	○	○	○	○	○
	1080p	50Hz	56.3	50.0	148.500	○	○	○	○	○	○
		60Hz	67.5	60.0	148.500	○	○	○	○	○	○

* ○ means supported the timing.