

NEO PRIZM T3

MANUAL

BELIEVE IT

www.Antec.com


All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2


©1986 – 2023 Antec Inc. All rights reserved.

1 CONTENTS


140MM FAN

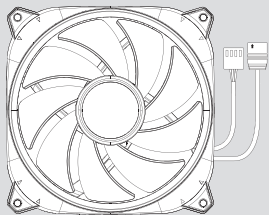


120MM FAN

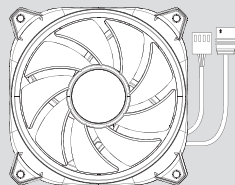


CONTROLLER

 


SCREW

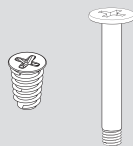

2 FAN INTRODUCTION

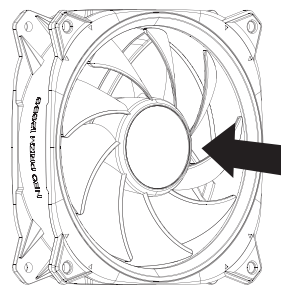


AIR-IN

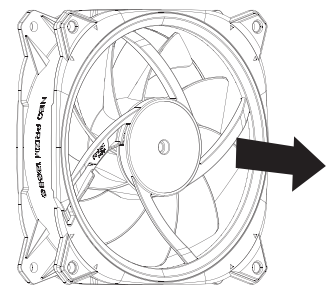


AIR-OUT

3 FAN INSTALLATION


FRONT

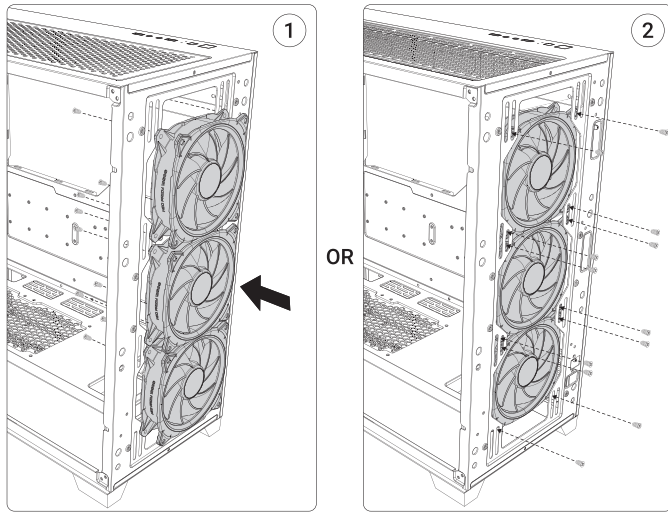


TOP

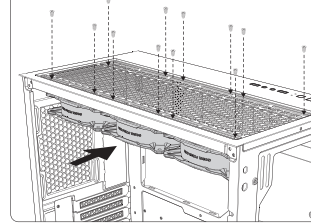

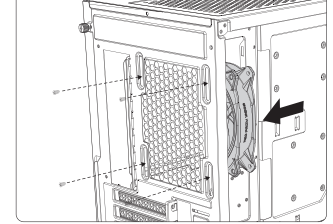


REAR

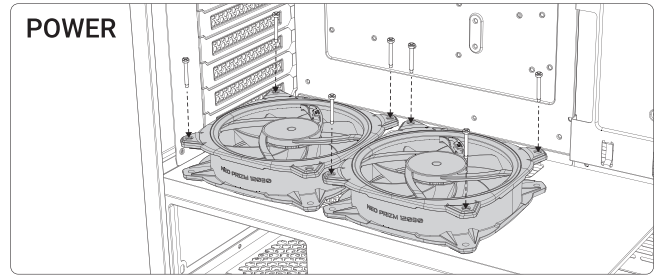

POWER




4 FAN CONNECTION

-  **A** PWM 4-pin header
-  **B** ARGB 3-pin header
-  **C** SATA Connector

OPTION A :

- Connect the PWM 4-pin connector to the fan 4-pin header of the motherboard.
- Connect the ARGB 3-pin connector to the 3-pin ARGB header of the motherboard.

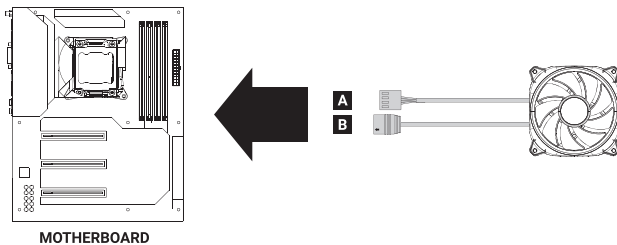

OPTION B :

- Connect the 4-pin PWM & 3-pin ARGB fan connector to the controller.
- Connect SATA connector of the power supply to the controller.
- Connect the controller's 4-pin PWM & 3-pin ARGB connectors to the motherboard.

