

## Remote Cable Tester



### FEATURES

- Automatic Deactivation
- Battery Operated
- Straight or Crossover Indication
- Multiple LED's
- Tests USB, RJ45, RJ11 & BNC
- Separate Module for remote testing

#### Operation Instructions

1. Connect one side of the cable to the main tester unit and the other side of the cable to the remote unit.  
(Remote unit can be separated from the main unit for remote testing)
2. Press the test button on the tester
3. Read the test result status shown on the LED display area.

#### Specification:

1. Open/Short wire testing
2. 9V Alkaline Battery Power
3. Dimensions: 144x86x25.5mm
4. Net Weight: 168g

#### Ordering Information:



Part No.  
87 3551

Description  
Remote Cable Tester (BNC/UTP/USB/RJ11)

