

Contents:

- Elo M50 Mobile Computer
- 18W AC-DC Adapter
- US/EU/UK Adapter plugs



Quick Installation Guide

Elo M50 Mobile Computer

Revision A
P/N E765214

Elo Technical Support

Online self-help: www.elotouch.com/support

America

800-ELO-TOUCH
Tel +1 408 597 8000
elosales.na@elotouch.com

Europe (EMEA)

Tel +32 (0)16 70 45 00
emea.sales@elotouch.com

Asia Pacific


Tel +86 (21) 3329 1385
www.elotouch.com.cn

The information in this document is subject to change without notice. Elo Touch Solutions, Inc. and its Affiliates (collectively "Elo") makes no representations or warranties with respect to the contents herein, and specifically disclaims any implied warranties of merchantability or fitness for a particular purpose. Elo reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Elo to notify any person of such revisions or changes.

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, including, but not limited to, electronic, magnetic, optical, chemical, manual, or otherwise without prior written permission of Elo Touch Solutions, Inc.

Elo and the Elo logo are either trademarks or registered trademarks of Elo Touch Solutions, Inc..



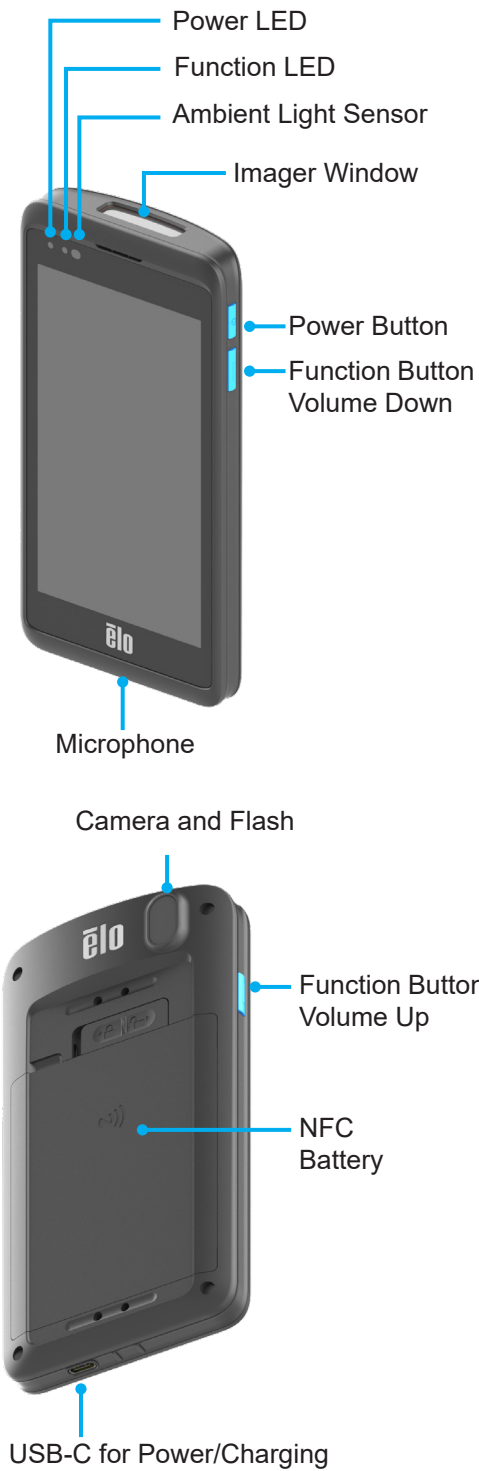

SD Card Installation

1. Remove Battery

- Slide latch to unlock position
- Pull the top side out



2. Install SD Card

- Remove Battery
- Pull out MicroSD Card holder
- Place SD card with contacts facing down
- Replace holder



3. Install Battery

- Insert bottom side of battery and push top side into place
- Slide latch to lock position



4. Press Power button to power on device