

POWER AMPLIFIER

**PX10/PX8
PX5/PX3**

Owner's Manual

Thank you for your purchase of the Yamaha PX10, PX8, PX5 or PX3 power amplifier. Please read through this manual carefully before using for the first time, in order to take full advantage of your PX power amplifier's superlative features and enjoy trouble-free operation for years to come. After you have read the manual, keep it in a safe, convenient place for reference when needed.

- Please read the PRECAUTIONS on the reverse side of this manual before use.
- The illustrations as shown in this manual are for instructional purposes only.
- The company names and product names used in this manual are the trademarks or registered trademarks of their respective companies.
- In this manual, the PX10, PX8, PX5 and PX3 power amplifier models are referred to collectively as "PX amplifier."
- Unless specified otherwise, the example illustrations used in this manual are taken from the PX10.
- The PX amplifier provides two setting methods: Basic mode and Advanced mode. This manual explains operations in the Basic mode. Operate in the Advanced mode for detailed settings. For information on the Advanced mode, refer to the PX10/PX8/ PX5/PX3 Reference Manual.

The PX10/PX8/ PX5/PX3 Reference Manual is an electronic file in PDF format. You can read this book on a computer. Use Adobe® Reader® to read this book on screen, search for words very quickly, print specific pages, or click links to display sections of special interest. The ability to search for words, or to follow links directly to relevant sections in the document, are helpful attributes of this electronic file format. We encourage you to take advantage of these benefits. You can download the latest Adobe Reader application from the website listed below.
<http://www.adobe.com/>

Features

- Maximum output of 1,000W out of lightweight chassis (PX10)
- Yamaha's proprietary Class-D and processing technologies provide superb sound quality and high reliability
- Speaker presets that allow you to get the best possible performance from Yamaha speakers
- A wide variety of DSP functions, including D-CONTOUR processing
- CONFIG WIZARD that provides the optimal configuration for any speaker
- Broad range of input/output connectors

Included accessories

- AC power cord
- Owner's Manual (this leaflet)
- Technical Specifications (English)
- AC plug clamp
- USB cap

 
CAUTION
Please keep the USB cap out of reach of children, to keep them from accidentally swallowing it.

Setup

The PX amplifier can be used as a normal amplifier by simply setting the volume knobs properly. The following settings enhance the performance of speakers.

Pre-installation

Mount PX amplifiers in a rack as required. Make sure that the power is turned off, and turn both the two volume knobs all the way to the left.

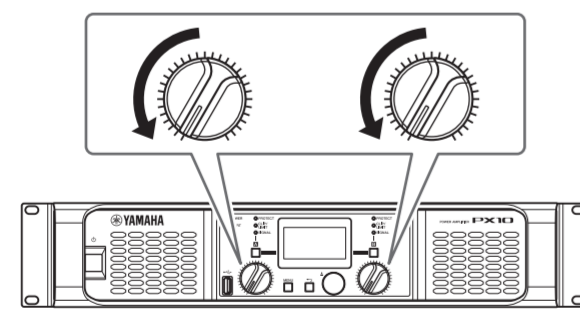

In this manual, methods of operations are explained with the following marks.

— [(item name)]: Rotate the main knob to select [(item name)].

: Press the Main knob.

 
: Press the [MENU] key.

: Press the [↶] (back) key.

A → B : Operate A, and then operate B.

A solid arrow (↓) between steps indicates a basic operation procedure, and a dotted arrow (↑) indicates an operation returning to the previous screen.


Stereo connection (using two full-range speakers)

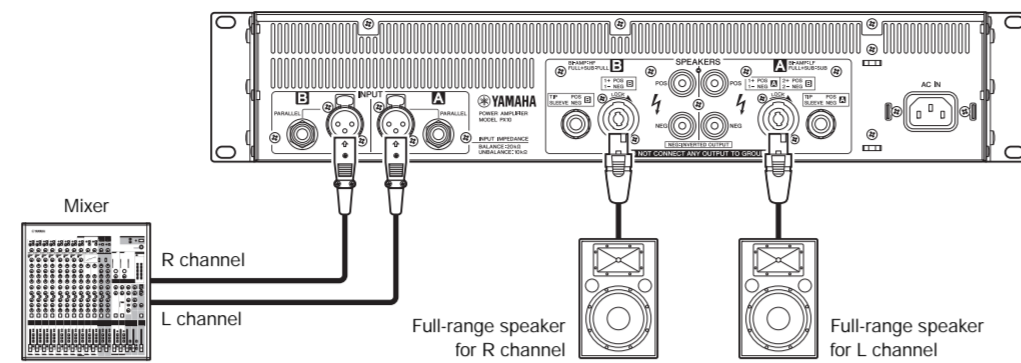


CAUTION
Please carry out "Pre-installation" surely. Do not connect any cables while the power is on.

1. Connect the full-range speaker for L channel to the [SPEAKERS] A terminal and the full-range speaker for R channel to the [SPEAKERS] B terminal.
2. Connect the output from sources (such as a mixer) to the [INPUT] A/B connectors. Connect the L channel source to the [INPUT] A connector, and the R channel source to the [INPUT] B connector.
3. Connect the AC power cord and turn on. First connect the AC power cord to the connector on the unit, and then plug it into an appropriate AC power outlet.
4. Secure the AC power cord with the AC plug clamp to prevent accidental disconnection from the connector. Refer to the "Rear panel" section on the reverse side for instructions on installation.

 NOTE
Refer to the "Wiring" section on the reverse side for instructions on making connections.

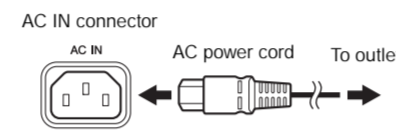


 Cross-over connection (using a full-range speaker and a subwoofer)

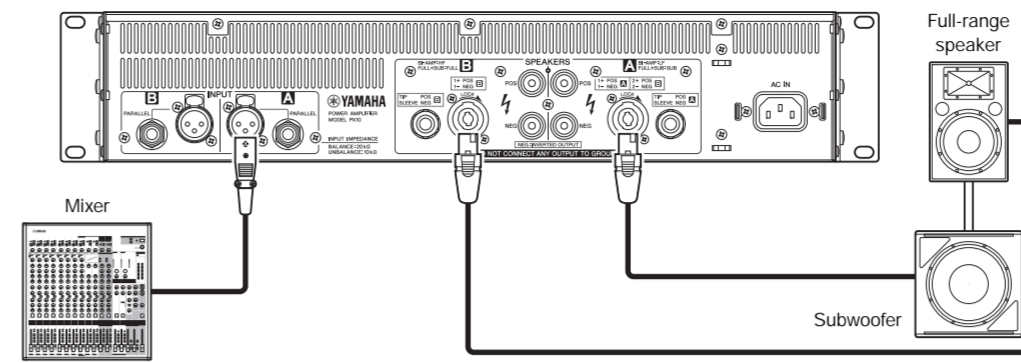

CAUTION
Please carry out "Pre-installation" surely. Do not connect any cables while the power is on.

 1. Connect the subwoofer to the [SPEAKERS] A terminal and the full-range speaker to the [SPEAKERS] B terminal.
2. Connect the output from source (such as mixer) to the [INPUT] A connector.
3. Connect the AC power cord and turn on. First connect the AC power cord to the connector on the unit, and then plug it into an appropriate AC power outlet.
4. Secure the AC power cord with the AC plug clamp to prevent accidental disconnection from the connector. Refer to "Rear panel" section on the reverse side for instructions on the installation.

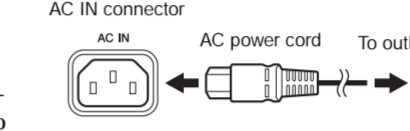

HOME screen

MENU screen (top screen)

SP TYPE screen

Speaker selection

HPF screen

CONFIRMATION screen

(Applies the set value)

Go on to the "Tone control" instructions.

HOME screen

MENU screen (top screen)

SP TYPE screen

Speaker selection (A)

HPF screen

Speaker selection (B)

X-OVER screen

CONFIRMATION screen

(Applies the set value)

Go on to the "Tone control" instructions.

Tone Control

Input signal from the source, confirm that the sound is being output from the speakers, and adjust the volume appropriately.

MENU screen (top screen)

TUNING screen

D-CONTOUR screen

MODE Selection screen

Select one of the following three modes.

- OFF: Turns off D-CONTOUR.
- FOH/MAIN: Boosts the high and low frequency components so that the frequency response is suitable for main speaker use.
- MONITOR: Reduces the low frequency range, which could otherwise tend to be boomy if the speaker is set directly on the floor. This enables you to hear mid and high frequency ranges clearly when using as a floor monitor.

D-CONTOUR screen

DEPTH Selection screen

 
Set over a range from 1 to 10. The larger the value, the deeper the effect.

MENU screen (top screen)

HOME screen


NOTE

- To mute channel A, push the [A] key and the main knob simultaneously. To cancel muting, push the [A] key and the main knob simultaneously again.
- To mute channel B, push the [B] key and the main knob simultaneously. To cancel muting, push the [B] key and the main knob simultaneously again.

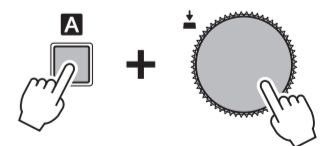


Controls and Functions

 Front panel

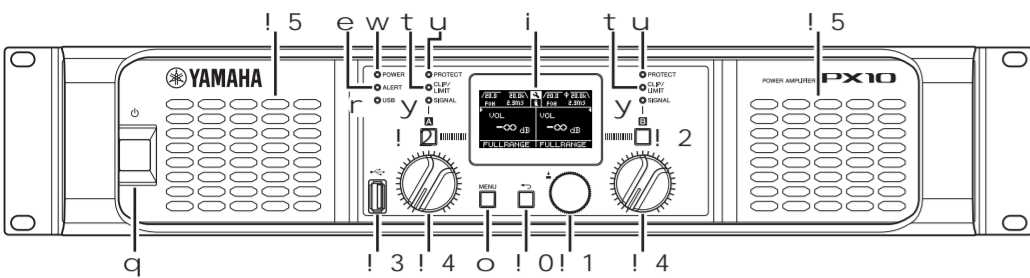

- q** Power button
Turns the power to the unit on or off.
- w** [POWER] indicator
Turns on when the power is on.
- e** [ALERT] indicator
Lights when a problem in the device is detected. Lights until the cause of the problem is solved.

NOTE
Details of the problem are shown on the display (1). Selecting the **1** icon on the HOME screen with the main knob calls up the operating log.

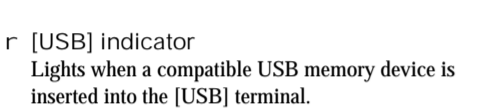

- r** [USB] indicator
Lights when a compatible USB memory device is inserted into the [USB] terminal. Flashes when the USB device is being accessed.

NOTICE
Do not unplug the USB device while the [USB] indicator is flashing. Data in the USB memory may be corrupted or lost.

- t** [CLIP/LIMIT] indicators
Lights when the limiter is operating to protect the amplifier and the speaker, or the input signal overflows in the digital circuit or clips at the amplifier output.

- y** [SIGNAL] indicators
Lights when the output is larger than -60 dB of maximum output level (8 ohms).
- u** [PROTECT] indicators
Lights when the protection circuit is operating.

- i** Display
Displays condition of the PX amplifier and setting menus.

- o** [MENU] key
Press the key to move to the top MENU screen.
- !** [Back] key
Press this key to move up to the immediately higher menu level or previous display. Press and briefly hold the key to return the HOME screen.
- !** Main knob
Rotate the knob to change the values of parameters and move the position of cursor. Press the knob to actually enter the set value or enable the selected item.
- !** **2A/[B]** keys
Press the key to switch the channel (A or B) for operating the corresponding parameters.

NOTE
Press the main knob and [A] key to change the mute status of channel A. Press the main knob and [B] key to change the mute status of channel B.

- !** **3**[USB] terminal
Insert a USB memory device to read/load the data from/to the PX amplifier.

 
NOTICE
When the terminal is not used, attach the supplied USB cap to protect the terminal.

- !** **4**Volume knob
Adjust the level from - dB to 0 dB.
- !** **5**Intake ports
Air intakes for the cooling fan. Make sure to not block the air intakes.

NOTE

- The settings can be changed so that the display and indicators turn off automatically when panel is not operated (Black-out mode). Refer to PX10/PX8/PX5/PX3 Reference Manual for instructions on the Black-out mode.
- For the protection of the display, even if the Black-out mode is not active, the display automatically turns off if the PX amplifier has not been operated for 20 minutes. To turn on the display again, simply press any key on the front panel or rotate the main knob.

Rear panel

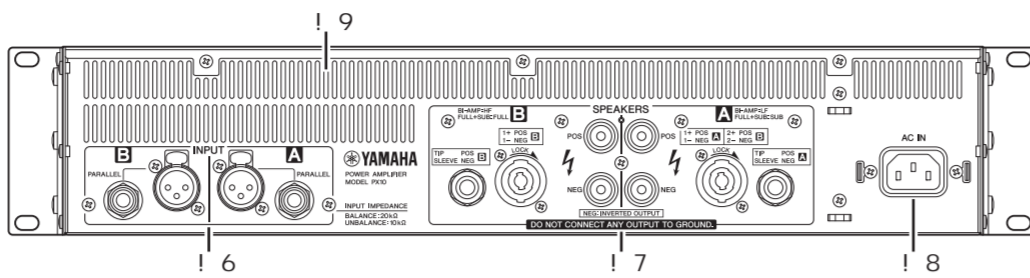

- !** **4**[INPUT] A/B connectors
The following two type input connectors are provided for both channels A and B.
 - XLR input jack
 - Phones input jack

NOTE
Each XLR input jack and phones input jack are connected in parallel. Only one of the jacks can be used as an input jack at one time; the signals from the jacks cannot be mixed.

 
- !** **7**[SPEAKERS] A/B terminals
Output terminals to speakers. The following three types are available:
 - Neutrik NL4MD SpeakON output connector
 - Binding post output connector
 - Phones output jack

CAUTION
Do not touch the terminals or metal parts of cords connected to the terminal.

- NOTICE**
- If connecting speakers to multiple connectors of a same channel results in a parallel connection, make sure that the total impedance of the speakers to be connected is not excessively low.
 - The PX amplifier adopts BTL (Balanced Transformer Less) amplifier circuits. Connecting both terminals of channels A and B and connecting between the terminal and the chassis may cause a failure or malfunction. Be careful to not connect or contact the two by mistake.


- Wiring
 - Binding post connector
 - No plugs
 - Remove about 15 mm of insulation from the end of each speaker cable, pass the bare wire through the holes in the appropriate speaker terminals, and tighten the terminals to securely clamp the wires. Make sure that the bare wire ends do not jut out from the terminals and touch the chassis.

- Y-plugs
From above, insert the Y-plugs all the way into the opening, and tighten the terminals.

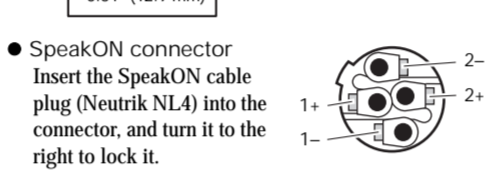

Channel A	Channel B
Neutrik NL4	Neutrik NL4
1+ A+	1+ B+
1- A-	1- B-
2+ B+	2+ (not connected)
2- B-	2- (not connected)

 - !** **6**AC IN connector
Connect the supplied AC power cord. First connect the AC power cord to the connector on the amplifier, and then plug it into an appropriate AC power outlet. Secure the AC power cord with the AC plug clamp to prevent accidental disconnection from the connector.

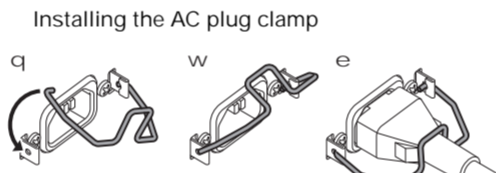

- !** **8**Exhaust ports
Exhaust vents for the cooling fan. Make sure to not block the exhaust vents.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING
Please keep this manual in a safe place for future reference.

WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short-circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

- Power supply/power cord**
 - Do not place the power cord near heat sources such as heaters or radiators, and do not excessively bend or otherwise damage the cord, place heavy objects on it, or place it in a position where anyone could walk on, trip over, or roll anything over it.
 - Only use the voltage specified as correct for the device. The required voltage is printed on the name plate of the device.
 - Use only the supplied power cord/plug.
 - Check the electric plug periodically and remove any dirt or dust which may have accumulated on it.
 - When setting up the device, make sure that the AC outlet you are using is easily accessible. If some trouble or malfunction occurs, immediately turn off the power switch and disconnect the plug from the outlet. Even when the power switch is turned off, as long as the power cord is not unplugged from the wall AC outlet, the device will not be disconnected from the power source.
 - Remove the electric plug from the outlet when the device is not to be used for extended periods of time, or during electrical storms.
 - Be sure to connect to an appropriate outlet with a protective grounding connection.

- Do not open**
 - This device contains no user-serviceable parts. Do not open the device or attempt to disassemble the internal parts or modify them in any way. If it should appear to be malfunctioning, discontinue use immediately and have it inspected by qualified Yamaha service personnel.

- Water warning**
 - Do not expose the device to rain, use it near water or in damp or wet conditions, or place on it any containers (such as vases, bottles or glasses) containing liquids which might spill into any openings. If any liquid such as water seeps into the device, turn off the power immediately and unplug the power cord from the AC outlet. Then have the device inspected by qualified Yamaha service personnel.
 - Never insert or remove an electric plug with wet hands.

- Hearing loss**
 - Do not use speakers for a long period of time at a high or uncomfortable volume level, since this can cause permanent hearing loss. If you experience any hearing loss or ringing in the ears, consult a physician.
 - When turning on the AC power in your audio system, always turn on the device LAST, to avoid hearing loss and speaker damage. When turning the power off, the device should be turned off FIRST for the same reason.

- Fire warning**
 - Do not place any burning items or open flames near the device, since they may cause a fire.

- If you notice any abnormality**
 - If any of the following problems occur, immediately turn off the power switch and disconnect the electric plug from the outlet.
 - The power cord or plug becomes frayed or damaged.
 - Unusual smells or smoke are emitted.
 - Some object has been dropped into the device.
 - There is a sudden loss of sound during use of the device.
 - Cracks or other visible damage appear on the device.
 - Then have the device inspected or repaired by qualified Yamaha service personnel.
 - If this device should be dropped or damaged, immediately turn off the power switch, disconnect the electric plug from the outlet, and have the device inspected by qualified Yamaha service personnel.

- Connectors**
 - XLR-type connectors are wired as follows (IEC60268 standard): pin 1: ground, pin 2: hot (+), and pin 3: cold (-).
 - Use only Neutrik NL4FC plugs for connecting Speakon connectors.

- Information**
 - About functions/data bundled with the device
 - The bilmap fonts used in this instrument have been provided by and are the property of Ricoh Co., Ltd.

CAUTION

Always follow the basic precautions listed below to avoid the possibility of physical injury to you or others, or damage to the device or other property. These precautions include, but are not limited to, the following:

- Power supply/power cord**
 - When removing the electric plug from the device or an outlet, always hold the plug itself and not the cord. Pulling by the cord can damage it.

- Location**
 - Do not place the device in an unstable position where it might accidentally fall over and cause injuries.
 - Do not block the vents. This device has ventilation holes at the front/rear to prevent the internal temperature from becoming too high. In particular, do not place the device on its side or upside down. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire.
 - When installing the device:
 - Do not cover it with any cloth.
 - Do not install it on a carpet or rug.
 - Make sure the top surface faces up: do not install on its sides or upside down.
 - Do not use the device in a confined, poorly-ventilated location.

Inadequate ventilation can result in overheating, possibly causing damage to the device(s), or even fire. Make sure that there is adequate space around the device: at least 40 cm above, 10 cm at the sides and 10 cm behind.

- Do not place the device in a location where it may come into contact with corrosive gases or salt air. Doing so may result in malfunction.
- Keep the device out of reach of children, to keep them from putting their fingers into openings on the equipment and accidentally being injured.
- Before moving the device, remove all connected cables.
- If the device is mounted in an EIA standard rack, carefully read the section "Rack Mounting" in the PX10/PX8/PX5/PX3 Reference Manual. Inadequate ventilation can result in overheating, possibly causing damage to the device(s), malfunction, or even fire.

- Connections**
 - Before connecting the device to other devices, turn off the power for all devices. Also, before turning the power of all devices on or off, make sure that all volume levels are set to the minimum. Failing to do so may result in electric shock, hearing loss, or equipment damage.
 - Use only speaker cables for connecting speakers to the speaker jacks. Use of other types of cables may result in fire.

- Maintenance**
 - Remove the power plug from the AC outlet when cleaning the device.

- Handling caution**
 - Do not insert your fingers or hands in any gaps or openings on the device (vents).
 - Avoid inserting or dropping foreign objects (paper, plastic, metal, etc.) into any gaps or openings on the device (vents). If this happens, immediately turn off the power unplug the power cord from the AC outlet, and have the device inspected by qualified Yamaha service personnel.
 - Do not rest your weight on the device or place heavy objects on it, and avoid use excessive force on the buttons, switches or connectors to prevent injuries.

Yamaha cannot be held responsible for damage caused by improper use or modifications to the device, or data that is lost or destroyed.

PA_en_7

NOTICE
To avoid the possibility of malfunction/ damage to the product, damage to data, or damage to other property, follow the notices below.

- Handling and maintenance
 - Do not use the device in the vicinity of a TV, radio, AV equipment, mobile phone, or other electric devices. Otherwise, the device, TV, or radio may generate noise.
 - Do not expose the device to excessive dust or vibration, or extreme cold or heat (such as in direct sunlight, near a heater, or in a car during the day), in order to prevent the possibility of panel disfiguration, unstable operation, or damage to the internal components.
 - Do not place vinyl, plastic or rubber objects on the device, since this might discolor the panel.
 - The amplifier uses forced-air cooling fans that draw air in from the front and exhaust it through the rear. Please be sure that you do not block the air intakes or exhaust vents.
 - When cleaning the device, use a dry and soft cloth. Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.
 - Condensation can occur in the device due to rapid, drastic changes in ambient temperature—when the device is moved from one location to another, or air conditioning is turned on or off, for example. Using the device while condensation is present can cause damage. If there is reason to believe that condensation might have occurred, leave the device for several hours without turning on the power until the condensation has completely dried out.
 - Do not use this device for any purpose other than driving loudspeakers.
 - Always turn the power off when the device is not in use.
 - Rapidly turning the unit on and off in succession can cause it to malfunction. After turning the unit off, wait for more than five seconds before turning it on again.

- Connectors
 - XLR-type connectors are wired as follows (IEC60268 standard): pin 1: ground, pin 2: hot (+), and pin 3: cold (-).
 - Use only Neutrik NL4FC plugs for connecting Speakon connectors.

- Information**
 - About functions/data bundled with the device
 - The bilmap fonts used in this instrument have been provided by and are the property of Ricoh Co., Ltd.

- About this manual
 - The illustrations and LCD screens as shown in this manual are for instructional purposes only.
 - The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.
 - Software may be revised and updated without prior notice.
 - The Yamaha Pro Audio website provides a FAQ (a list of frequently asked questions, with answers).

- European models
Purchaser/User Information specified in EN55103-2:2009. Conforms to Environments: E1, E2, E3 and E4

IMPORTANT NOTICE FOR THE UNITED KINGDOM
Connecting the Plug and Cord

WARNING: THIS APPARATUS MUST BE EARTHED IMPORTANT. The wires in this mains lead are coloured in accordance with the following code:

GREEN-AND-YELLOW	: EARTH	
BLUE	: NEUTRAL	
BROWN	: LIVE	

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:

The wire which is coloured GREEN-and-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the safety earth symbol or coloured GREEN or GREEN-and-YELLOW.

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured RED.

(3 wires)

Information for Users on Collection and Disposal of Old Equipment

This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products should not be mixed with general household waste. For proper treatment, recovery and recycling of old products, please take them to applicable collection points, in accordance with your national legislation and the Directives 2002/96/EC.

By disposing of these products correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

[For business users in the European Union]
If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.
[Information on Disposal in other Countries outside the European Union]
This symbol is only valid in the European Union. If you wish to discard these items, please contact your local authorities or dealer and ask for the correct method of disposal.

(weee_eu_en_01)

ADDRESS LIST

- | NORTH AMERICA | CENTRAL & SOUTH AMERICA | EUROPE |
|---|--|---|
| <p>CANADA
Yamaha Canada Music Ltd.
135 Milner Avenue, Toronto, Ontario, M1S 3R1, Canada
Tel: +1-416-298-1311</p> <p>U.S.A.
Yamaha Corporation of America
6600 Orangeflour Avenue, Buena Park, CA 90620, U.S.A.
Tel: +1-714-522-9011</p> <p>MEXICO
Yamaha de México, S.A. de C.V.
Av. Insurgentes Sur 1647 Piso 9, Col. San José Insurgentes, Delegación Benito Juárez, México, D.F., C.P. 03900
Tel: +52-55-5804-0600</p> <p>BRAZIL
Yamaha Musical do Brasil Ltda.
Rua Fidêncio Ramos, 302 - CJ 52 e 54 - Torre B - Vila Olímpia - CEP 04551-010 - São Paulo/SP, Brazil
Tel: +55-11-3704-1377</p> <p>ARGENTINA
Yamaha Music Latin America, S.A., Sucursal Argentina
Olga Cossetti 1553, Piso 4 Norte, Maduro Este-C1107CEK, Buenos Aires, Argentina
Tel: +54-11-4119-7000</p> <p>VENEZUELA
Yamaha Musical de Venezuela, C.A.
AV. Manzanaras, C.C. Manzanaras Plaza, Piso 4, Oficina 0401, Baruta, Caracas, Venezuela
Tel: +58-212-943-1877</p> <p>PANAMA AND OTHER LATIN AMERICAN COUNTRIES/ CARIBBEAN COUNTRIES/ Yamaha Music Latin America, S.A.
Edif. Torre Banco General, Piso 7, Urbanización Marbella, Calle 47 y Aquilino de la Guardia, Ciudad de Panamá, República de Panamá
Tel: +507-269-5311</p> | <p>MALTA
Olimpus Music Ltd.
Valletta Road, Mosta MST9010, Malta
Tel: +356-2133-2093</p> <p>NETHERLANDS/BELGIUM/ LUXEMBOURG
Yamaha Music Europe Branch Benelux
Clarissenhof 5b, 4133 AB Vianen, The Netherlands
Tel: +31-347-358040</p> <p>FRANCE
Yamaha Music Europe
7 rue Ambroise Croizat, Zone d'activités de Pariset, 77183 Croissy-Beaubourg, France
Tel: +33-1-6461-4000</p> <p>ITALY
Yamaha Music Europe GmbH, Branch Italy
Viale Italia 88, 20020, Lainate (Milano), Italy
Tel: +39-02-93577-1</p> <p>SPAIN/PORTUGAL
Yamaha Music Europe GmbH Ibérica, Sucursal en España
Ctra. de la Corona km. 17,200, 28231 Las Rozas de Madrid, Spain
Tel: +34-91-639-88-88</p> <p>GREECE
Philippou Nakas S.A. The Music House
19th Km. Leof. Lavriou 190 02 Peania - Attiki, Greece
Tel: +30-210-6686168</p> <p>SWEDEN/FINLAND/ICELAND
Yamaha Music Europe GmbH Germany filial Scandinavia
JA Wettergrensgata 1, 400 43 Göteborg, Sweden
Tel: +46-31-89-34-00</p> <p>DENMARK
Yamaha Music Denmark, Filial of Yamaha Music Europe GmbH, Tyskland
Generatorvej 8C, ST. TH. 2860 Søborg, Denmark
Tel: +45-44-92-49-00</p> <p>NORWAY
Yamaha Music Europe GmbH Germany - Norwegian Branch
Grini Næringspark 1, 1332 Østerås, Norway
Tel: +47-6716-7800</p> <p>RUSSIA
Yamaha Music (Russia) LLC.
Room 37, entrance 7, bld. 7, Kievskaya street, Moscow, 121059, Russia
Tel: +7-495-626-5005</p> <p>OTHER EUROPEAN COUNTRIES
Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-3030</p> | <p style="text-align: center;">AFRICA</p> <p>Yamaha Music Gulf FZE
JAFZA-16, Office 512, P.O.Box 17328, Jebel Ali FZE, Dubai, UAE
Tel: +971-4-801-1500</p> <p style="text-align: center;">MIDDLE EAST</p> <p>TURKEY
Yamaha Music Europe GmbH Merkezli Alanya Türkiye Istanbul Şubesi
Maslak Meydan Sokak, Spring Giz Plaza Bagimsiz Böl. No:3, Sariyer Istanbul, Turkey
Tel: +90-212-999-8010</p> <p>CYPRUS
Yamaha Music Europe GmbH
Siemensstrasse 22-34, 25462 Rellingen, Germany
Tel: +49-4101-303-0</p> |
| <p>ASIA</p> <p>THE PEOPLE'S REPUBLIC OF CHINA
Yamaha Music & Electronics (China) Co.,Ltd.
2F, Yunhedasha, 1818 Xinzha-lu, Jingan-qu, Shanghai, China
Tel: +86-400-051-7700</p> <p>INDIA
Yamaha Music India Private Limited
Spacezide Building, Ground Floor, Tower A, Sector-47, Gurgaon- Sohna Road, Gurgaon-122002, Haryana, India
Tel: +91-124-485-3300</p> <p>INDONESIA
PT. Yamaha Musik Indonesia (Distributor)
Yamaha Music Center Bldg. Jalan Jend. Gatot Subroto Kav. 4, Jakarta 12930, Indonesia
Tel: +62-21-520-2577</p> <p>KOREA
Yamaha Music Korea Ltd.
8F, Dongsung Bldg. 21, Teheran-ro 87-gil, Gangnam-gu, Seoul, 135-880, Korea
Tel: +82-2-3467-3300</p> <p>MALAYSIA
Yamaha Music (Malaysia) Sdn. Bhd.
No.8, Jalan Perbandaran, Kelana Jaya, 47301 Petaling Jaya, Selangor, Malaysia
Tel: +60-3-78030900</p> <p>SINGAPORE
Yamaha Music (Asia) Private Limited
Block 202 Hougang Street 21, #02-00, Singapore 530202, Singapore
Tel: +65-6740-9200</p> <p>TAIWAN
Yamaha Music & Electronics Taiwan Co.,Ltd.
2F, No.1, Yuandong Rd. Banqiao Dist. New Taipei City 22063, Taiwan, R.O.C.
Tel: +886-2-7741-8888</p> <p>THAILAND
Siam Music Yamaha Co., Ltd.
3, 4, 15, 16th Fl., Siam Motors Building, 891/1 Rama 1 Road, Wangmai, Pathumwan, Bangkok 10330, Thailand
Tel: +66-2215-2622</p> <p>VIETNAM
Yamaha Music Vietnam Company Limited
15th Floor, Nam A Bank Tower, 201-203 Cach Mang Thang Tam St., Ward 4, Dist.3, Ho Chi Minh City, Vietnam
Tel: +84-8-3818-1122</p> <p>OTHER ASIAN COUNTRIES
Yamaha Corporation Sales & Marketing Division
10-1, Nakazawa-cho, Naka-ku, Hamamatsu, Japan 430-8650
Tel: +81-53-460-2312</p> | <p style="text-align: center;">OCEANIA</p> <p>AUSTRALIA
Yamaha Music Australia Pty. Ltd.
Level 19, Queensbridge Street, Southbank
VIC 3006, Australia
Tel: +61-3-9693-5111</p> <p>COUNTRIES AND TRUST TERRITORIES IN PACIFIC OCEAN
Yamaha Corporation Sales & Marketing Division
10-1, Nakazawa-cho, Naka-ku, Hamamatsu, Japan 430-8650
Tel: +81-53-460-2312</p> | |

Troubleshooting

The Yamaha Pro Audio website provides a FAQ (a list of frequently asked questions, with answers).
<http://www.yamahaproaudio.com/>

Symptom	Possible causes	Possible solution
[PROTECT] indicator lights and an "OUTPUT CURRENT OVER" message appears on the display.	There is a short at the speaker terminal, amplifier terminal or wire, and the circuit is protected. Since the impedance of the connected speaker is too low and the amplifier is overloaded, circuit protection is engaged.	Turn off and check for a short at the speaker terminal or amplifier, wire, etc., and turn on again. Check that the speaker has not been damaged and that total impedance is not excessively low, and review the speaker connection.
[PROTECT] indicator lights and a "AMP TEMP TOO HIGH" message appears on the display.	Because the internal temperature is too high, thermal protection is engaged to protect the circuit.	Check the amplifier ventilation conditions and take appropriate measures to improve the airflow around the amplifier. Leave the amplifier off until the internal temperature goes down, and then turn on again.
[CLIP/LIMIT] indicator lights.	Because the input signal is excessive or the output exceeds the rated voltage, the signal is clipped or the limiter is engaged to protect the circuit.	Lower the output level of the device connected to the input connector, or lower the volume of the amplifier.
Power does not turn on.	The power supply voltage of the connected outlet is significantly different from the rated range. Because the internal temperature is too high, thermal protection is engaged to protect the circuit.	Check the source voltage. Check the amplifier ventilation conditions and take appropriate measures to improve the airflow around the amplifier. Leave the amplifier off until the internal temperature goes down, and then turn on again.
Sound from speakers is distorted.	The input level exceeds the setting of the input sensitivity.	Adjust the input sensitivity to match the input level.
The sound is muffled. No high-frequency sound.	The sound is filtered. The filter condition can be checked in the HOME screen.	Change the setting of the filters in the MENU screen (TUNING screen).
No sound from speakers.	Cables are not connected appropriately.	Connect input connectors and output connectors properly. Refer to the "Setup" section on the front side for connection instructions.
	Level has declined with the volume.	Adjust the volume.
The panel controls cannot be operated.	The mute is on. When the mute is on, "MUTE" appears in the HOME screen.	Turn off the mute.
	The protection circuit is engaged and the output is muted. When the protection circuit is engaged, the [PROTECTION] indicator lights.	Identify what is causing the protection circuit to engage and solve it.
The panel controls cannot be operated.	The panel lock is turned on.	Turn off the panel lock. Refer to PX10/PX8/PX5/PX3 Reference Manual for instructions on turning off the panel lock.

* Refer also to the section "Troubleshooting" in the PX10/PX8/PX5/PX3 Reference Manual.
* If any specific problem should persist, please contact your Yamaha dealer.

Main Specifications

	PX10	PX8	PX5	PX3
Output Power	120 V 60 Hz, 220 V-240 V 50 Hz/60 Hz			
1 kHz, non-clip, 8	1000 W × 2	800 W × 2	500 W × 2	300 W × 2
20 msec burst, 4	1200 W × 2	1050 W × 2	800 W × 2	500 W × 2
both channels driven, 2	700 W × 2	600 W × 2	500 W × 2	300 W × 2
1 kHz, non-clip, 8	100 V 50 Hz/60 Hz			
20 msec burst, 4	—	—	800 W × 1	600 W × 1
both channels driven, 2	—	—	1400 W × 1	1000 W × 1
Output Power	100 V 50 Hz/60 Hz			