## bouncepad

## Click

**Assembly Instructions** 

No tools required for Freestanding

Tools Required to Fix From Above:

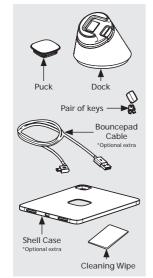
- Drill
- 3.5mm Drill bit
- Pencil
- PZ2 Screwdriver
- Tape Measure

Tools Required to Fix From Below:

- Drill
- 5mm Drill bit
- Pencil PZ2 Screwdriver
- Tape Measure

Sheet Code: BP-IM-073\_REV4 Release Date: 20/12/2021

Copyright 2021 Spotspot Ltd. (T/A Bouncepad) all rights reserved. Con dential, no part of this publication may be reproduced or transmitted in any form without the written permission of the copyright holder.



In the Box



Fixings list

В

Disable

Rotate

\*The Dock is

con gured

for rotate by

default.

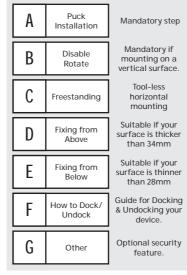
Disable

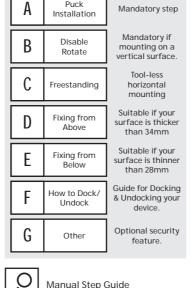
rotate if

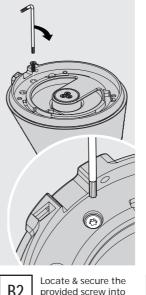
mounting

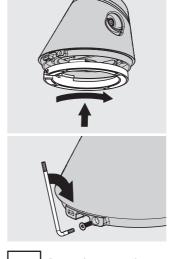
on a vertical

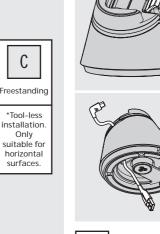
surface.

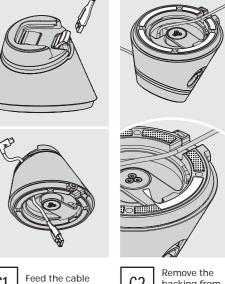














Fixing from

Above

\*Suitable

mounting

surface is thicker than

34mm

Step C is

 
mandatory

if mounting

on a vertical


surface.


Reattach & secure the Mount Ring to the Dock.




Recommended minimum




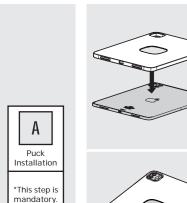

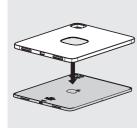

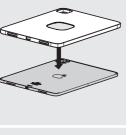 

 






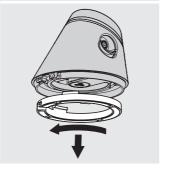


 
















 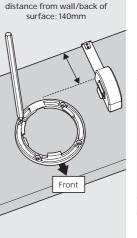 
Locate & rmly press the Dock onto your chosen surface.

 
















mounting surface.

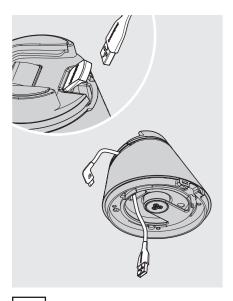

 

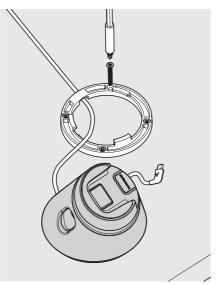

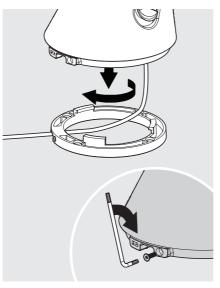Locate the cable as shown & secure the Mount Ring to your mounting surface.




Locate & secure the Dock onto the Mount Ring.




Fixing from Below \*Suitable if the mounting surface is thinner than: 28mm



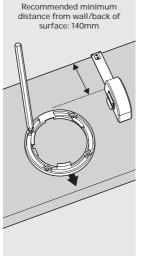
Remove the Mount Ring locking screw before then removing the Mount Ring.



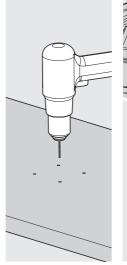
Using the Mount Ring as a template, mark the drill holes.





Drill your mounting surface.

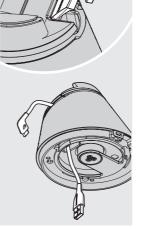


Feed the cable through the Dock.

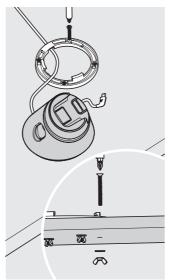


 


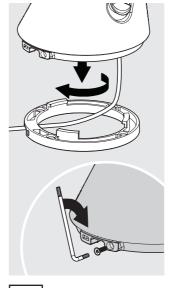


How to Dock/ Undock

 


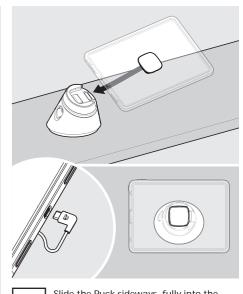

 


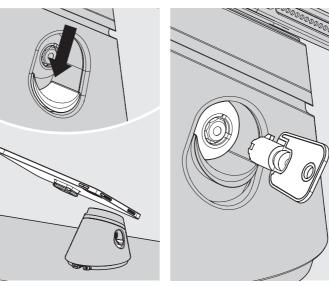

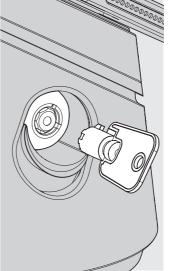To undock, depress the release button & simultaneously slide your device out of the Dock.



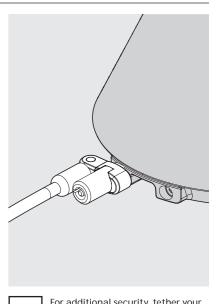For added security, lock the Dock with your key whilst your device is Docked.



For additional security, tether your Dock with a Kensington security cable. \*Security cable not provided.