


4-Port 2.5GBase-T Ethernet Network Adapter Card - PCle 2.0 x4

Product Diagram (PR42GI-NETWORK-CARD)

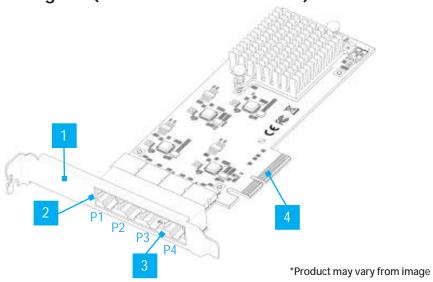

	Port/LED/Connector	Function
1	Bracket	 Secures the card to the Host Computer Case The Full Pro le Bracket comes pre-installed The Low Pro le Bracket is included
2	4x Ethernet Ports	 Connect a Network Cable to the Network Card Supports 2.5 Gbps, 1 Gbps, 100 Mbps, and 10 Mbps Note: Ethernet port 1 (P1) is the only port that supports WoL (Wake-on-LAN).
3	LED Indicators	 Left LED Indicator is Link Speed Solid Green: 2.5 Gbps Solid Amber: 1 Gbps O: 100 or 10 Mbps Right LED Indicator is Link Status Solid Green: Active link Flashing Green: Activity
4	PCle 2.0 x4 Connector	Insert into a PCI Express Slot on the Host Computer

Package Contents

- 4-Port PCle 2.5 Gbps Network Card x 1
- Low Pro le Bracket x 1
- Quick-Start Guide x 1

Requirements

For the latest requirements, please visit www.startech.com/PR42GI-NETWORK-CARD

• Host Computer with an available PCI Express 2.0 or greater Slot (x4, x8, or x16)

Installation

Install the PCI Express Card

WARNING!

Static Electricity can severely damage PCI Express Cards. Ensure that you are adequately Grounded before you open your Host Computer Case or touch the PCI Express Card. You should wear an Anti-Static Strap or use an Anti-Static Mat when installing any Host Computer component. If an Anti-Static Strap isn't available, discharge any built-up static electricity by touching a large Grounded Metal Surface for several seconds. Only handle the PCI Express Card by its edges and don't touch the gold connectors.

- 1. Turn o the **Host Computer** and any **Peripheral Devices** that are connected to it (e.g. printers, external hard drives, etc.).
- 2. Unplug the **Power Cable** from the back of the **Host Computer**.
- 3. Disconnect any **Peripheral Devices** that are connected to the **Host Computer**.
- 4. Remove the **Cover** from the **Host Computer Case**. Consult the documentation that came with the **Host Computer** for details about doing this safely.
- 5. Locate an open **PCI Express Slot** and remove the corresponding **Slot Cover Plate** from the back of the **Host Computer Case**.

Note: Consult the documentation that came with the **Host Computer** for details about doing this safely. This card works in PCI Express x4, x8, or x16 Slots.

6. Gently insert the PCI Express Card into the open PCI Express Slot and fasten the Bracket to the back of the Host Computer Case.

Note: If you install the PCI Express Card into a Small Form Factor or a Low Pro le Desktop System, it may be necessary to replace the pre-installed standard Full Pro le Bracket with the included Low Pro le Bracket.

- 7. Return the **Cover** onto the **Host Computer Case**.
- 8. Reconnect the **Power Cable** to the back of the **Host Computer**.
- 9. Reconnect all of the **Peripheral Devices** disconnected in **Step 3**.
- 10. Turn on the **Host Computer** and **Peripheral Devices**.
- 11. Connect an Ethernet Cable to the Ethernet Port(s).

Download the Driver

- 1. Navigate to www.startech.com/PR42GI-NETWORK-CARD
- Click the Drivers & Downloads tab.
- 3. Under **Driver(s)**, download the **Driver Package** for Windows.

Note: Windows usually saves the les to the Downloads folder associated with the user account (e.g. C:\Users\useraccount\Downloads).

4. Right-click the zipped Driver Package that was downloaded. Click Extract All. Follow the on-screen instructions to **Extract** the less

Note: Ensure to make a note of the location where the drivers were extracted. That location will be used in later steps.

5. Follow the instructions on the accompanying Intel_Windows_DIG le for further Installation Instructions.

Regulatory Compliance

FCC - Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to tadio or television reception, which can be determined by turning the equipment o and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Connect the equipment into an outlet on a circuit dierent from that to which the receiver is connected.

 Consult the dealer or an experienced radio/TV technician for help
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada. CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warranty Information

This product is backed by a two years warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their o cers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of pro its, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Verify the Driver Installation

Windows

- 1. Navigate to the **Device Manager**.
- 2. Under Network Adapters, right-click Intel Ethernet Controller I225-V and click the **Properties** option.
- 3. Con rm that the **Driver** is installed and working as expected.

Linux

Note: Ensure kernel 5.8 or higher is being used. Execute the following command from the terminal prompt to check the kernel version, uname -r.

- 1. Open a Terminal Window and type the command sudo dmesq | grep Intel to check the Intel Driver Integration.
- 2. You should see the following response if the drivers are present, Intel(R) 2.5G **Ethernet Linux Driver.**

Safety Measures

• Read the entire manual and ensure the instructions are fully understood before assembling and/or using this product.

Mesures de Sécurité

Lisez tout le manuel et assurez-vous que vous comprenez les instructions avant de commencer à assembler et utiliser ce produit.

安全対策

- 最初に取扱説明書を最後まで読み、本製品の組み立て方をすべて理解してから組み立て作業を始めて下さい。
- Misure di Sicurezza
- Leggere l'intero manuale e assicurarsi di aver compreso tutte le istruzioni prima di iniziare ad assemblare e a utilizzare questo prodotto.

Säkerhetsåtgärder

Läs hela manualen och se till att du förstår instruktionerna innan du börjar montera och använda produkten.

Medidas de Seguridad

Lea todo el manual y asegúrese de haber comprendido bien las instrucciones antes de proceder con el ensamblaje y el uso de este producto











Points de collecte sur www.quefairedemesdechets.fr Privilégiez la réparation ou le don de votre appareil

StarTech.com Ltd.

45 Artisans Crescent London, Ontario N5V 5E9 Canada

StarTech.com LLP

4490 South Hamilton Road Groveport, Ohio 43125 U.S.A.

StarTech.com Ltd. Unit B. Pinnacle 15

Gowerton Road Brackmills Northampton NN4 7BW United Kingdom

StarTech.com Ltd. Siriusdreef 17-27

2132 WT Hoofddorp The Netherlands

FR: startech.com/fr DE: startech.com/de ES: startech.com/es NL: startech.com/nl IT: startech.com/it JP: startech.com/ip