


ZD421 Thermal Transfer (203 & 300 DPI)

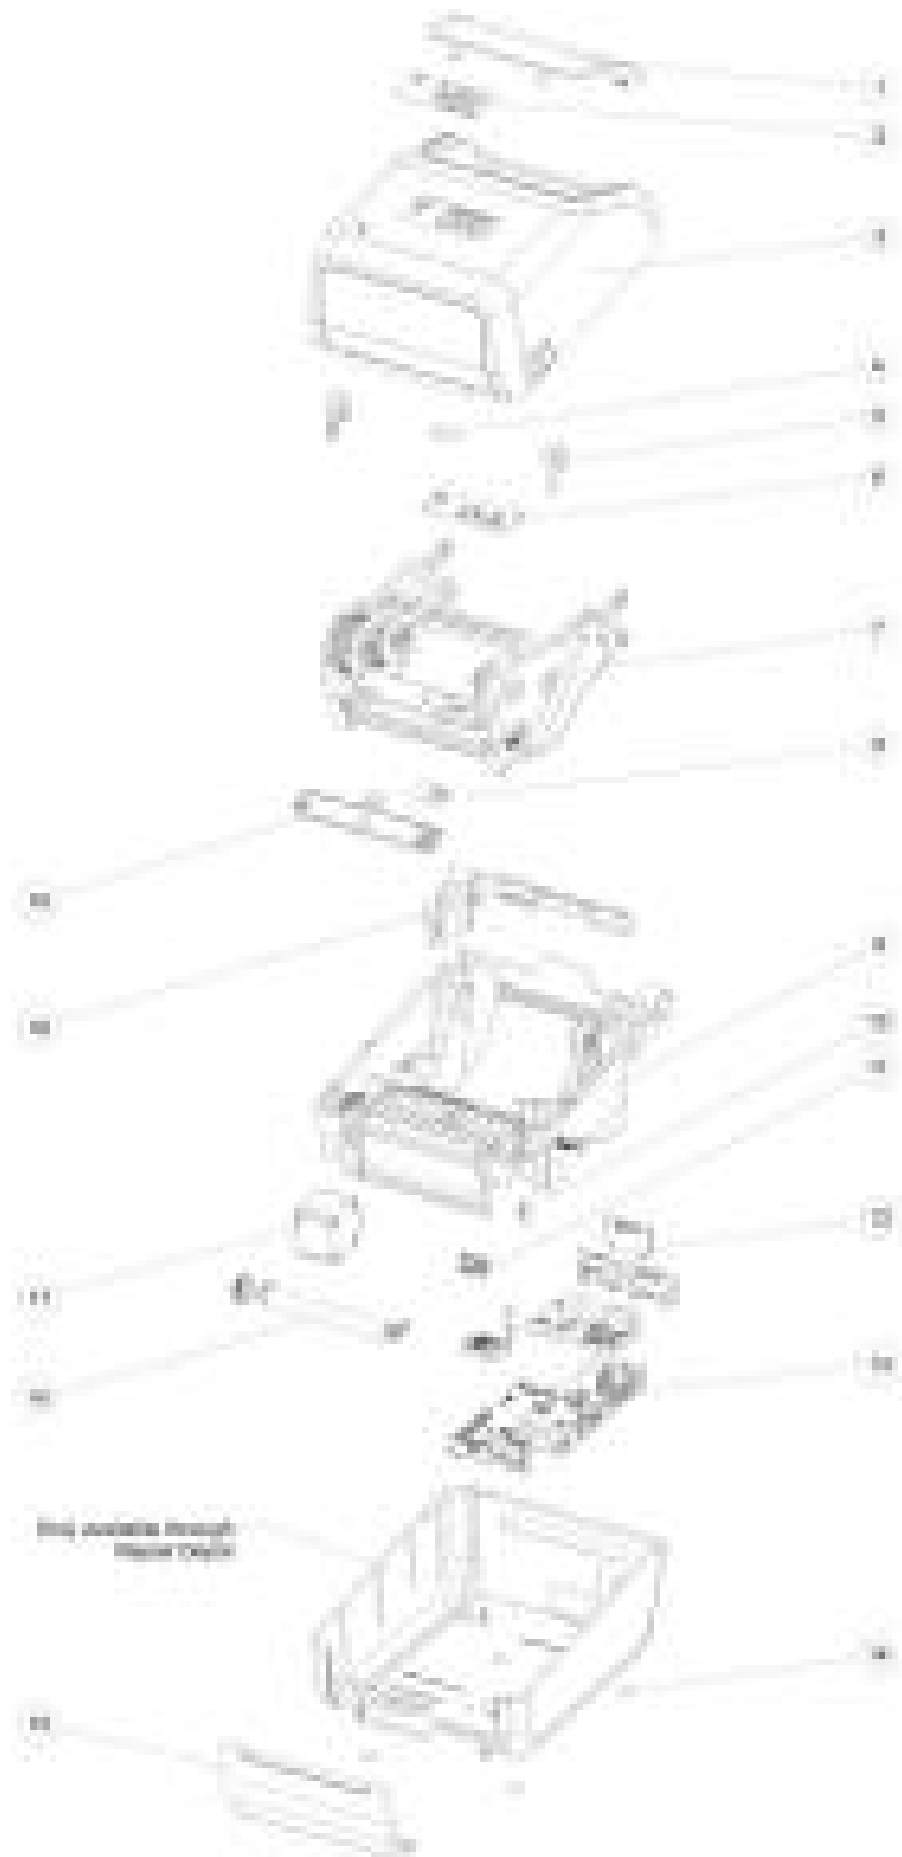

ZD421 Thermal Transfer (203 & 300 DPI)

Item	Description	Part Number
1	Media Window	P1112640-200
2	Nameplate	P1112640-254
3	Cover Assembly or ! ray "tandard Models #in\$!%des Media Window& Cover Assembly or W'ite (ealt'\$are Models #in\$!%des Media Window&	P1112640-202 P1112640-203
4	)ibbon *%t "ensor	P1112640-204
5	+at\$' Assembly	P1112640-205
6	Control Panel PC , A	P1112640-004
-	)ibbon Carria.e	P1112640-206
/	Oppe Media "ensor #! ap "ensor Moveable&	P1112640-20-
1	Print Me\$'anism 203dpi Print Me\$'anism 300dpi	P1112640-20/ P1112640-201
10	Cover *pen "ensor	P1112640-210
11	+ower Media "ensor #, la\$2line "ensor&	P1112640-211
12	)ear ,e3els and Wi4i ,e3el or "tandard Models5 "erial6 7t'ernet6 No *ptions6 Wi4i #1 o ea\$'&)ear ,e3els and Wi4i ,e3el or (ealt'\$are Models5 "erial6 7t'ernet6 No *ptions6 Wi4i #1 o ea\$'&	P1112640-212 P1112640-213
13	Main +o.i\$,oard6 0" ,6 0" , (ost6 ,l%etoot'6 Mod%lar Conne\$itivity "lot	P1112640-014
13A	7t'ernet Mod%le "erial Mod%le Wi4i /02811a\$ Wireless Mod%le or 0"A and Canada Wi4i /02811a\$ Wireless Mod%le or 9apan Wi4i /02811a\$ Wireless Mod%le or all \$o%ntries e:\$ept 0"A6 Canada and 9apan	P1112640-015 P1112640-016 P1112640-01-A P1112640-01- , P1112640-01-C
14	)%bber 4eet #set o 4&	P10/03/3-021
15	4ront ,e3el6 "tandard Models 4ront ,e3el6 (ealt'\$are Models	P1112640-214 P1112640-215
16	Platen)oller 203dpi Platen)oller 300dpi ,earin.s or t'e platen roller6 +e t ;)i.'t #10 ea\$'&	P1112640-216 P1112640-21- P10/03/3-224
1-	Motor Assembly	P10/03/3-221
1/	Covers or (in.e #in\$!%des side and rear 'in.e \$overs&	P10/03/3-225
11	203 dpi Print'ead 300 dpi Print'ead	P1112640-21/ P1112640-211
Not "own	Op.rade <it - C%tter6 4=6 4%ll C%t	P1112640-230
	>ispenser6 4ront ,e3el	P1112640-231
	Media Core Adaptors6 4or 185% 2= ; 3= diameter \$ores	P1112640-054
	)ibbon Core Adapters %sed to a\$Sept 1 in\$' diameter ribbon \$ores #1 set&	P10/03/3-231
	,ase (o%sin. or t'e ,attery #W'en %p.radin. to battery power %n\$tionality6 also order t'e P10/03/3-603 battery&	P10/03/3-600
	,attery or >es2top Printers #W'en %p.radin. to battery power %n\$tionality6 also order t'e P10/03/3-600 battery 'o%sin.&	P10/03/3-603
	Adapter bra\$et t'at enables mo%ntin. a @>421A model in t'e same lo\$ation as an e:istin. !<420t model is \$%rrently mo%nted8 Allows %sa.e o t'e !<420t mo%ntin. 'ole pattern to mo%nt a @>421A8	P10/03/3-03-
	"'ippin. Pa\$2 - Pa\$2a.in. or s'ippin. t'e printer	P1112640-241
	Power "%pply Onatta\$'ed6 60W wit' 0" ; 7%ro Cords or ! ray Colored "tandard Models	105134-053
	Power "%pply Onatta\$'ed6 -5W6 24B wit' 0" Cord6 or W'ite Colored (ealt'\$are Models	P10-1103-030
	Power "%pply Atta\$'ed6 60W #power \$ord not in\$!%ded&	P1112640-24/
	Power Cord6 08"8 120B C7C320C13 #set o 5&	105150-014
	Power Cord6 7%ro 220B C7C320C13 #set o 5&	105150-015
	Power Cord6 08<8 240B C7C320C13 #set o 5&	105150-030
	Power Cord6 A%stralia 240B C7C320C13 #set o 5&	105150-021
	Power Cord6C'ina 220B C13 #set o 5&	105150-0- /
	Power Cord6 9apan 125B 9APAN C13 #set o 5&	105150-0-1
	Power Cord6 220B Ar.entina C13 #set o 5&	105150-0/0
	Power Cord610A N,) 141366 ,ra3il #set o 5&	P1033401
	Power Cord6 C136 10A6 C7C C\$rael #set o 5&	P1061022-020
	Power Cord Cndia6 10A6 C" 12136 C13 #set o 5&	P10/0/21
	Power Cord6 Aaiwan6 125B6 C7C320C13 #set o 5&	P10-1103-035