

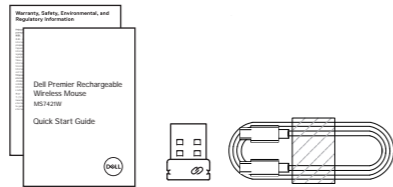


# Dell Premier Rechargeable Wireless Mouse MS7421W


## Quick Start Guide

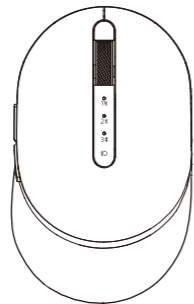


1

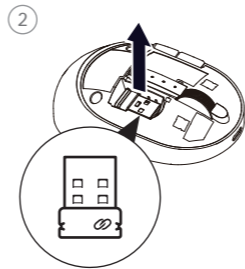

3

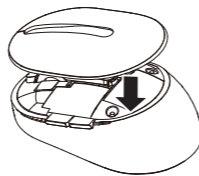


4

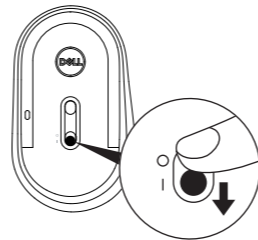


2

1

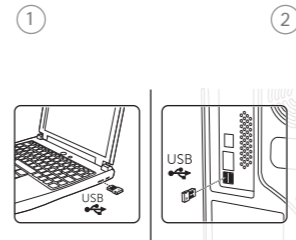


2

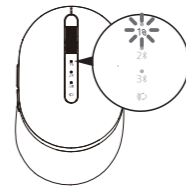


2

1

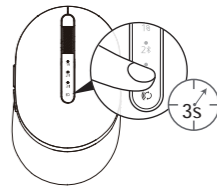


2

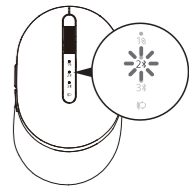

3




3

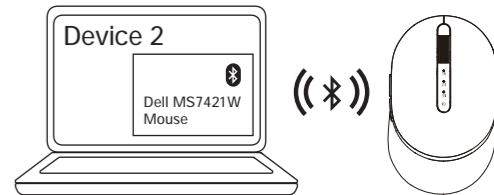


3✂


1

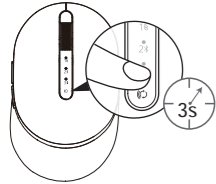


2

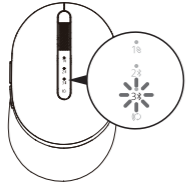



3

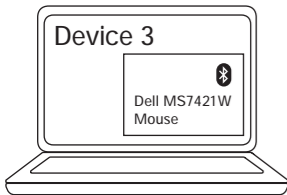


1

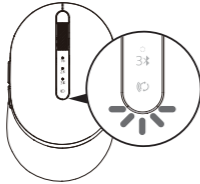

2

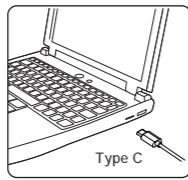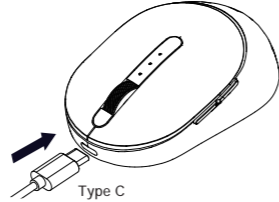


Type C

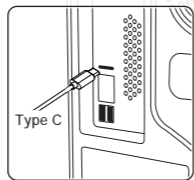

Type C



<https://www.dell.com/support/drivers>

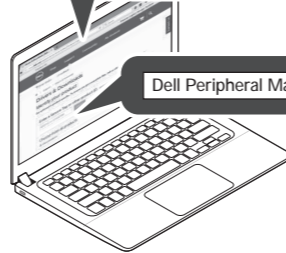




Dell Peripheral Manager

<https://www.dell.com/support>

[https://www.dell.com/regulatory\\_compliance](https://www.dell.com/regulatory_compliance)



1

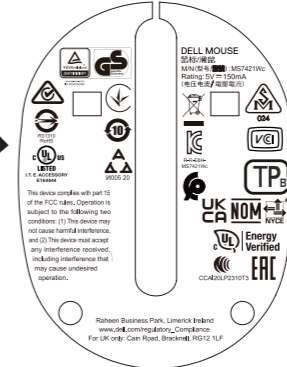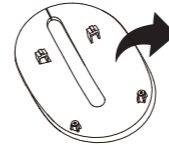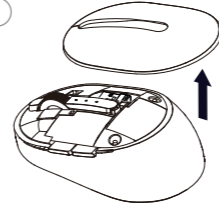

2

