

## How it works?



The INOGENI REMOTE is a device that can control the mixing function of SHARE2/SHARE2U and the switching function of CAM devices. You just need to apply correct wiring between the REMOTE and the INOGENI device. You will then be able to communicate with the device using the push buttons at the top of the device.

## Connectivity

**For SHARE2 – Use a simple RJ45 cable**




**!** Do not plug the cable to the LAN connection of the SHARE2. Plug it to the RS232 port.

**For SHARE2U and CAM series – You need to wire up a RJ45 cable to a terminal block plug.**




**!** Do not plug a RJ45 cable between the INOGENI device and the REMOTE.

**INOGENI device side**

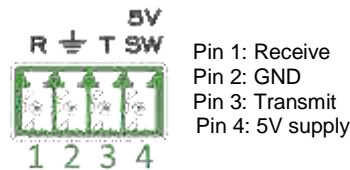

**REMOTE side**

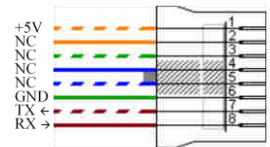

### Regarding +5V supply for REMOTE:



Under SHARE2/SHARE2U and CAM100/300, make sure to put switch number 6 to ON position.

## Technical support

If you need any support on how to operate this device, contact us at [support@inogeni.com](mailto:support@inogeni.com) for further assistance.

## Contact us

Come visit us if you have special needs or requirements. We are your specialists for custom USB 3.0, HDMI and SDI professional products tailored to your needs.

INOGENI, Inc.  
979 Ave de Bourgogne Suite 530  
Québec  
G1W 2L4 (QC) Canada

© Copyright 2018. INOGENI, Inc. All rights reserved.