

8-Port VGA Rackmount LCD Console | 19 in | 1U

RKCONS1908K

FR: Guide de l'utilisateur - fr.startech.com
DE: Bedienungsanleitung - de.startech.com
ES: Guía del usuario - es.startech.com
NL: Gebruiksaanwijzing - nl.startech.com
PT: Guia do usuário - pt.startech.com
IT: Guida per l'uso - it.startech.com
JP: 取扱説明書 - jp.startech.com

Product diagram

Front view



- | | |
|-----------------------------------|-----------------------------------|
| ① Handle | ⑦ Keyboard LEDs |
| ② Release switch | ⑧ Keyboard |
| ③ Display | ⑨ Touchpad |
| ④ Display menu buttons | ⑩ Rail |
| ⑤ Current port | ⑪ Mounting bracket (preinstalled) |
| ⑥ Port selection buttons and LEDs | |

*actual product may vary from photos

Back view



- | | |
|---------------------------|-------------------------|
| ① Power connection port | ⑤ Console keyboard port |
| ② Power switch | ⑥ Daisy chain port |
| ③ Ground connection screw | ⑦ Console monitor port |
| ④ Console mouse port | ⑧ Host ports |

Package contents

- LCD Rack Console x 1
- Mounting Rails x 4
- KVM Cables x 8
- M5 Cage Nuts x 8
- M5 Screws x 8
- Regional Power Cords (NA, JP, UK, EU, ANZ) x 5
- Quick-Start Guide x 1

Requirements

- 1U of rack space
- Grounding wire
- Power source
- Up to 8 computers or servers
- Phillips type screwdriver

Requirements are subject to change. For the latest requirements, please visit www.StarTech.com/RKCONS1908K.


Install the console

Tip! It's easier to install the console if another person helps you with the installation.

Warning: Use caution and proper lifting techniques when installing the LCD rack console.

1. Based on the mounting depth in the server rack that you are using, select the appropriate length of mounting rails.
2. Decide where in the server rack you want to install the LCD rack console.
3. Insert the M5 cage nuts (two per mounting post) into the square mounting holes on the mounting posts.
4. Align the rear mounting brackets (rails) with the M5 cage nuts on the corresponding mounting posts.
5. Insert a M5 screw (two per mounting post) through the rear mounting bracket (rail) and into the M5 cage nut. Do not tighten the M5 screws.
6. With assistance, slide the LCD rack console into the server rack guiding the rear mounting bracket (rails) into the rail assembly.
7. Insert a M5 screw (two per mounting post) through the front mounting bracket (rail) into the M5 cage nut.
8. Use a Phillips screwdriver to tighten the M5 screws.
9. Ensure that the rear rails are properly aligned.
10. Use a Phillips screwdriver to tighten the M5 screws.

Installation depth

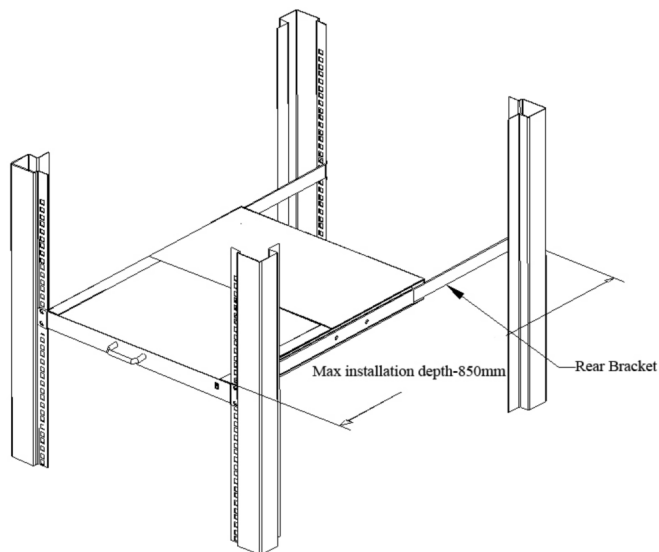

- To connect an optional monitor, keyboard, or mouse, connect the peripherals to the corresponding ports on the console.
- To daisy chain additional KVM switches, connect the switches to the Daisy chain port on the console.

Important considerations

- If you're installing the device in a closed or multi-unit rack assembly, ensure that the environmental conditions are within the unit's maximum and minimum specifications.
- Installing this unit in a rack or cabinet may reduce airflow. Consider your airflow requirement when selecting a location for installation.
- The device should be installed with an even mechanical load.
- It's recommended that the device be connected to a power source with over current protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.
- The device should be grounded appropriately.

Open the console

- Move the Release switch to the unlocked position.
- Use the Handle to pull the console out towards you until you hear the console click into place.
- Pull the Display up and position it at the desired angle.

Select ports

To quickly select a port, press the Port selection button that corresponds to the port that you want to select.

Close the console

- Lower the Display until it's flush against the Keyboard.
- Slide the switches located on the sides of the console forward and push the console in towards the rear of the rack.
- Release the switches and continue pushing the console the rest of the way into the rack.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe [B] est conforme à la norme NMB-003 du Canada. CAN ICES-3 (B)/NMB-3(B)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warranty Information

This product is backed by a two-year warranty. StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd.

45 Artisans Cres.
London, Ontario
N5V 5E9
Canada

StarTech.com LLP

2500 Creekside Pkwy.
Lockbourne, Ohio
43137
U.S.A.

StarTech.com Ltd.

Unit B, Pinnacle 15
Gowerton Rd.,
Brackmills
Northampton
NN4 7BW
United Kingdom

Connect the console

- Connect a grounding wire to the Ground connection screw on the console and to the ground.
- Connect one of the KVM cables to a computer or server and to one of the host ports on the console. You can connect up to 8 computers or servers.
- Connect the appropriate power cord for your region to the Power connection port on the console and to a power source.
- Use the Power switch to turn on the console.
- Open the console. For more information about how to do this, see the "Open the console" topic.

Note: The console makes two beeping sounds and the LED flashes three times when you turn on the console.

- Turn on the connected computer or servers.
- On the login screen on the console, do one of the following:
 - If you're using the console for the first time or you haven't set a user name and password, leave the text fields blank and press **Enter**.
 - If you have set a user name and password, enter the information in the corresponding text fields and press **Enter**.

Safety Measures

- Wiring terminations should not be made with the product and/or electric lines under power.
- Product installation and/or mounting should be completed by a certified professional.

Mesures de sécurité

- Les terminaisons de câblage ne doivent pas être effectuées lorsque le produit et/ou les câbles électriques sont sous tension.
- L'installation et/ou le montage du produit doit être réalisé par un professionnel certifié et dans le respect des normes locales et du code de construction local.

安全対策

- 電源が入っている状態の製品または電線の終端処理を行わないでください。
- 製品の設置やマウントは、使用地域の安全ガイドラインおよび建築基準に従い、有資格の専門業者が行うようにしてください。

Misure di sicurezza

- I terminali dei fili elettrici non devono essere realizzate con il prodotto e/o le linee elettriche sotto tensione.
- L'installazione e/o il montaggio dei prodotti devono essere eseguiti da un tecnico professionale certificato che conosca le linee guida locali sulle norme edilizie e sulla sicurezza.

Säkerhetsåtgärder

- Montering av kabelavslutningar får inte göras när produkten och/eller elledningarna är strömförda.
- Installation och/eller montering får endast göras av behöriga yrkespersoner och enligt gällande lokala förordningar för säkerhet och byggnormer.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help