


## Wall-Mounting Bracket for Patch Panel - 14 in. Deep

### Product IDs

RACK-2U-14-BRACKET  
RACK-10U-14-BRACKET  
RACK-14U-14-BRACKET

### Product Diagram

Front View

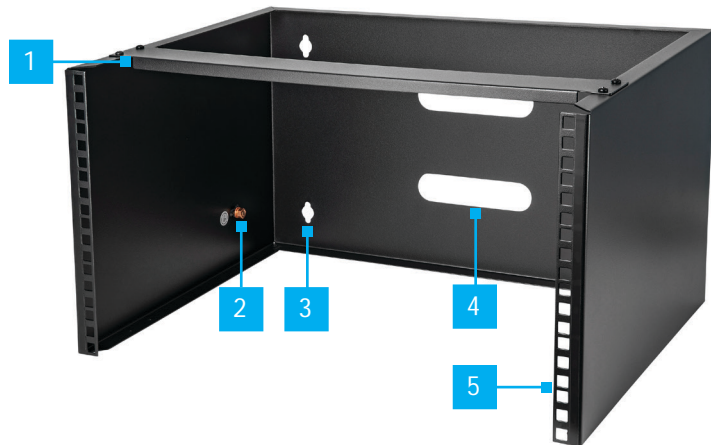

\*Product may vary from image

Component	Function
1 Stabilizer Bar	<ul style="list-style-type: none"> <li>Stabilize the <b>Wall-Mounting Bracket</b> when equipment is loaded</li> </ul>
2 Grounding Stud	<ul style="list-style-type: none"> <li>(Optional - Recommended) Attach a <b>Grounding Wire</b> (sold separately) to the <b>Wall-Mounting Bracket</b> and to an <b>Earth Ground Connection</b></li> </ul>
3 Wall Mounting Holes (x 4)	<ul style="list-style-type: none"> <li>Wall mount the <b>Wall-Mounting Bracket</b></li> </ul>

4 Cable Management Slots	<ul style="list-style-type: none"> <li>(Optional - Recommended) Route the equipment <b>Cables</b> <ul style="list-style-type: none"> <li>Cut an appropriately sized hole behind the <b>Wall-Mounting Bracket</b> to route the <b>Cables</b>. -- Or --</li> <li>The <b>Cables</b> can be routed out of the top/bottom of the <b>Wall-Mounting Bracket</b></li> </ul> </li> </ul>
5 Cage Nut Holes	<ul style="list-style-type: none"> <li>Use <b>Cage Nuts</b> to mount equipment into the <b>Wall-Mounting Bracket</b></li> </ul>

### Product Information

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit:

[www.StarTech.com/RACK-2U-14-BRACKET](http://www.StarTech.com/RACK-2U-14-BRACKET)

[www.StarTech.com/RACK-10U-14-BRACKET](http://www.StarTech.com/RACK-10U-14-BRACKET)

[www.StarTech.com/RACK-14U-14-BRACKET](http://www.StarTech.com/RACK-14U-14-BRACKET)

### Requirements

- Phillips Head Screwdriver
- (Optional - Recommended) Grounding Wire
- (Optional - Recommended) Earth Ground Connection
- (Optional) 10mm Wrench
- (Optional) Cage Nut Tool

### Warnings

- Read the entire manual and ensure the instructions are fully understood before assembling and/or using this product.
- Before adding equipment to this product, ensure this product has been properly mounted.
- The mounting hardware included with this product might not be adequate for some wall structures. If lacking the necessary expertise to wall mount this product, contact a construction professional to install the wall mount or to provide specific mounting instructions for the wall structure.
- Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment are possibilities. This product can support the following weight: up to 35 kg (77.2 lb.).

- Wall structures vary. Ensure the type of wall structure and mounting hardware will properly support the mounted equipment. Failure to do so might result in personal injury and/or equipment damage. The wall structure should be capable of supporting at least four times the weight of the mounted equipment.

## Package Contents

- Wall-Mounting Bracket x 1
- M6 Cage Nuts x 8 (RACK-2U-14-BRACKET)  
x 40 (RACK-10U-14-BRACKET)  
x 56 (RACK-14U-14-BRACKET)
- M6 Cage Screws x 8 (RACK-2U-14-BRACKET)  
x 40 (RACK-10U-14-BRACKET)  
x 56 (RACK-14U-14-BRACKET)
- M6 Plastic Washers x 8 (RACK-2U-14-BRACKET)  
x 40 (RACK-10U-14-BRACKET)  
x 56 (RACK-14U-14-BRACKET)
- Concrete Wall Anchors x 4
- Mounting Screws x 4
- Quick-Start Guide x 1

## Installation

### Mount the Wall-Mounting Bracket

- Product mounting should be completed by a certified professional as per the local safety and building code guidelines.
- **Wall Mounting Holes** are spaced 16 inches apart for mounting into 16 inch (center to center) spaced **Wall Studs**.

### (Optional - Recommended) Grounding the Wall-Mounting Bracket

1. Remove the **M6 Nut** on the **Grounding Stud**, using a **10mm Wrench**.
2. Slide the appropriately sized **Grounding Lug** from an **Earth Grounding Wire** over the **Grounding Stud**.
3. Connect the **Equipment Grounding Wire(s)** to the **Grounding Stud** as required.
4. Thread the **M6 Nut** onto the **Grounding Stud** and tighten, using a **10mm Wrench**.
5. Attach the other end of the **Earth Grounding Wire** to an **Earth Ground Connection**.

### Adding Equipment to the Wall-Mounting Bracket

Use the included **M6 Cage Nuts**, **M6 Cage Screws**, and **M6 Plastic Washers** to install equipment into the **Wall-Mounting Bracket**.

1. Insert the **Wing** (side) of an **M6 Cage Nut** into the back of the a **Cage Nut Hole**.
2. Insert the second **Wing** of the **M6 Cage Nut** into the selected **Cage Nut Hole**, using pressure by hand, or with a **Cage Nut Tool**.
3. Repeat steps 1 and 2 to insert the desired number of **Cage Nuts**.
4. Thread an **M6 Plastic Washer** over an **M6 Cage Screw**. Repeat until the desired number of **M6 Cage Screw Assemblies** have been prepared.
5. Align the **Mounting Holes** in the **Equipment** with the **M6 Cage Nuts** installed in steps 1-3.
6. Insert the **M6 Cage Screw Assemblies** through the **Mounting Holes** in the **Equipment** and into the **M6 Cage Nuts** and tighten, using a **Phillips Head Screwdriver**.

## Regulatory Compliance

### Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

### Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to [www.startech.com/warranty](http://www.startech.com/warranty).

## Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

### StarTech.com Ltd.

45 Artisans Crescent  
London, Ontario  
N5V 5E9  
Canada

### StarTech.com LLP

4490 South Hamilton  
Road  
Groveport, Ohio  
43125  
U.S.A.

### StarTech.com Ltd.

Unit B, Pinnacle 15  
Gowerton Road  
Brackmills,  
Northampton  
NN4 7BW  
United Kingdom

### StarTech.com Ltd.

Siriusdreef 17-27  
2132 WT Hoofddorp  
The Netherlands

FR: startech.com/fr  
DE: startech.com/de  
ES: startech.com/es  
NL: startech.com/nl  
IT: startech.com/it  
JP: startech.com/jp