

**EN** Installation Manual: [www.arctic.ac/fileadmin/f11lp/manual\\_en.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_en.pdf)  
**DE** Montageanleitung: [www.arctic.ac/fileadmin/f11lp/manual\\_de.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_de.pdf)  
**FR** Guide d'installation: [www.arctic.ac/fileadmin/f11lp/manual\\_fr.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_fr.pdf)  
**ES** Manual de instalación: [www.arctic.ac/fileadmin/f11lp/manual\\_es.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_es.pdf)  
**PT** Manual de Instalação: [www.arctic.ac/fileadmin/f11lp/manual\\_pt.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_pt.pdf)  
**SE** Installationsmanual: [www.arctic.ac/fileadmin/f11lp/manual\\_se.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_se.pdf)

**CZ** Instalační příručka: [www.arctic.ac/fileadmin/f11lp/manual\\_cz.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_cz.pdf)  
**HU** Telepítési kézikönyv: [www.arctic.ac/fileadmin/f11lp/manual\\_hu.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_hu.pdf)  
**PL** Instrukcja montażu: [www.arctic.ac/fileadmin/f11lp/manual\\_pl.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_pl.pdf)  
**NL** Installatiehandleiding: [www.arctic.ac/fileadmin/f11lp/manual\\_nl.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_nl.pdf)  
**RU** Руководство пользователя: [www.arctic.ac/fileadmin/f11lp/manual\\_ru.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_ru.pdf)  
**IT** Manuale di installazione: [www.arctic.ac/fileadmin/f11lp/manual\\_it.pdf](http://www.arctic.ac/fileadmin/f11lp/manual_it.pdf)

### Accessories

<p>Screw (M3)</p> <p>x 4</p>	<p>Push pin</p> <p>x 4</p>	<p>Mounting bracket</p> <p>x 2</p>
------------------------------	----------------------------	------------------------------------

### Uninstall Intel stock cooler

- CPU FAN
- 
- 
- 4 Clean and remove the paste residue with a tissue paper carefully.

Tissue

### Install the Freezer 11 LP

- 
- Socket 1150, 1155, 1156

Socket 775
- 
- 
- CPU FAN

### Thermal Compound

Thermal compound is pre-applied to the heat sink of this cooler. If the cooler has to be installed a second time, we highly recommend MX-4 from ARCTIC. This is the only compound that can guarantee optimal performance in combination with the surface of our heat sink.

### Warranty

This ARCTIC product includes a six-year limited warranty. Please visit [warranty.arctic.ac](http://warranty.arctic.ac) for further details.

© 2013 ARCTIC (HK) Ltd. All Rights Reserved.