


 




Getting Started: How to unlock the drive

datAshur®



EASY TO USE

YOUR datAshur SHIPS WITH DEFAULT PIN CODE 1-1-2-2-3-3-4-4

1. *Press KEY Button	 will blink together
2. *Within 10 seconds enter User PIN (factory default PIN 1-1-2-2-3-3-4-4) and press KEY Button 	 will illuminate together for approximately 4 seconds and then change to blinking 
3. Connect the datAshur into USB port within 30 seconds	 will illuminate and remain solid  will illuminate and flicker
4. The datAshur can now be accessed as any other USB storage device	Your computer assigns a new drive letter (e.g. F: or G:)
5. To lock the datAshur, save all data and unplug the drive	All indicators will turn off Drive is now locked

*before connecting



DATALOCK® SECURED
CLEVX, LLC, U.S. PATENT
istorage-uk.com/clevx-patents



Please note:

The datAshur drive may need to be charged before use for 30-60 minutes by inserting into a powered USB port.

CAUTION

**FOR SECURITY, CHANGE
FACTORY DEFAULT PIN**
SEE OTHER SIDE FOR INSTRUCTIONS

Quick Start Guide



www.istorage-uk.com











How to change User PIN:



CAUTION

FOR SECURITY, CHANGE FACTORY DEFAULT PIN

PIN must not be sequential or all the same number e.g. 1-2-3-4-5-6-7 or 3-3-3-3-3-3-3

1. Press KEY Button	 will blink together
2. Enter User PIN (factory default PIN 1-1-2-2-3-3-4-4) and press KEY Button	 will illuminate together for approximately 4 seconds and then change to blinking 
3. Press and hold KEY Button for 3 seconds	 will illuminate together
4. While  are illuminated enter New User PIN (must be 7-15 digits) and press KEY Button	 will blink in unison
5. Re-enter New User PIN and press the KEY Button	 will illuminate and then change to blinking 
Insert the datAshur into USB port	NB  blinks if 1 st and 2 nd entries match  blink alternately if PIN entry error

datAshur®



Quick Start Guide

Step 1
Enter your PIN



Step 2
Plug & Play



Step 3
Unplug to automatically lock

Download a complete

User Guide at

www.istorage-uk.com

