


Universal Keyed Laptop Lock | Pivot and Rotate Hinge

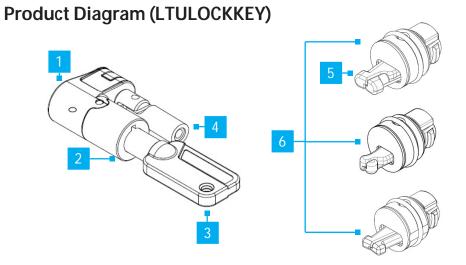

	Components	Function
1	Adapter Slot	Used to house the Adapter.
2	Keyhole	Used to lock and unlock the Lock from a Lock Slot.
3	Key	• Used to lock or unlock the Keyed Laptop Lock .
4	Security Cable	Used to secure a Device to a secure stationary object.
5	Locking Hook	• Used to connect the Lock to a Lock Port .
6	Adapter	 Used to change the Lock head to accommodate di erent lock slots. Standard Slot = 3x7 mm slot Wedge Slot = 3.2x4.5 mm slot Nano Slot = 2.5x6 mm slot

Requirements

For the latest requirements, please visit <u>www.startech.com/LTULOCKKEY</u>

Installing a Lock Adapter

 
- 1. Select the **Adapter** that ts the **Lock Slot** on the **Device** you are securing.
- With the Lock in an unlocked state, insert the Adapter into the Adapter Slot on the Lock, making sure that the Lock Adapter is pushed all the way into the Adapter Slot and ush with the Lock.

Note: The **Adapter** does not lock into the **Adapter Slot** until the **Lock** is inserted into a **Lock Slot** and the **Lock Button** is engaged (pressed).

Securing a Device

Using the Key

1. Wrap the **Security Cable** around a secure stationary object and pull the **Keyed Laptop Lock** through the loop on the **Security Cable**.



Security Cable

- 2. Insert the **Key** into the **Lock**. Push and turn the **Key** counter-clockwise until the lock mechanism disengages the **Lock Slot** on a **Laptop**, **Docking Station**, or other compatible **Device**.
- 3. Remove the \mathbf{Key} from the \mathbf{Lock} .

Using the Push-to-Lock Function

Note: In order to use this function the lock must be in the unlocked state.

- 1. Insert the Locking Hook into a Lock Slot on the Device.
- 2. Push the Lock button (key hole) to engage the locking mechanism.

Unlocking a Device

- 1. Insert the **Key** into the **Lock**. Push and turn the **Key** clockwise to disengage the lock mechanism from the Lock Slot.
- 2. Gently pull the **Lock** out of the **Lock Slot**.
- 3. Turn the **Key** a quarter turn counter-clockwise and remove it from the **Lock**.

Removing a Lock Adapter

- 1. Using the Key, unlock the Keyed Laptop Lock and remove it from the Device.
- 2. With the Keyed Laptop Lock unlocked, pull the Adapter out of the Adapter Slot.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of thirdparty companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Warranty Information

This product is backed by a two-year warranty. For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their o cers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of pro ts, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Safety Measures

If product has an exposed circuit board, do not touch the product under power.

Mesures de sécurité

· Si l'un des circuits imprimés du produit est visible, ne pas touchez le produit lorsqu'il est sous tension. 安全対策

製品に露出した状態の回路基盤が含まれる場合、電源が入っている状態で製品に触らないでください。

Misure di sicurezza

Se il prodotto ha un circuito stampato visibile, non toccare il prodotto quando è acceso.

Säkerhetsåtgärder

Rör aldrig vid enheter med oskyddade kretskort när strömmen är påslagen.

45 Artisans Cres London, Ontario N5V 5E9 Canada

2500 Creekside Parkwy Lockbourne, Ohio 43137 U.S.A.

Unit B, Pinnacle 15 Gowerton Rd. Brackmills Northampton NN4 7BW United Kingdom

StarTech.com Ltd. StarTech.com Ltd. FR: fr.startech.com DE: de.startech.com ES: es.startech.com NL: nl.startech.com IT: it.startech.com JP: ip.startech.com