



RAZER RIPSAW X

MASTER GUIDE

Ultimate visual fidelity awaits with the **Razer Ripsaw X**—a dedicated capture card that connects your favorite cameras directly to your stream. With up to 4K 30 FPS passthrough and ultra-low latency for immersive quality, unrivalled performance now comes in a compact form factor.

 
CONTENTS

1. WHAT'S INSIDE / WHAT'S NEEDED	3
2. LET'S GET YOU COVERED	4
3. TECHNICAL SPECIFICATIONS.....	5
4. GETTING STARTED.....	6
5. SAFETY AND MAINTENANCE	7
6. LEGALESE.....	8

1. WHAT'S INSIDE / WHAT'S NEEDED

WHAT'S INSIDE

- Razer Ripsaw X

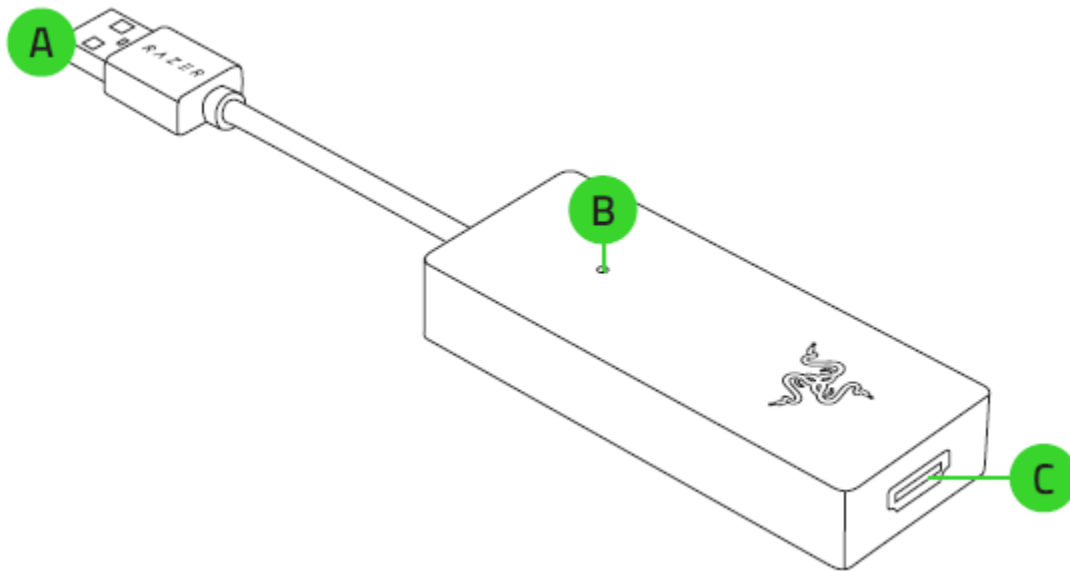

- A. USB 3.0 connector
- B. Status indicator
- C. HDMI 2.0 input port

- Important Product Information Guide

WHAT'S NEEDED

- DSLR or Mirrorless camera / Camcorder / Action camera with HDMI output*
- Desktop / Laptop (Windows® 10 64-bit or higher) with a USB 3.0 port

CPU:

- a. Desktop: Intel® Core™ i5-6100 / AMD® Ryzen™ 5 1400 (or higher)
- b. Laptop: Intel® Core™ i7-4810MQ / AMD® Ryzen™ 5 5500U (or higher)

 
GPU:

- a. Desktop – NVIDIA® GeForce® GTX 660 (or higher)
 - b. Laptop – NVIDIA® GeForce® GTX 870M (or higher)
- Memory: 8 GB Dual-channel (or higher)

*Cameras with clean HDMI output are recommended. For a full list of compatible cameras, visit support.razer.com.

2. LET'S GET YOU COVERED

You've got a great device in your hands, complete with a 1-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at razerid.razer.com

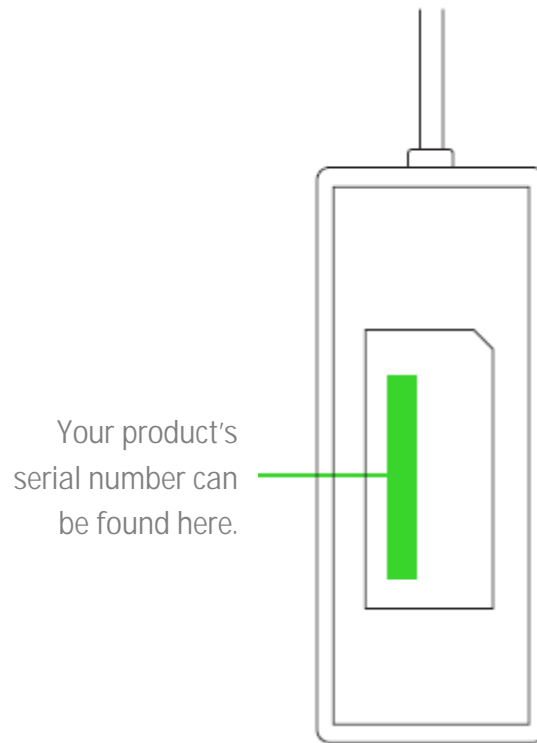


Got a question? Ask the Razer Support Team at support.razer.com

3. TECHNICAL SPECIFICATIONS


- Max Video Input resolution: 3840 x 2160 @ 60fps, 1920 x 1080 @ 120fps
- Max Video capture resolution: 3840 x 2160 @ 30fps, 1920 x 1080 @ 120fps
- Output Interface: USB 3.0
- Input Interface: HDMI 2.0
- Output: USB UVC/UAC Audio-Video Raw Data

4. GETTING STARTED

 1. Connect the capture card to any of the USB 3.0 ports on your PC.

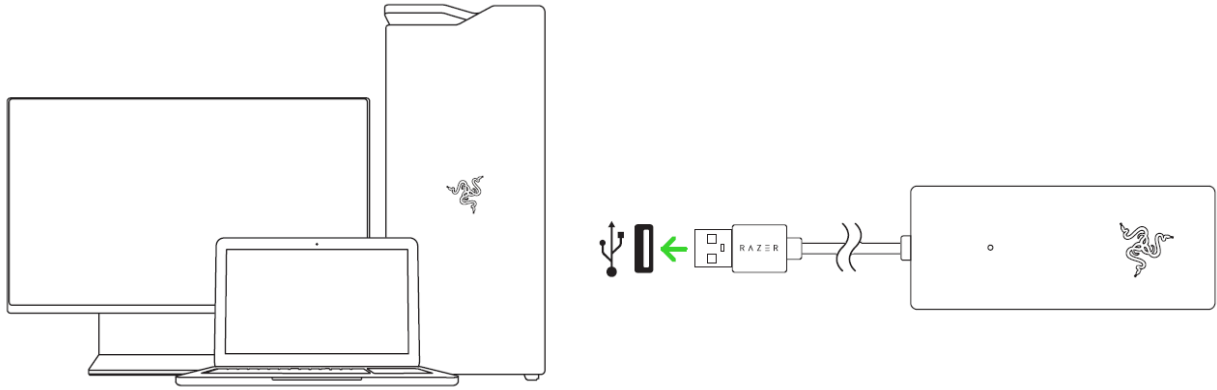

 2. Using an HDMI cable (not included), connect your camera to the HDMI 2.0 input port of the capture card.

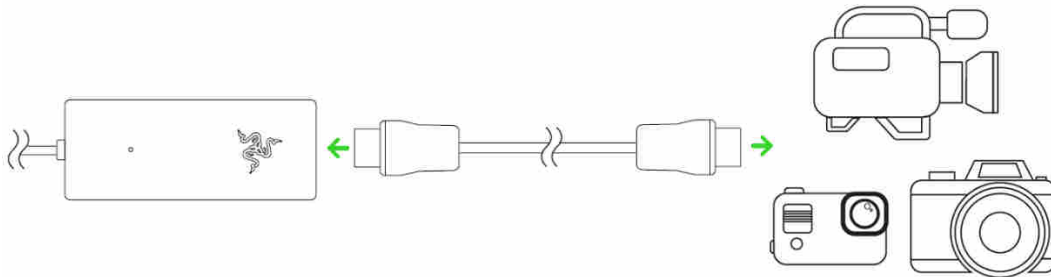

3. Launch any camera application and set the Razer Ripsaw X as its default camera. The capture card's status indicator will light up, indicating that the device is active.

i For best results, it's recommended that you use a compatible dummy battery or an AC power adapter with your camera and disable its Auto Shutoff feature, so your camera stays active on your stream.

5. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Ripsaw X, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to support.razer.com for support.

Do not take apart the device and do not attempt to operate it under abnormal current loads. Doing so will void your warranty.

Do not use or install the device and its components near water, moisture, solvents, or other wet surfaces, nor expose the device to high temperatures or direct sunlight for an extended period of time.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

6. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

©2021 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, “For Gamers. By Gamers.”, and “Powered by Razer Chroma” logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks are the property of their respective owners.

The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. (“Razer”) may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Ripsaw X (the “Product”) may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit [razer.com/warranty](https://www.razer.com/warranty).

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer’s liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.