


## Rack Unit Labels | 2 Strips Included

### Product Diagram (RKUNITAPE)

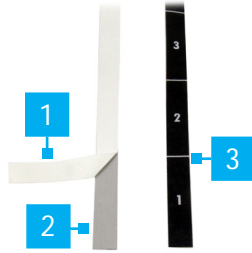

Port	Function
1	Removable Backing <ul style="list-style-type: none"> <li>Remove backing to expose the Adhesive Surface.</li> </ul>
2	Adhesive Surface <ul style="list-style-type: none"> <li>Used to secure the Unit Label in place on the rack.</li> <li><b>Note:</b> The unit labels are easy to apply and, if necessary, you can reuse them.</li> </ul>
3	U-marking <ul style="list-style-type: none"> <li>Used to indicate U space.</li> <li><b>Note:</b> Each unit label is 52 rack units long, but you can cut them to fit properly in your server rack.</li> </ul>

### Requirements

- Server rack
- Isopropyl alcohol
- Scissors (if you need to cut the label)

### Installation

#### Preparing the Rack Surface

The surface that you apply the unit labels to must be dry and free of contaminants. Otherwise, the adhesive won't stick to the surface.

1. To clean the surface, use isopropyl alcohol or a similar substance to remove any dirt or contaminants.
2. Dry the surface thoroughly.

#### Applying the Unit Label

The unit label has some stretch and flex to it. Make sure that you line up the label with the corresponding rack units as you apply the label.

1. If necessary, use scissors to cut the unit label to fit the server rack that you're using.
  - Note:** Make sure that you cut the unit label along the U markings on the label.
2. Peel off a small section of the removable backing from the label.
3. Place the exposed adhesive surface on the server rack, making sure to line up the U markings on the label with the server rack units.
4. Apply firm and continuous pressure to the unit label and rack as you peel off the removable backing.

#### Removing the Unit Label

1. Remove the unit label from the server rack, grab one end of the label and carefully pull it off of the rack.
2. Clean the surface, use isopropyl alcohol or a similar substance to remove any dirt or contaminants.
3. If necessary, reapply the unit label to another server rack.

### What is a U?

- Server racks are classified by U size and depth. U is the standard unit of measurement used to designate the vertical usable space of a server rack, or the height of racks and cabinets. 1U is equal to 1.74 in. For example, if a rack is designated as 20U, it has 20 rack spaces for equipment and has 35 in. (20 times 1.75) of vertical usable space.

**Note:** The Unit Label includes two unit labels that are each 52 rack units long.

#### **Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols**

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

#### **Warranty Information**

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to [www.startech.com/warranty](http://www.startech.com/warranty).

#### **Limitation of Liability**

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

<b>StarTech.com Ltd.</b>	<b>StarTech.com LLP</b>	<b>StarTech.com Ltd.</b>	FR: fr.startech.com
45 Artisans Cres	2500 Creekside	Unit B, Pinnacle 15	DE: de.startech.com
London, Ontario	Parkwy	Gowerton Rd,	ES: es.startech.com
N5V 5E9	Lockbourne, Ohio	Brackmills	NL: nl.startech.com
Canada	43137	Northampton	IT: it.startech.com
	U.S.A.	NN4 7BW	JP: jp.startech.com
		United Kingdom	