 


Doro 2404

Quick Start Guide

English

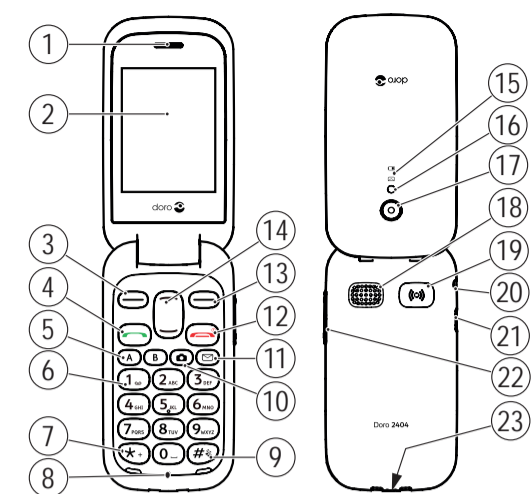

www.doro.com

- | | |
|-------------------------------------|--------------------------------|
| 1. Earpiece | 13. Right selection button |
| 2. Display | 14. Scroll buttons |
| 3. Left selection button | 15. Phone indicators |
| 4. Call button | 16. Flash/torch |
| 5. Speed dials | 17. Camera |
| 6. Voicemail | 18. Loudspeaker |
| 7. International prefix/symbols | 19. Assistance button |
| 8. Microphone | 20. Headset socket |
| 9. Silent / Input method | 21. Charging socket |
| 10. Camera shortcut/ Take a picture | 22. Volume control |
| 11. Message shortcut | 23. Charging cradle connectors |
| 12. End call / Power on/off | |

 
Note! All illustrations are for illustrative purposes only and may not accurately depict the actual device. The items supplied with your phone might vary depending on the software and accessories available in your region or offered by your service provider. You can obtain additional accessories from your local Doro dealer. The supplied accessories provide the best performance with your phone.

1. GET STARTED

SIM card, memory card and battery

Remove the battery cover.

Be careful not to damage your fingernails when you remove the battery cover. Do not bend or twist the battery cover excessively as it may be damaged.

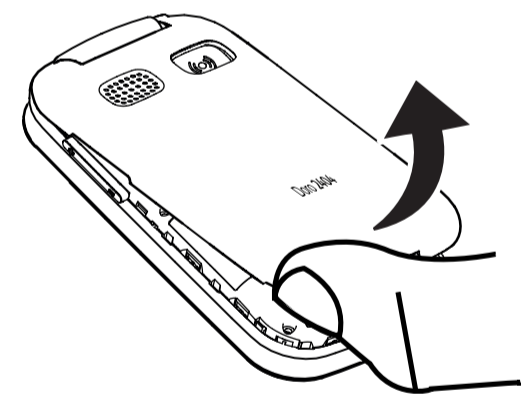


Insert the SIM cards and the SD card.

Remove the battery if it is already installed.

- Insert the first SIM card by gently sliding it into the SIM1 card slot.
- Insert the second SIM card by gently sliding it into the SIM2 card slot.

Note! If you are using only one SIM card, we recommend using SIM1.

 
- Optional:** Locate the SD card holder. The device works with or without a SD card

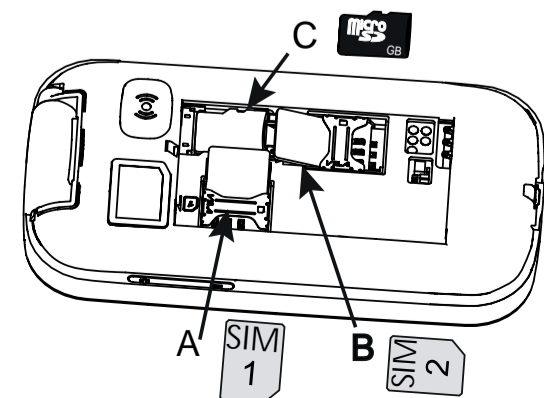

Note! Make sure that the card's contacts are facing downwards and that the cut off corner is as shown. Take care not to scratch or bend the contacts on the cards. This device accepts micro SIM cards (3FF) and microSD card.

Insert the battery

 Insert the battery by sliding it into the battery compartment with the contacts facing downwards to the right. Replace the battery cover.

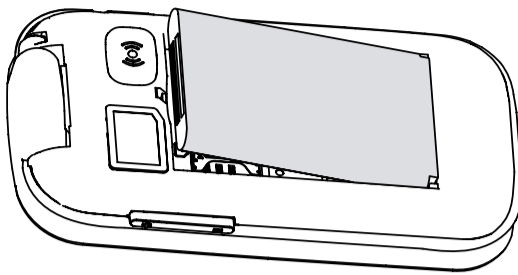

Charge the phone

CAUTION

Only use batteries, charger and accessories that have been approved for use with this particular model. Connecting other accessories may be dangerous and may invalidate the phone's type approval and guarantee.

When the battery is running low, is displayed and a warning signal is heard.

- Connect the mains adapter to the wall socket and to the charging socket .

Tip: It is recommended to remove the protective plastic film from the display to enhance the visibility.

2. GET TO KNOW YOUR PHONE

Turn the phone on and off

- Press and hold the red button on the phone to turn it on/off. Confirm with Yes to power off.
- If the SIM card is valid but protected with a PIN code (Personal Identification Number), PIN is displayed. Enter the PIN code and press OK. Delete with Clear.

Note! If PIN and PUK codes were not provided with your SIM card, please contact your service provider.

Attempts: # shows the number of PIN attempts left. When no more attempts remain, PIN blocked is displayed. The SIM card must now be unlocked with the PUK code (Personal Unblocking Key).

- Enter the PUK code and confirm with OK.
- Enter a new PIN code and confirm with OK.
- Re-enter the new PIN code and confirm with OK.

Start-up wizard

When starting the telephone for the first time, you can use the start-up wizard to set some basic settings.

Tip: You can run the start-up wizard later if you want.

Step-by-step instructions

The arrow () indicates next action in step-by-step instructions. To confirm an action, press OK. To select an item, scroll or highlight the item using and then press OK.

Enter text

- Press a numerical key repeatedly until the desired character is shown. Wait a few seconds before entering the next character.
- Press * for a list of special characters. Select the desired character with and press OK to enter it.
- Use +/- or to move the cursor within the text.
- Press # to cycle upper case, lower case and numerals.
- Press and hold # to change writing language.

Predictive text

In some languages you can use the input method which uses a dictionary to suggest words.

- Press Menu \rightarrow Settings \rightarrow Messages \rightarrow Predictive text.
- Select On to enable, or Off to disable.
- Press OK to confirm.

Change language, time and date

The default language is determined by the SIM card.

3. CALLS

Make a call

- Enter the phone number including the area code. Delete with Clear.
- Press to dial. Press Abort to cancel the call.
- Press to end the call.

Note! For international calls, always use + before the country code for best operation. Press * twice for the international prefix +.

Call from the phonebook

- Press Name to open the phonebook.
- Use to scroll through the phonebook, or quick search by pressing the key corresponding to the first letter of the name.
- Press Options \rightarrow Call, alternatively, press to dial the selected entry, or press Back to return to standby.

Receive a call

- Open the flip and press to answer, or press Silent to switch off the ring signal and then Reject/close the flip to reject the call (busy signal). Alternately, press to reject the call

directly.

- Press /close the flip to end the call.

Volume control

Use +/- or to adjust the sound volume during a call. The volume level is indicated on the display.

Silent

Silent is a fixed profile with keypad tone, message tone and ring tone disabled, while vibration, tasks and alarm are unchanged.

- Press and hold # to activate and to deactivate silent.

Call options

During a call the soft keys () give access to additional functions.

Speed dial

Use A-B, 0 and 2-9 to speed dial an entry from standby.

- Press and hold the corresponding button to dial.

Add speed dial numbers

- Press Menu \rightarrow Settings \rightarrow Phonebook \rightarrow Speed dial.

- Select A \rightarrow Add and select an entry from the phonebook.
- Press OK to confirm.
- Repeat to add speed dial entries for buttons B, 0, 2-9.

SOS calls

As long as the phone is switched on, it is always possible to place an SOS call by entering the main local emergency number for your present location followed by .

Call log

Received, missed, and dialled calls are saved in a combined call log. 20 calls of each type can be stored in the log. For multiple calls related to the same number, only the most recent call is saved.

- Press .
- Use to scroll through the call log.

= Received call

= Dialled call

= Missed call

- Press to dial, or Options.

4. PHONEBOOK

The Phonebook can store 100 entries with 3 phone numbers in each entry.

Add contact

- Press Menu \rightarrow Phonebook \rightarrow -New contact- \rightarrow Add.
- Enter a Name for the contact, see Enter text. Delete with Clear.
- Use to select Mobile, Home or Office, and enter the phone number(s) including the area code.
- When done, press Save.

ICE (In Case of Emergency)

In the event of a trauma, it is critical to have this information as early as possible to increase the chances of survival. Add ICE contact to improve your own safety. First responders can access additional information such as medication and next of kin from your phone in case of an emergency. All fields are optional, but the more information provided the better.

- Press Menu \rightarrow Phonebook \rightarrow ICE.
- Use to scroll the list of entries.
- Press Edit to add or edit information in each entry. Delete with Clear.
- Press Save when done.

Settings

- Press Menu \rightarrow ICE.

5. ASSISTANCE BUTTON

The assistance button allows easy access to contact your predefined help numbers should you need help. Make sure that the assistance function is activated before use.

Make an assistance call

- When help is needed, press and hold the assistance button for 3 seconds, or press it twice within 1 second. The assistance call begins after a delay of 5 seconds. In this time you can prevent a possible false alarm by pressing .
- An assistance text message (SMS) is sent to all recipients. The first recipient in the list is dialled. If the call is not answered within 25 seconds, the next number is dialled. Dialling is repeated 3 times or until the call is answered, or until is pressed.

CAUTION

When an assistance call is activated the phone is pre-set to handsfree mode. Do not hold the device near your ear when the handsfree mode is in use, because the volume may be extremely loud.

Settings

- Press Menu \rightarrow Settings \rightarrow Assistance.

6. MESSAGES

Create and send text messages

- Press shortcut button , or press Menu \rightarrow Messages \rightarrow Create new \rightarrow SMS.
- Write your message, see Enter text, then press To.
- Select a recipient from Phonebook. Alternatively, select Enter number to add recipient manually and press Done.
- Select Add to add more recipients. You can modify the recipients by selecting one and press Options \rightarrow Edit/Delete/Delete all.
- When done, press Send.

Create and send picture messages

Both you and the recipient must have subscriptions that support picture message. The settings for picture message are supplied by your service provider and can be sent to you automatically via text message.

- Press shortcut button , or press Menu \rightarrow Messages \rightarrow Create new \rightarrow MMS.
- Write your message, see Enter text.
- Press Options \rightarrow Add picture:
 - My pictures to select a file.
 - Take picture to use the camera to take a picture.

Note! To keep best picture quality, send only one picture per message.

You can also Add sound, Add video, and Preview MMS using the Options menu.

- Press Options \rightarrow Add subject and enter your subject, then press Done.
- Press Options \rightarrow To and select recipient from Phonebook. Alternatively, select Enter number to add recipient manually and press Done.
- Press Add to add more recipients.

- Press Send to send.

Settings

- Press Menu \rightarrow Settings \rightarrow Messages.

7. CAMERA (TAKE PHOTOS)

- Press shortcut button . Alternatively press Menu \rightarrow Camera.
- Press to take the photo.
- Press Options or press Back to take a new photo (if you do not make any selection the picture is saved).

Settings

- Press Menu \rightarrow Settings \rightarrow Camera.

