



Mounting Options

1 Floor Stand Mounting

USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

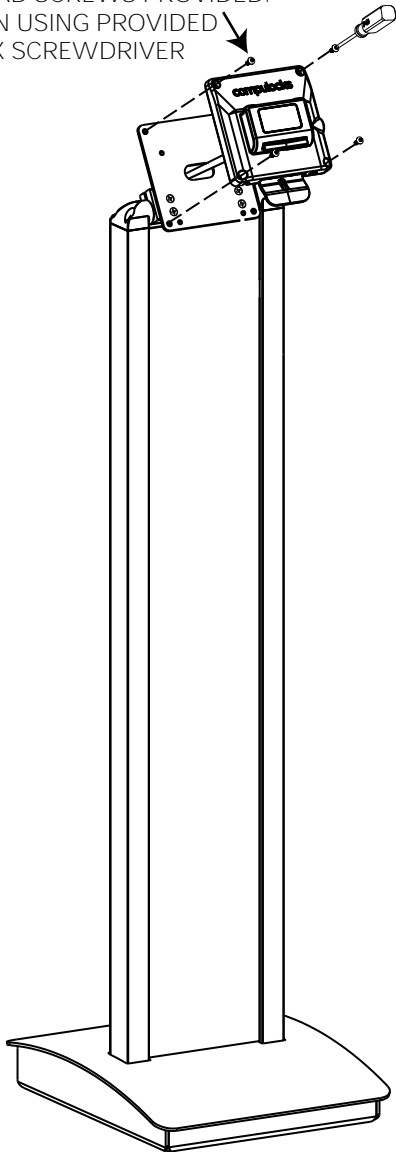


2 Counter Stand Mounting

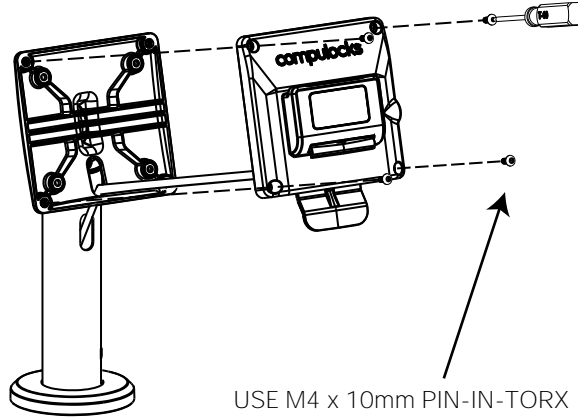


USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

3 Wall Arm Mounting

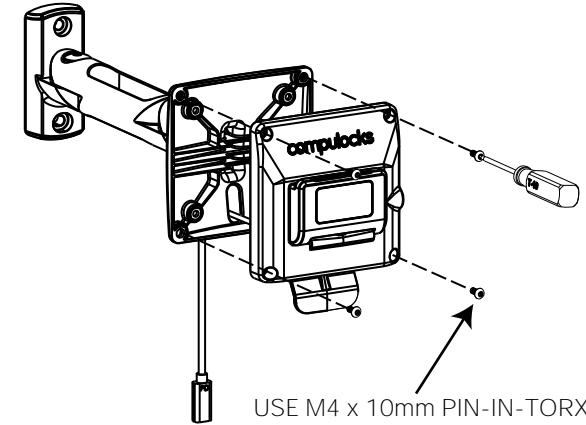


USE M4 x 10mm PIN-IN-TORX
BUTTON HEAD SCREWS PROVIDED.
TIGHTEN USING PROVIDED
TORX SCREWDRIVER

4 Direct Mounting To Wall

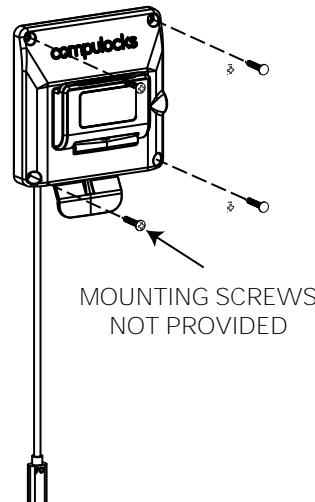

MOUNTING SCREWS
NOT PROVIDED


Optional Add-On: Portrait To Landscape Rotation Plate

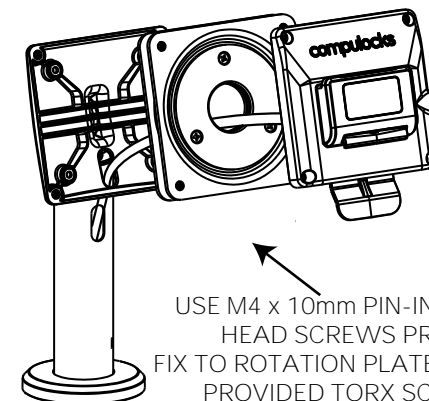

USE M4 x 10mm PIN-IN-TORX BUTTON
HEAD SCREWS PROVIDED TO
FIX TO ROTATION PLATE. TIGHTEN USING
PROVIDED TORX SCREWDRIVER.
USE SCREWS PROVIDED WITH ROTATION PLATE
TO SECURE TO STAND or ARM


Placing Tablet with Connector to Dock Station

1

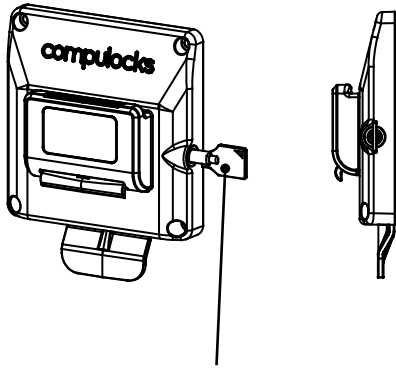


USE KEY TO UNLOCK THE LOCK.
REMOVE KEY

2

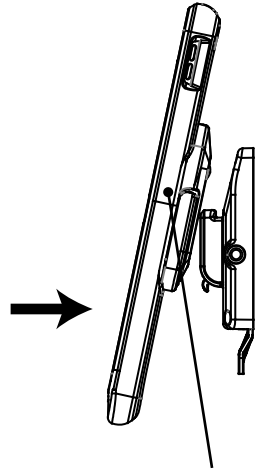


ALIGN CONNECTOR TO DOCK STATION

3

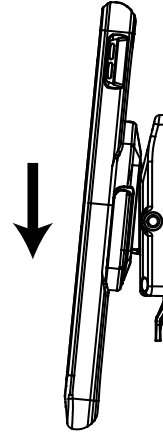

APPLY LIGHT PRESSURE.
LATCH WILL ENGAGE


4

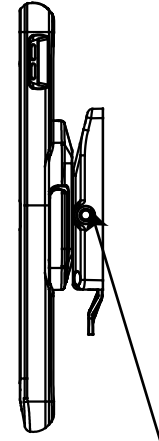

PUSH LOCK BUTTON TO SECURE
TABLET TO DOCK STATION


Removing Tablet with Connector from Dock Station

1

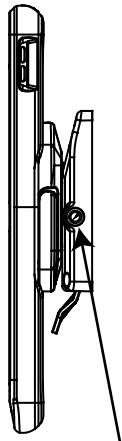


PRIOR TO PULLING LATCH,
UNLOCK LOCK USING KEY

2

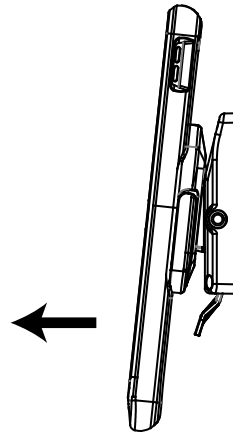


PULL LATCH FORWARD

3

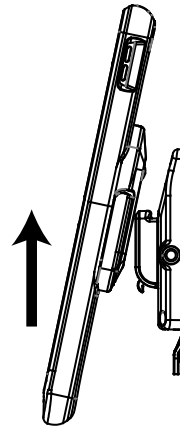



GENTLY PULL UP TO RELEASE

 4



Tablet Charge PD Compatible


Tablet Data and Charge PD Compatible

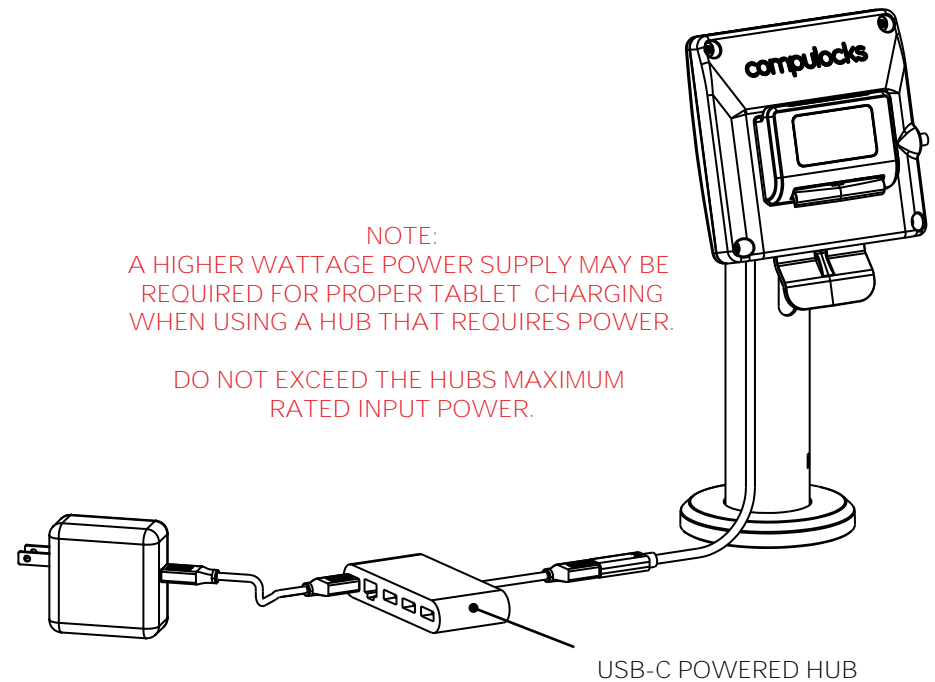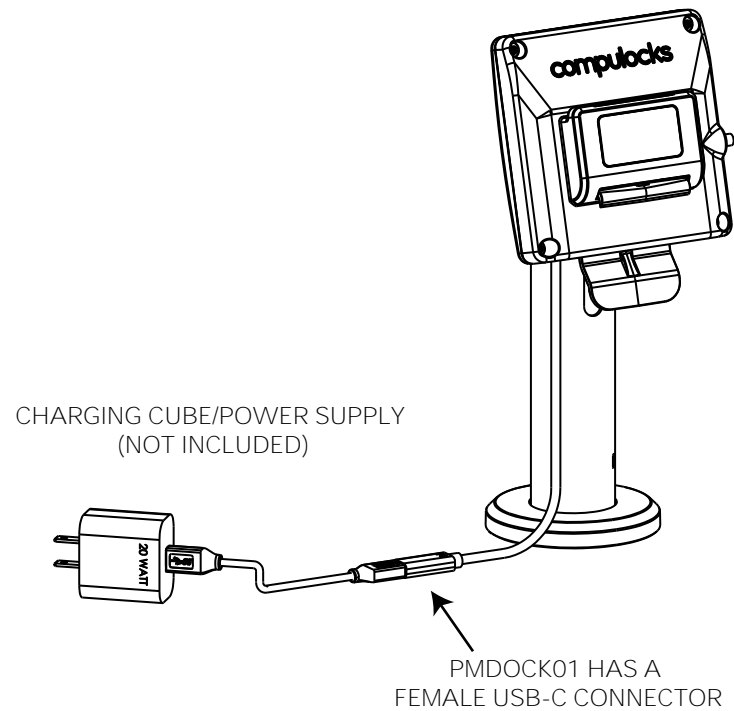


IN THE BOX






 
Keys




Hardware Kit

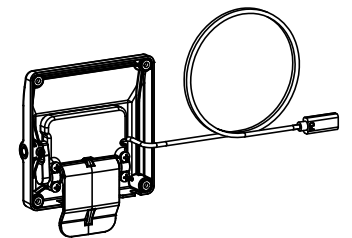


PowerMove Dock Station

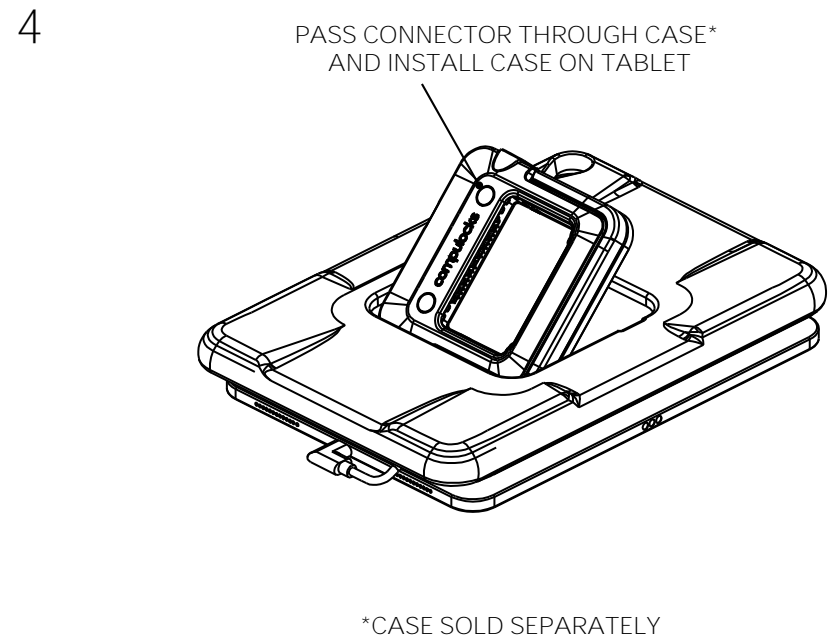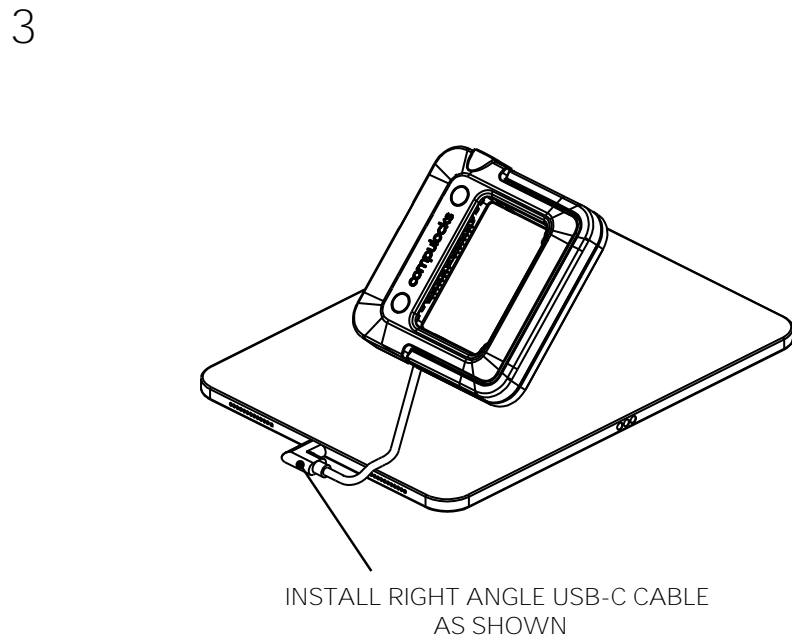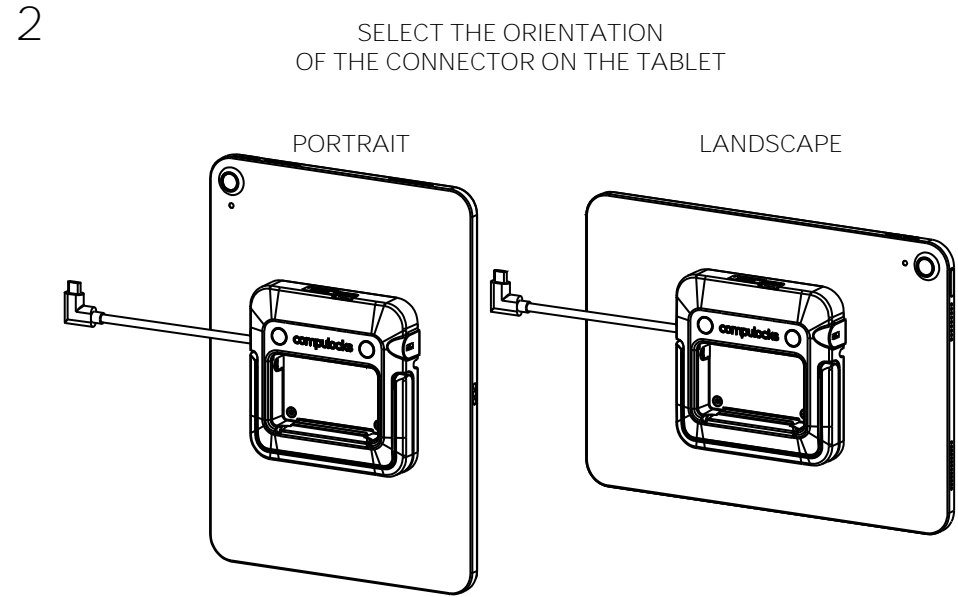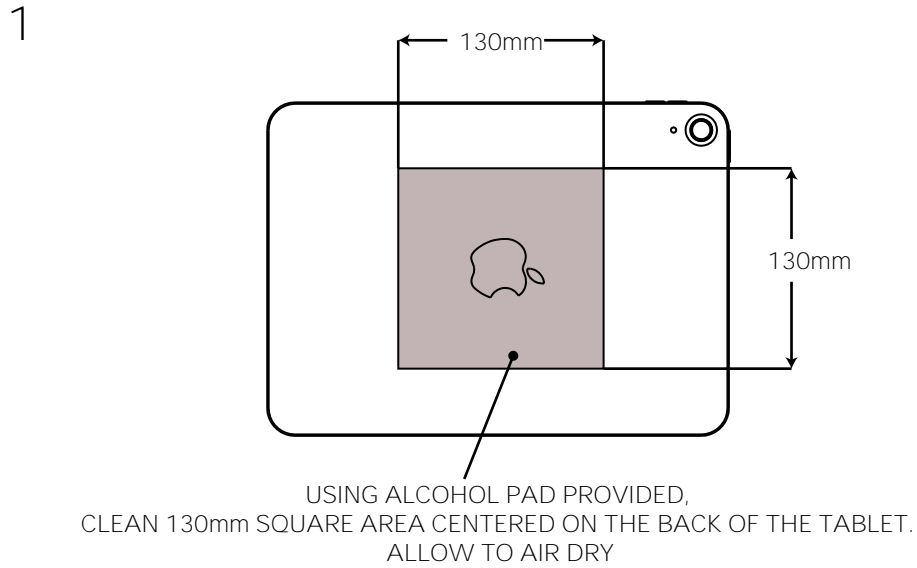

5

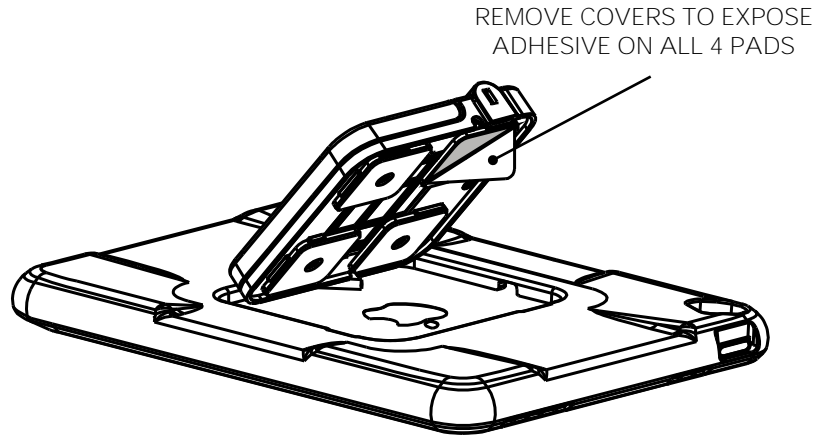


6

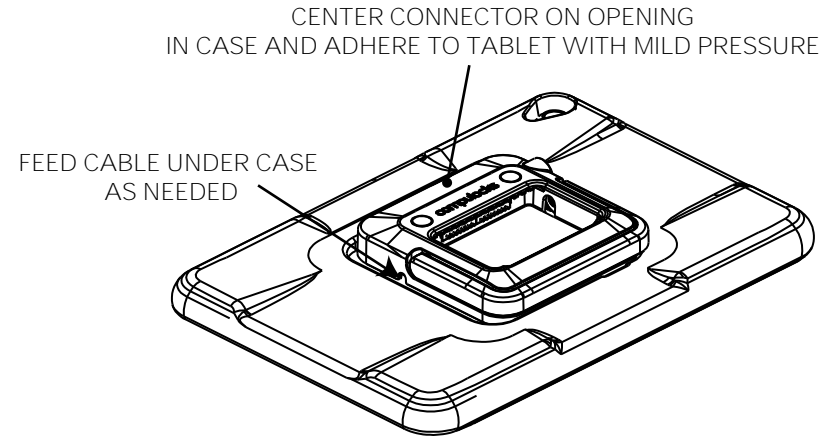


NOTE:
TABLET AND CONNECTOR SHOULD BE AT
ROOM TEMPERATURE FOR BEST RESULTS

FOR BEST PERFORMANCE ALLOW
CONNECTOR TO BOND TO TABLET FOR 12 HOURS.

IN THE BOX

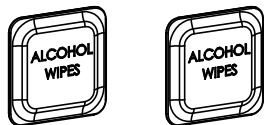

Alcohol Wipes

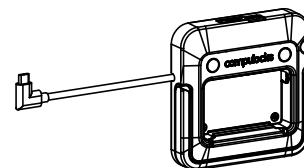

PowerMove Connector