

 
 
styletech

MK650 Multi-Mode Wireless Mouse & Keyboard

HAVING TROUBLE
SETTING UP?
WE CAN HELP!

EMAIL: help@abptech.co.uk

How can we help? Our support
team will answer your questions

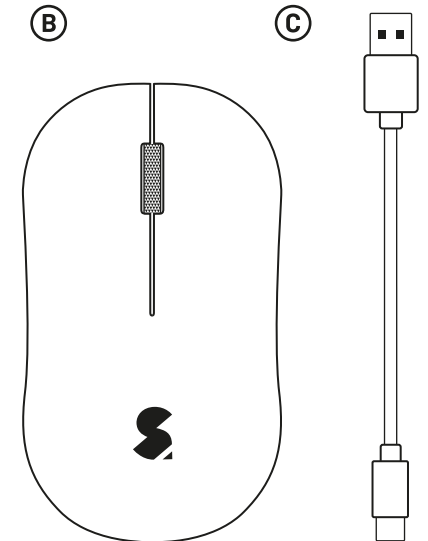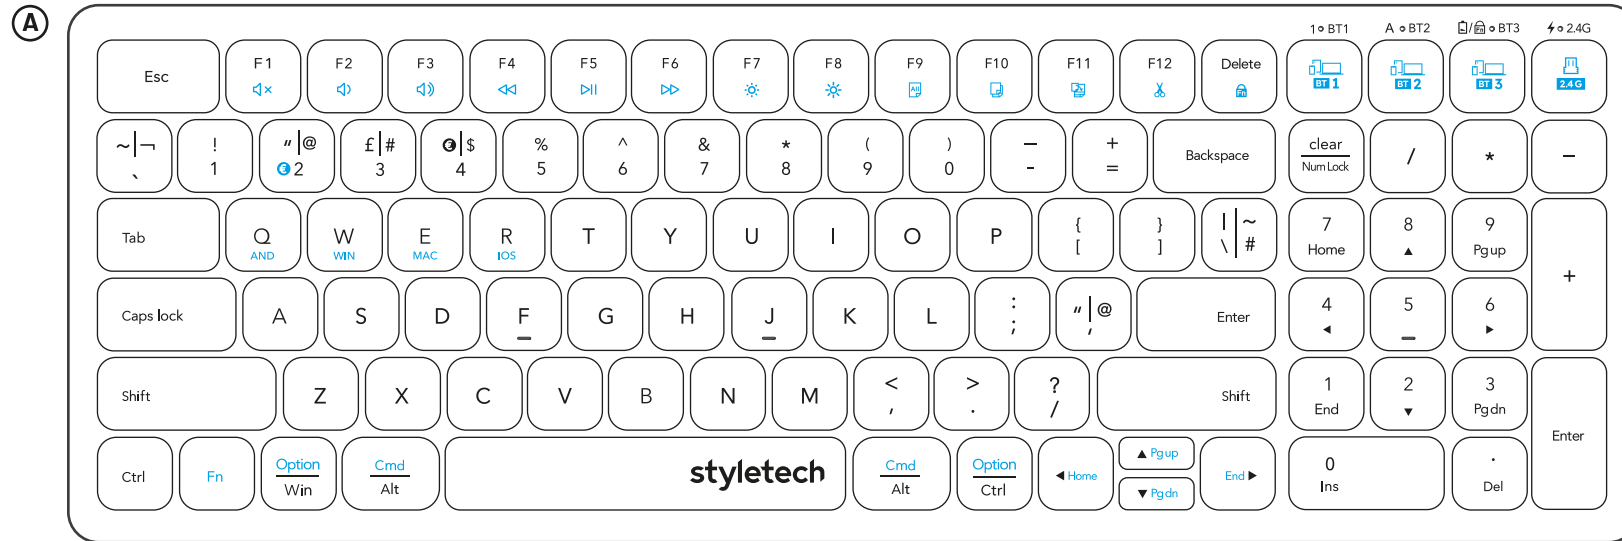

A: Multi-Mode Wireless Keyboard | B: Multi-Mode Wireless Mouse | C: 1.5m Keyboard Charging Cable



 
1. Multi-Mode Wireless Keyboard Set-Up

2. **Charging**
3. Insert the USB C into the keyboard and the other end into your PC/Laptop



4. The **Battery light** next to the lightning/2.4G symbol, situated in the far-right hand corner will light up solid red to indicate the keyboard in charging. When the keyboard is fully charged the light will turn off.
- 5.
- 6.
- 7.
- 8.
- 9.
10. When the battery is low the **Bluetooth 3** LED will flash red, if not charged the keyboard will shut down.
- 11.
- 12.
- 13.
14. **Connecting the Keyboard to Devices**
15. Connect to any Bluetooth/2.4G supported devices compatible with Windows, Mac, iOS, and Android. Switching easily between operating systems.
- 16.
17. **Bluetooth Connection**
18. Power on the keyboard. All LED indicators will flash once to indicate the keyboard is powered on
19. Press **FN + Bluetooth 1**. The LED light will flash once
20. Press and Hold **Bluetooth 1** for 3-5 seconds to enter pairing mode. The LED light will start to flash rapidly above the button
21. In your Bluetooth settings, the keyboard name **STY-K650 B3** or **STY-K650 B5** will appear. If using an up-to-date operating system, select **STY-K650 B5**
22. Once connected the keyboard should be ready to use, your PC/Laptop may ask for a keyboard set-up, just follow the on-screen instructions. You can adjust any of your favoured requirements/set-up within your keyboard settings

23. Please Note: **STY-K650 B3** will only appear if you are using an older operating system.



24. To connect other Bluetooth devices, simply follow steps 2-5 above, selecting **Bluetooth 2** or **Bluetooth 3** depending how you want to order your devices and how many you wish to connect.

- 25.
- 26.
- 27.
- 28.
- 29.
- 30.
- 31.
- 32.
33. **2.4G Connection**
34. Connecting to 2.4G you will need to use the Dongle (included) that is stored within the mouse. Simply lift off the front of the mouse cover and you will see it situated in the bottom right-hand

35. corner. The mouse cover should lift off easily as it has a magnetic fixing.
36. Power on the keyboard. All LED indicators will flash once to indicate the keyboard is powered on
37. Insert the USB dongle into any spare USB A port on your PC/Laptop
38. The keyboard should be ready to use, your PC/Laptop may ask for a keyboard set-up, just follow the online screen instructions. You can adjust any of your favoured requirement/set-up within your keyboard settings.

Switching between Devices

Once you have connected all your required compatible devices to the keyboard, you can easily switch between any of them by pressing...

FN + BT 1 / BT 2 / BT 3 / 2.4G, depending on how many you have paired and in which order.

We suggest **Bluetooth 1** being your main device and ordering the remaining on importance and the amount of use.

Selecting your Operating System

Depending on what device and operating system you are used to working on, you can tailor the keyboard workings/shortcuts so you can keep familiarity with your existing working methods.

Simply press **FN + Q (AND) / W (WIN) / E (MAC) / R (IOS)**



Function Keys

Mac / Windows: F1 - F12

Delete Fn: Locked or Unlock FN: **FN + Delete** (Only applies to the Function keys F1-F12)



- When the green LED is solid the **FN** is unlocked/ON and in use (LED above **Bluetooth 3**)
- When the green LED is OFF the **FN** button is locked and not in use.

For example, when using the Function Keys and the **FN** LED is OFF there is no need to press **FN** before using any keys from F1 – F12.

F1: Mute	F2: Volume Down	F3: Volume Up	F4: Previous Track
F5: Play/Pause	F6: Next Track	F7: Decrease Display Brightness	F8: Increase Display Brightness
F9: Select All	F10: Copy	F11: Paste	F12: Cut

Multi-Mode Wireless Mouse Set-Up

Inserting the AA Battery

The battery will already be installed inside the mouse.

1. Simply lift off the front of the mouse cover. The mouse cover should lift off easily as it has a magnetic fixing
2. Gently pull the paper strip towards you to activate the battery and discard

Connecting the Mouse to Devices

Connect to any Bluetooth/2.4G supported devices compatible with Windows, Mac, iOS, and Android. Switching easily between operating systems.

2.4G Connection

Connecting to 2.4G you will need to use the dongle (included) stored within the mouse. Simply lift off the front of the mouse cover and you will see it situated in the bottom right-hand corner. The mouse cover should lift off easily as it has a magnetic fixing.

1. Power on the mouse
2. Insert the USB dongle into any spare USB A port on your PC/Laptop
3. Select **2.4G (Top LED)** by pressing the button above the LEDs on the base of the mouse. It will light solid green to signal the mouse is connected

Bluetooth Connection

1. Power on the mouse
2. Select **Bluetooth 1 (Middle LED)** by pressing the button above the LEDs on the base of the mouse. It will light solid blue
3. Instantly, press and hold **Bluetooth 1 (Middle LED)** for 3-5 seconds to enter pairing mode. The LED light will start to flash rapidly above the button
4. In your Bluetooth settings, the mouse name **STY-M650 B3** or **STY-M650 B5** will appear. If using an up-to-date operating system, then select **STY-M650 B5**
5. The mouse will connect to your device

Please Note: **STY-M650 B3** will only appear if you are using an older operating system.

To connect another Bluetooth device, simply follow steps 2-5 above, selecting **Bluetooth 2** (Bottom LED)

Switching between Devices

Once you have connected all your required compatible devices to the mouse, you can easily switch between any of them by pressing the button situated on the base of the mouse.

To wake up the mouse once its entered sleep mode, just double click or move the mouse.

LEGAL INFORMATION

Please keep this instruction manual for future reference. If you require any help or assistance, please contact the helpline or visit styletech.net.

WARRANTY

This product is guaranteed for a period of one year from the date of purchase. During this period, if there is a defect due to faulty materials or workmanship, the retailer from whom you purchased it will replace it with the same or a similar model on production of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse, or wear and tear and is available only to the original purchaser of the product. This does not affect your statutory rights.

BATTERY WARNING

Improperly replaced batteries may present a risk of leakage, explosion, and personal injury. There is a risk of fire or explosion if the battery is replaced by an incorrect type. Ensure the batteries are installed correctly by following the instructions provided. Miss use of all types of batteries may present a risk of fire or chemical burn. Do not expose batteries to moisture, liquids, or extreme heat. A battery subjected to extremely low air pressure may result in the explosion or leaking of flammable liquid or gas. Do not charge or use the battery if it appears to be leaking or is discoloured and deformed. Do not leave your batteries unused for extended periods of time. Do not short-circuit. Your device may contain a built-in rechargeable battery that is not replaceable. Battery life varies with the device and other varying factors. All non-operating batteries must be discarded in the correct manner, according to your local laws. If no laws or regulations govern, dispose of your device in a waste bin for electronics. Keep all batteries away from children.

CLASS 1 LASER PRODUCT. INVISIBLE LASER RADIATION

This product contains a Class 1 LED. A Class 1 laser is safe under all conditions of normal use. This means the maximum permissible exposure (MPE) cannot be exceeded when viewing a laser with the naked eye or with the aid of typical magnifying optics.

WARNING: Use of controls, adjustments or performance of procedures beyond those specified may result in hazardous radiation exposure. Avoid prolonged direct eye/skin contact with the laser may result in burn injury.

IMPORTANT SAFEGUARDS & PRECAUTIONS

- Never expose to direct sunlight or wet weather conditions
- Do not expose the product to splashing, dripping, rain or moisture. Do not immerse in liquid.
- Do not expose to dust, high humidity, high temperatures or mechanical shock
- Do not use if the equipment is damaged
- Do not disassemble: there are no serviceable parts inside
- For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside
- Do not direct the infrared/laser beam from the mouse to anyone's eye or a reflective object that could injure you
- If the product is trying to operate at out of temperature ranges, power off until the temperature is stabilised
- Long periods of use may result in neck, arm, shoulder, wrist pain and stiffness. Take regular breaks and seek health advice from professionals for any discomfort

BATTERY CARE

For full battery care, please see battery warning section

- If the battery has a charging function it should be under adult supervision
- Once fully charged disconnect the USB charging cable
- Do not attempt to charge any other battery pack or device using the USB charging cable
- Do not leave on charge for longer than 6 hours
- We do not recommend leaving on charge overnight or while unattended
- Never dispose of batteries in fire, as this can cause them to explode
- Do not attempt to remove the products built in battery pack, it is not replaceable
- Power off device when not in use
- Do not leave unused batteries for extended periods

RECYCLING



Where you see this symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in the UK, EU or Turkey. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

The recycling and processing of Waste Electrical and Electronic Equipment will make a significant contribution towards helping protect the environment by reducing landfill waste.

FEDERAL COMMUNICATION COMMISSION CLASS B INTERFERENCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CANADIAN ICES STATEMENTS CANADIAN DEPARTMENT OF COMMUNICATIONS RADIO INTERFERENCE REGULATIONS

This digital apparatus does not exceed the Class B limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class B digital apparatus complies with Canadian ICES-003.

RÈGLEMENT SUR LE BROUILLAGE RADIOÉLECTRIQUE DU MINISTÈRE DES COMMUNICATIONS

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe B est conforme à la norme NMB-003 du Canada.

All other trademarks are the property of their respective owners. Windows and the Windows logo are trademarks or registered trademarks of the Microsoft group of companies. Not recommended for children under 6 years of age. Please retain this packaging for future reference. Due to the company's policy of constant improvement and technical refinement, the company reserve the right to alter the specification.

Styletech™ is a registered trademark of ABP Technology Ltd. Manufactured By: abp Technology LTD, Bolton, UK, BL2 1BX. EU AR: ABP Technology Europe Ltd, Dublin, ROI, K78 X5W6.

MADE IN CHINA



Marking of this symbol indicates this product has been tested and is compliant with the EMC Directive of the European Union 2014/30/EU.



Marking of this symbol indicates this product conforms to Electromagnetic Compatibility Regulations 2016 issued by the UK.



Australia
New Zealand

