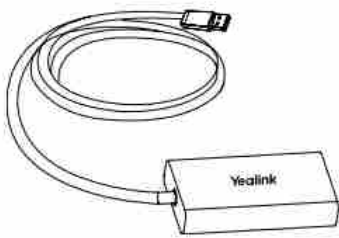# MVC BYOD-Extender Installation
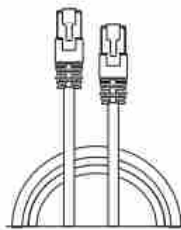
Package Contents

> ☼ **TIP**
>
> We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.

(1,5 m, 4,92 ft)
MVC-BYOD-Extender
(with USB -A)
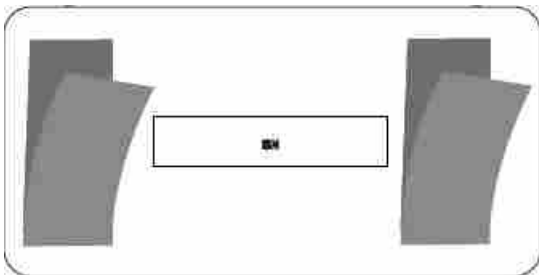
(7,5m, 24,6ft)
CAT5e UTP
(RJ45 - RJ45) Cable

(W25.4*L50mm,3M)
Velcro×2

Quick Start Guide

Install MVC BYOD Extender

1. Stick the velcros on the back of MVC-BYOD-Extender.

2. Put the MVC-BYOD-Extender on a surface such as a table, wall and so on.
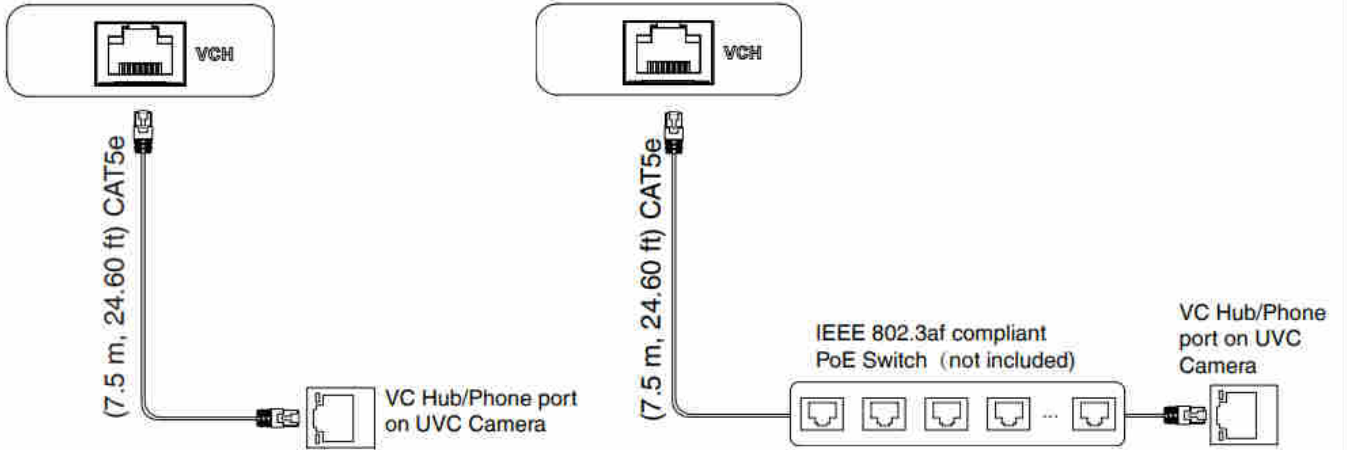

Please refer to MVC BYOD-Extender for more information on how to use it.

Connetction

Connect to the UVCcamera

- Connect directly to the UVC camera (UVC40)

VCH

(7.5 m, 24.60 ft) CAT5e

VC Hub/Phone port on UVC Camera

- Connect to the UVC camera via PoE switch (UVC84)

VCH

(7.5 m, 24.60 ft) CAT5e

IEEE 802.3af compliant PoE Switch (not included)

VC Hub/Phone port on UVC Camera

Connect to the PC

PC

(1,5 m, 4,92 ft) MVC-BYOD-Extender (with USB -A)

Yealink