SAMYANG OPTICS

AF 35-150mm F2-2.8 FE

AF

[illegible]
Instruction Manual
[illegible]
[illegible]
Руководство по эксплуатации
Instrukcja obsługi

[illegible]
[illegible]
[illegible]
[illegible]
[illegible]
[illegible]

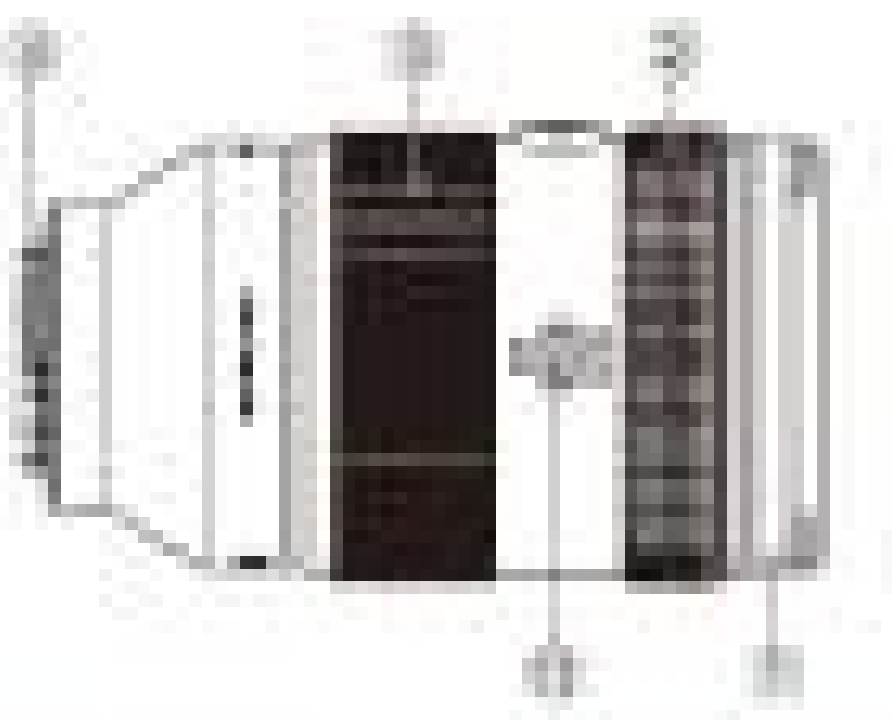

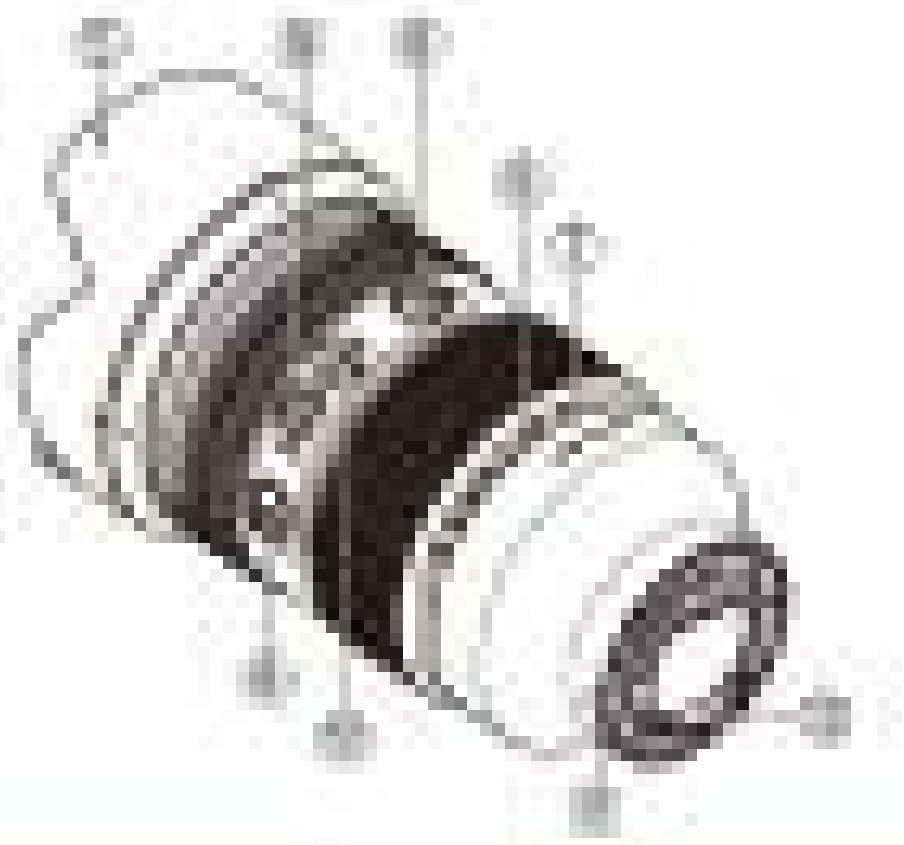

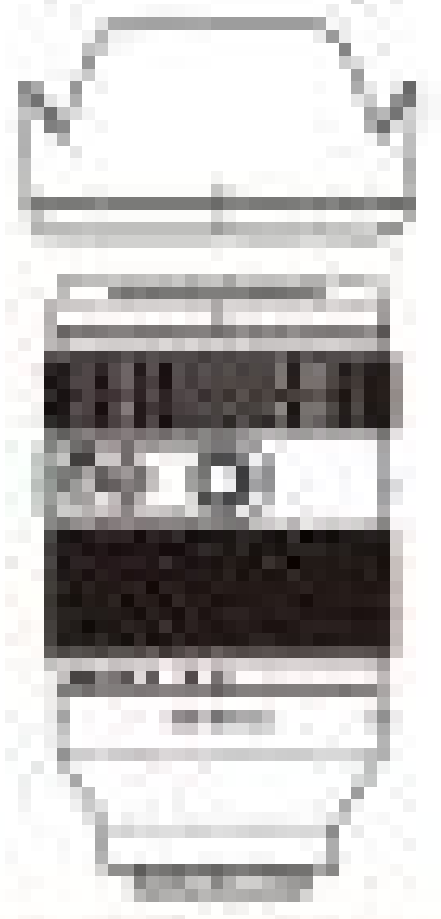

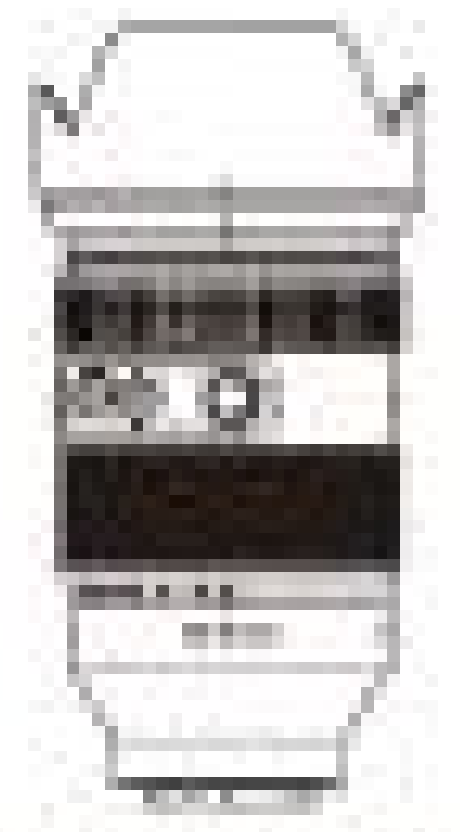

SAMYANG OPTICS CO., LTD.

[illegible]

사용설명서

[illegible]

Instruction Manual

■ Before Using

- Please read this instruction manual and familiarize yourself with the functions of the lens, the operating method, and cautions for handling the product correctly prior to use. Also refer to the instruction manual of the camera you are using with the lens.
- The supported functions of this product may vary according to the camera model.
- For detailed information regarding compatibility, visit the certified service center or make inquiries on the message board of our homepage.

■ Name of Each Part

① Hood Locking Tube	② Focus Ring	③ Zoom Ring
④ Mount	⑤ Hood	⑥ Focal Length Scale
⑦ Focal Length Index	⑧ Focus Hold button	⑨ Custom switch
⑩ AF/MF switch	⑪ Lens mount index	⑫ Lens Signal Contact
⑬ Zoom lock switch		

※ The focus ring (②) can be used for different functions, such as aperture adjustment, depending on the position of the custom switch (⑨).

■ Lens Installation and Detachment

- Attaching the lens
  - Remove the front and rear caps of the lens.
  - Align the mount index indicated on the lens with the lens mount index indicated on the camera mount, then rotate the lens clockwise until a clicking sound occurs.
- Detaching the lens
  - With the camera's lens detaching button pressed, detach the lens by rotating it counterclockwise until the lens stops.

■ Mounting the Filter

- A filter can be mounted on the filter mounting screw at the front of the lens.
  - If two or more filters are mounted at the same time, vignetting may occur.
  - Check if the filter size is compatible with the lens (refer to "Product specifications") and then mount it at the front of the lens.

■ Mounting the Hood

- The hood blocks unnecessary light and protects the front surface of the lens from rain, snow, and dust.
- Align the hood position index indicated on the hood with the hood index (white) indicated on the lens, rotate the hood clockwise until a clicking sound occurs. The hood is now fixed.
- You can store the hood by mounting it on the lens in the opposite direction.
- Caution: Improper mounting of the hood hides the lens angle and causes vignetting.

■ Zooming

- You can take pictures using various focal lengths (wide-angle 35mm ~ telescopic 150mm) by turning the zoom ring.

■ How to use the focus hold button

- If the switch is in the AF position:
  It operates as the general focus hold button; it can be set for different functions depending on the camera body.
- If the switch is in the MF position, or the camera body setting is MF:
  This function allows the user to save the focus at any desired position.
  ※ When you press and hold down the focus hold button for 2 seconds, the screen blinks and informs you of the saving status. When you press the button briefly, the focus moves to a saved position.
  ※ You can save focus at two positions by using the side and top buttons.
  ※ For detailed instructions, refer to the homepage.

■ Using the Custom Switch

- If the camera focusing method is in the MF mode or the switch is in the MF position:
  - MODE 1: The focus is controlled according to the rotation speed of the MF ring.
  - MODE 2: The focus is controlled constantly according to the amount of rotation of the MF ring.
  - MODE 3: The Dolly Zoom function, in which the size of the subject is fixed and the magnification of the background is changed when zooming in and out, can be used. (The focus is controlled constantly according to the amount of rotation of the MF ring.)
- When the AF/MF switch is in the AF position:
  - MODE 2: The focusing ring operates with the aperture adjustment function.
  ※ The functions assigned to each mode can be modified and changed using the "Lens Manager" program. Other functions may be added through future firmware updates.

⚠ Safety Caution

- Do not look at the sun or other strong light through the lens or camera. Doing so may cause blindness.
- Do not leave the lens without a lens cap in a location with direct sunlight, such as inside a vehicle. Direct sunlight passing through the lens may be concentrated, causing a fire.
- Keep the lens out of the reach of children. Failure to do so may cause an accident or personal injury.

⚠ Cautions for Use

- In order to use the lens safely, attach or detach the lens while the camera is turned off.
- Be careful not to touch or contaminate the contact point on the mount. If electronic signals are not transmitted between the camera and the lens smoothly, a malfunction may occur.
- Do not apply excessive force to the lens when attached to the camera. Doing so may cause damage to the lens and/or camera mounts.
- It is recommended to use a strong tripod. If a weak tripod is used, the tripod may fall, damaging the camera and/or the lens.
- If the lens is placed in a hot location, damage or distortion may occur, resulting in performance problems.
- Take care not to get the lens wet with water or other liquids, and store the lens in a dry place with ventilation.
- If the lens is wet or if you use the lens with wet hands, product failure, fire, or electric shock may occur.
- Avoid direct sunlight, and do not store the lens near naphthalene or mothballs.
- Avoid using the lens in a location with drastic temperature changes. In particular, if you move a lens that has been chilled in a cold location to a warm location, moisture in the air may be concentrated outside or inside the lens, causing a failure of the production of moth or such a case, keep the lens in a plastic bag or an exclusive camera bag and take it out when the temperature of the lens becomes similar to the peripheral temperature.
- If the lens surface gets dirty, dust it off using a lens blower or a brush and wipe it with a clean soft cloth (cleaning tissue, cotton cloth, etc.).
- When cleaning or wiping the lens, use ethanol or a lens cleaner and do not use organic solvents such as thinner, alcohol, or benzene.

■ Product Specifications

Model name		AF 35-150mm F2-2.8 FE	
Aperture range		WIDE	TELE
		F2.0 ~ 16	F2.8 ~ 22
Angle	Full frame	63.4°	16.4°
	APS-C	43.7°	11.0°
Optical construction		21 Elements in 18 Groups	
Minimum focusing distance		0.33 m (1.08 ft)	0.85 m (2.79 ft)
Maximum shooting magnification		0.17X	X0.18
Filter size		Ø82 mm	
Number of aperture blades		9	
Size (maximum diameter X length)		Ø93.4 x 157.4 mm	Ø93.4 x 157.9 mm
Weight		1,224 g	

- The minimum focus is the distance from the image sensor to the object.
- The size and weight in the specification excludes the front/rear caps and hood.
- The product specifications and exterior are subject to change without notice.

取扱説明書

[illegible]

使用説明书

[illegible]

Руководство по эксплуатации

[illegible]

Instrukcja obsługi

■ Przed użyciem

[illegible]

■ Nazwy części

[illegible]

■ Podłączanie i odłączanie obiektywu

[illegible]

■ Mocowanie filtra

[illegible]

■ Mocowanie osłony przeciwsłonecznej

[illegible]

■ Przybliżanie

[illegible]

■ Jak używać przycisku blokady ostrości

[illegible]

■ Używanie przełącznika niestandardowego

[illegible]

⚠ Środki ostrożności

[illegible]

⚠ Przestrogi odnośnie użytkowania

[illegible]

■ Specyfikacja produktu

[illegible]

SAMYANG OPTICS

AF 35-150mm F2-2.8 FE

AF

[illegible]

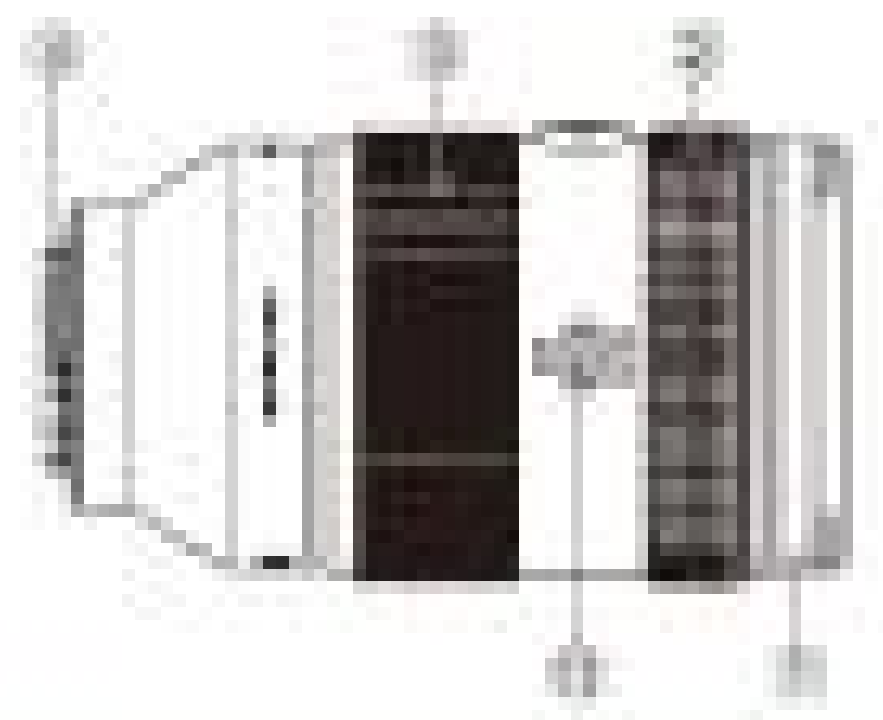

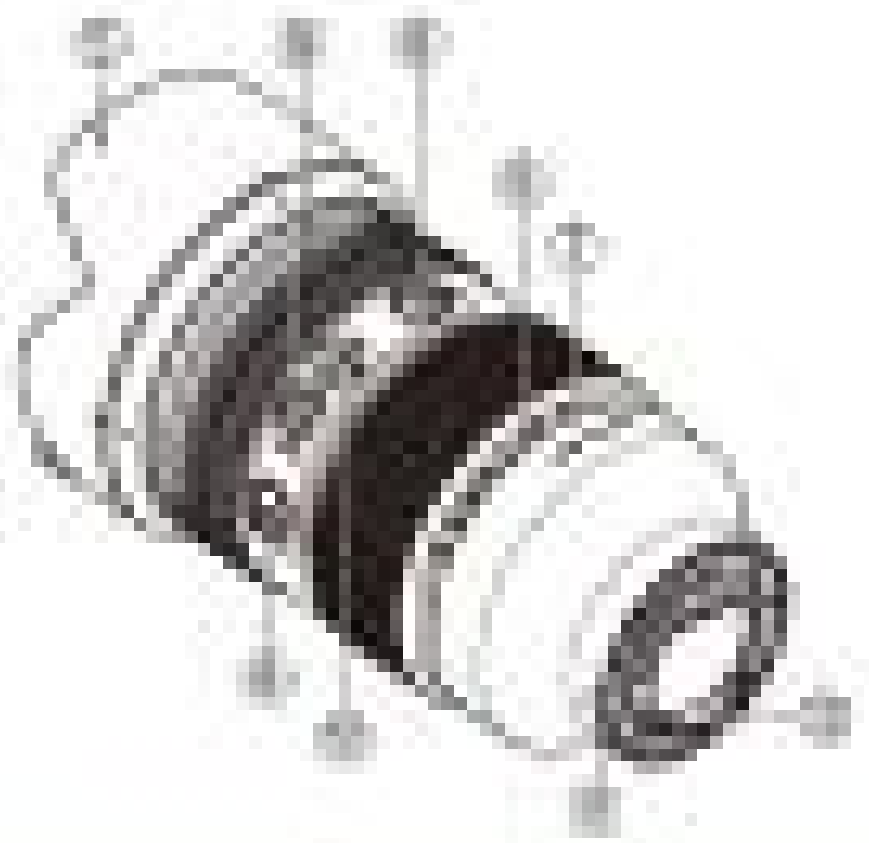

SAMYANG OPTICS CO., LTD.

[illegible]

Bedienungsanleitung

[illegible]

Manual de instrucciones

[illegible]

Manuale d'uso

[illegible]

Manuel d'instructions

[illegible]

Gebruiksaanwijzing

[illegible]

Bruksanvisning

[illegible]