

MAG Series LCD Monitor

MAG 274URFW (3CC2)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	. 10
G.I	. 11
Gaming	. 12
Professional	. 14
Image	. 15
Input Source	. 15
PIP/PBP	. 16
Navi Key	. 17
Settings	. 17
Specifications	. 19
Preset Display Modes	. 21
Troubleshooting	. 23
Safety Instructions	. 24
TÜV Rheinland Certification	. 26
Regulatory Notices	. 27

Revision

V1.0, 2024/02

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents


Monitor	MAG 274URFW		
Documentation	Quick Start Guide		
Accessories	Stand with Screw(s)		
	Stand Base with Screw(s)		
	External Power Supply		
	Power Cord		
Cables	Ultra High Speed HDMI™ Cable (Optional)		
	DisplayPort Cable (Optional)		

Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Make sure the stand assembly is properly installed before setting the monitor upright.

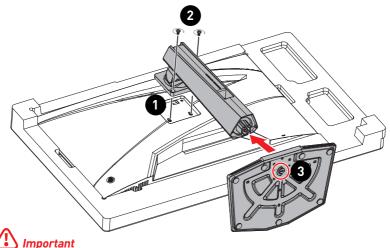

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!



Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.

Important


- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.





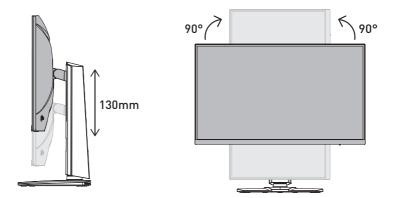


Monitor Overview

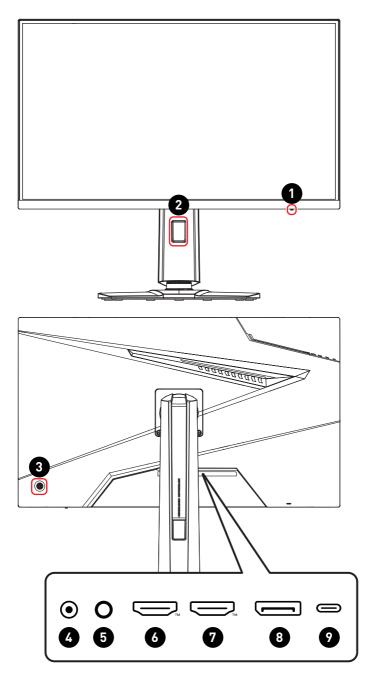

1	Power LED
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
2	Cable Routing Hole
3	Power Button & Navi Key
4	Power Jack
5	Headphone Jack
6	
	Supports HDMI™ CEC, 3840x2160@160Hz as specified in HDMI™ 2.1.
7	
	Supports 3840x2160@160Hz as specified in HDMI™ 2.1.
8	DisplayPort
	Supports 3840x2160@160Hz as specified in DisplayPort 1.4a.
9	USB Type-C Port
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery. It only carries video signals and doesn't support data transmission function.
	Important
	Your USB-C signal source and cable must support DisplayPort Alternate Mode to enable video output to the monitor.

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- 5. Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

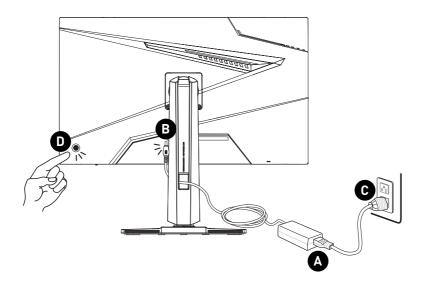

OSD Setup


This chapter provides you with essential information on OSD Setup.



All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

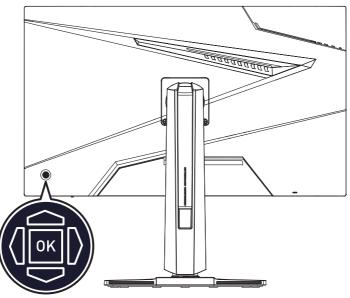

Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

Press (OK):

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

n	3840xi 160		HDR Adaptive-Sync OFF OFF	DP
MAG	274URFW			
GI	G.I.	Smart Crosshair	lcon	
\mathfrak{s}	Gaming	Optix Scope	Color	
☆	Professional		Position	Exit
2	Image		Reset	
Ð	Input Source			Move
6	PIP/PBP			
ල	Navi Key			
	\bigtriangledown			Enter FW .009

Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- A.I. Vision
- Low Blue Light
- HDCR
- Brightness

- Contrast
- Color Temperature
- Optix Scope
- PIP/PBP
- MPRT Sync

G.I.

1st Level Menu	2nd/3rd Level Menu		Description	
Smart Crosshair	Icon	None [+] -;- :: :: :: :: :: :: :: :: :: :	 Through AI algorithm, the visibility of in-gam Users can select the c crosshair. 	e crosshair.
	Color	White Red Auto		
	Position	1		
	Reset			
Optix Scope	Scope Size	Small Medium Large	 The center point will zenabled. Smart Crosshair and Cenabled at the same ti 	
Scope x1.5 • Activating Optix Scope will	will affect:			
	Ratio	x2	Affected Function Function Statu	Function Status
		x4		Set to OFF
	OFF		» Screen Size 1:1	Set to Auto
	ON			

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	Use Up or Down Button to select and preview
	FPS	 mode effects. Press the OK Button to confirm and apply your
	Racing wode type.	
	RTS	
	RPG	
Night Vision	OFF	This function optimizes background brightness
	Normal	and is recommended for FPS games.
	Strong	
	Strongest	
	A.I.	
A.I. Vision	OFF	• A.I. Vision enhances image quality by optimizing
	ON	the contrast of images and background brightness.
		Activating A.I. Vision will affect:
		Affected Function Function Status
		» Night Vision
		» Brightness Unable to select
		» HDCR w MPRT Sync Set to OFF
Response Time	Normal	Setting to Fastest will reach the shortest response time and help improve blurred images
	Fast	when playing very fast games.
	Fastest	
MPRT Sync	OFF	MPRT Sync is available when the refresh rate is over 85Hz.
	ON	Activating MPRT Sync will affect:
		Affected Function Function Status
		» Response Time Unable to select
		» Brightness
		» HDCR
		» PIP/PBP Set to OFF » Optix Scope
		» Optix Scope » Screen Size 1:1 Set to Auto

1st Level Menu	2nd/3rd Lev	rel Menu	Description	
Refresh Rate	fresh Rate Location			
		Right Top	OK Button to confirm a Rate Location.	and apply your Refresh
		Left Bottom		nd works at the Operating
		Right Bottom	System's preset Scree	n Refresh Rate.
		Customize		
	OFF	•]	
	ON			
Alarm Clock	Location	Left Top	• After setting the time,	press the OK Button to
		Right Top	activate the timer.	
		Left Bottom	 Users have to manuall Alarm Clock after any 	
		Right Bottom	reconnection.	
		Customize]	
	OFF	•]	
	15:00	00:01 ~ 99:59]	
	30:00			
	45:00			
	60:00			
Adaptive-Sync	OFF		Adaptive-Sync prevent	s screen tearing.
	ON		 When Adaptive-Sync is mandatory to enable H 	
				Refresh Rate) ptive-Sync (ON/ OFF) and en Size 16:10 is set to ON.
			Activating Adaptive-Sy	nc will affect:
			Affected Function	Function Status
			» PIP/PBP » Optix Scope	Set to OFF
			» Screen Size 1:1	Set to Auto

Professional

1st Level Menu	2nd Level Menu	Description
Pro Mode	Eco User Anti-Blue Movie Office sRGB	Use Up or Down Button to select and preview mode effects. Press the OK Button to confirm and apply your mode type. Activating sRGB will affect: Affected Function Function Status Color Temperature Low Blue Light Unable to select Contrast
Low Blue Light	OFF ON	Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow. When Pro Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.
HDCR	OFF ON	HDCR enhances image quality by increasing the contrast of images. Activating HDCR will affect: Affected Function Function Status Brightness Unable to select WPRT Sync Set to OFF
MPRT Sync	OFF ON	MPRT Sync Set to OFF MPRT Sync is available when the refresh rate is over 85Hz. Activating MPRT Sync will affect: Affected Function Function Status
		» Response Time Unable to select » Brightness Unable to select » HDCR
Image Enhancement	OFF Weak Medium Strong Strongest	Screen Size 1:1 Set to Auto Image Enhancement enhances image edges to improve their acutance.

Image

1st Level Menu	2nd/3rd Level №	lenu	Description	
Brightness	0-100		 Properly adjust Bright surrounding lighting. 	tness according to the
Contrast	0-100		Properly adjust Contr	ast to relax your eyes.
Sharpness	0-5		 Sharpness improves o images. 	clarity and details of
Color Temperature	Cool		• Use Up or Down Butto	on to select and preview
	Normal		mode effects.	Constant and a second
	Warm		 Press the UK Button t mode type. 	o confirm and apply your
	Customization	R (0-100)	• Users can adjust Colo	r Temperature in
		G (0-100)	Customization mode.	
		B (0-100)		
Screen Size	Auto	1	• Users can adjust Screen Size in any mode, an	
	4:3		resolution and any sci	
	16:9		Activating Screen Size	
	16.10		Affected Function	Function Status
			» HDMI™ VRR	Disabled
	1:1		Activating Screen Size	e 1:1 will affect:
			Affected Function	Function Status
			» MPRT Sync	
			» Adaptive-Sync » PIP/PBP Set to 0FF	Set to OEE
				Set 10 UFF
		» Optix Scope		

Input Source

1st Level Menu	2nd Level Menu	Description
HDMI™ 1		Users can adjust Input Source in any mode.
HDMI™ 2		
DP		
Туре С		
Auto Scan	OFF	Users can use the Navi Key to select Input Source at
	ON	 below status: While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		 While "No Signal" message box is shown on the monitor.

PIP/PBP

1st Level Menu	2nd/3rd Lev	el Menu	Description	
OFF	OFF		• PIP (Picture in Picture) al	
PIP	Source	HDMI™ 1	one screen. Une program is displayed on th	
		HDMI™ 2		
		DP	 PBP (Picture by Picture) i 	
		Туре С	displays two input sources side-by-side on the	
	PIP Size	Small	screen.Display Switch allows use	ers to switch between
		Medium	primary and secondary in	
		Large	 If there is only one signal and Audio Switch will be one 	
	Location	Left Top	Users can adjust the ratio	
		Right Top	switching Mode 1/ 2/ Cus	tomize.
		Left Bottom	Activating PIP/PBP will af	
		Right	Affected Function » MPRT Syn	Function Status
		With the second	Unable to select	
		Customize	» Adaptive-Sync	
	Display Swit		» Optix Scope	Set to OFF
	Audio Switch	1	» HDMI™ CEC	
PBP	Mode 1		» Screen Size 1:1	Set to Auto
	Mode 2		» Screen Size 16:10	
	Customize	1		
	Source 1	HDMI™ 1		
		HDMI™ 2		
		DP		
		Туре С		
	Source 2	HDMI™ 1		
		HDMI™ 2		
		DP		
		Туре С		
	Display Switch			
	Audio Switch	<u></u> וו		

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	• All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left	Game Mode	
Right	Smart Crosshair	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	
	Optix Scope	

Settings

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	Users have to press the OK Button to confirm and
	English	apply the Language setting.Language is an independent setting. Users' own
	Français	language setting will override the factory default.
	Deutsch	When users set Reset to Yes, Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	Users can adjust Transparency in any mode.
OSD Time Out	5~30s	• Users can adjust OSD Time Out in any mode.

1st Level Menu	2nd Level Menu	Description
RGB LED	Red	RGB LED offers unique lighting effects for your
	Green	monitor.
	Blue	
	White	
	Breathing	
	Marquee	
	Rainbow	
	OFF	
Power Button	OFF	• When set to OFF, users can press the power button to turn off the monitor.
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.
Info. On Screen	OFF	• The information of the monitor status will be shown
	ON	on the right side of the screen.
HDMI™ CEC	OFF	HDMI™ CEC (Consumer Electronics Control) supports
	ON	Sony PlayStation [®] , Nintendo [®] Switch™, Xbox Series XIS consoles and various audio-visual devices that are CEC-capable.
		 If HDMI[™] CEC is set to ON:
		• The monitor will automatically power on when the CEC device is turned on.
		• The CEC device will enter power saving mode when the monitor is turned off.
		 When Sony PlayStation[®], Nintendo[®] Switch[™], or Xbox Series XIS console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.
Type C PD Charge	OFF	• This function enables users to charge their devices
	ON	through a USB Type-C connector.
Reset	YES	Users can Reset and restore settings to original OSD
	NO	Default in any mode.

Specifications

Monitor	MAG 274URFW
Size	27 inch
Curvature	Flat
Panel Type	Rapid IPS
Resolution	3840x2160 (UHD)
Aspect Ratio	16:9
Brightness	• Typical SDR: 400 nits
	• Peak HDR: 400 nits
Contrast Ratio	1000:1
Refresh Rate	160Hz
Response Time	• 1ms (MPRT)
	• 0.5ms (GTG, Min.)
I/O	• DisplayPort x1
	 HDMI[™] Connector x2
	 USB Type-C Port (DP Alt Mode) x1
	• Headphone Jack x1
View Angles	178°(H) , 178°(V)
DCI-P3*/ sRGB	98% / 133%
Surface Treatment	Anti-glare
Display Colors	1.07B (8 bits + FRC)
Monitor Power Options	19V ==== 3.42A
External Power Supply**	65W, 19V
Power Input	100~240Vac, 50~60Hz
Power Output	19V 3.42A
Adjustment (Height)	0 ~ 130mm
Adjustment (Tilt)	-5° ~ 20°
Adjustment (Swivel)	-30° ~ 30°
Adjustment (Pivot)	-90° ~ 90°
Kensington Lock	Yes

Monitor		MAG 274URFW		
VESA Mounting		• Plate Type: 75 x 75 mm		
		• Screw Type: M4 x 10 mm		
		 Thread Diameter: 4 mm 		
		• Thread Pitch: 0.7 mm		
		• Thread Length: 10 mm		
Dimension (W	x H x D)	613.5 x 406.6 x 227.8 mm		
Weight	Net	6.4 Kg		
	Gross	8.8 Kg		
Environment	Operating	• Temperature: 0°C to 40°C		
		• Humidity: 20% to 90%, non-condensing		
		• Altitude: 0 ~ 5000m		
Storage		• Temperature: -20°C to 60°C		
		• Humidity: 10% to 90%, non-condensing		

- * Based on CIE1976 test standards.
- ** External Power Supply may vary by country.

Preset Display Modes

Important

All information is subject to change without prior notice.

Standard	Resolution		Standard Mode		
			HDMI™	DP	USB-C
Full HD	1920x1080	@60Hz	V	V	V
QHD	2560x1440	@60Hz	V	V	V
		@120Hz	V	V	V
UHD	3840x2160	@60Hz	V	V	V
		@120Hz	V	V	V
		@144Hz	V	V	V
		@160Hz	V	V	V
Video Timing	720P		V	V	V
Resolution	720P	@120Hz	V	V	V
	1080P	@60Hz	V	V	V
		@120Hz	V	V	V
	2160P	@30Hz	V		
		@50Hz	V		
		@60Hz	V		
		@120Hz	V		
	HDMI™ VRR* for PS5		V		

Cham da m d	Resolution		PIP Mode (Not Support HDR)		
Standard			HDMI™	DP	USB-C
Full HD	1920x1080	@60Hz	V	V	V
QHD	2560x1440	@60Hz	V	V	V
		@120Hz	V	V	V
UHD	3840x2160	@60Hz	V	V	V
		@120Hz	V	V	V
Video Timing	720P		V	V	V
Resolution	1080P	@60Hz	V	V	V
		@120Hz	V	V	V
	2160P	@50Hz	V	V	V
		@60Hz	V	V	V
		@120Hz	V	V	V

Standard	Resolution		PBP Mode 1 (Not Support HDR)		
Standard			HDMI™	DP	USB-C
Video Timing Resolution	720P		V	V	V
Used for PBP	2880x2160	@60Hz	V	V	V
Full Screen	960x2160	@60Hz	V	V	V

Standard	Resolution		PBP Mode 2 & Customize (Not Support HDR)		
			HDMI™	DP	USB-C
Video Timing Resolution	720P		V	V	V
Used for PBP Full Screen	1920x2160	@60Hz	V	V	V

Standard	Standard Resolution		Screen Size 16:10 (Not Support HDR)		
			HDMI™	DP	USB-C
QHD+ 2560x1600	2560x1600	@60Hz	V	V	V
		@120Hz	V	V	V
		@144Hz	V	V	V
		@160Hz	V	V	V

* HDMI™ VRR (Variable Refresh Rate) synchronizes with Adaptive-Sync (ON/ OFF).

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.

- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide.
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards

at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)



Low Blue Light (Software Solution)

www.tuv.com

Flicker Free



Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy



F

and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}° 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice



Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

The terms HDMITM, HDMITM High-Definition Multimedia Interface, HDMITM Trade dress and the HDMITM Logos are trademarks or registered trademarks of HDMITM Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

