




Set Up

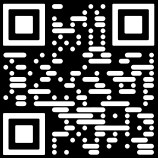

At Orosound, we are committed to continuously improving the user experience.
Are you experiencing challenges getting started with the Tilde® headset?

Consult the exhaustive user guide by scanning the QR code above or reach out to our team by submitting a support ticket at orosound.com/support. We will be happy to hear your feedback and provide step-by-step assistance with your Tilde® headset.

TILDE®
EVO S

1 Connect Your Headset to Your Devices

Pre-paired Dongle Plug the USB Bluetooth dongle into your computer.

Bluetooth Press and hold to pair a new device.

Wired connection Connect your USB cable to your computer and headset.

2 Adjust the Boom-Mic for Optimal Voice Pick-Up During Calls

Choose whether you want to use the boom-mic on the right or left side with the 270° mic rotation.

Utilize the impressive flexibility of the «Gooseneck technology» to position the boom-mic precisely in front of your mouth.

3 Download the Orosound Link App for Setup



Easily adjust headset settings and stay updated on firmware updates, ensuring that your audio experience continues to improve over time.

Download Orosound Link for free at orosound.com/orosound-link or get in touch with your system administrators.

4 Start Using The main Features



① **On / Off** short press
Bluetooth press and hold to pair new device



② **ANC switch** short press

- Noise-Cancelling (NC) disabled
- Noise-Cancelling (NC) enabled
- Aware mode (transparency)



③ **Volume up** short press
Next track double click



④ **Play** short press
Pause short press



⑤ **Volume down** short press
Previous track double click



⑥ **Mute a call**
Short press on the boom-mic button
Raise the microphone to mute



⑦ **Take a call** short press
End a call long press
F2F (face to face talks) toggle with short press

