



5 Port Unmanaged Industrial-Grade Switch 10/100/1000 Mbps + 2 Open SFP & DIN Input

Product Diagram (IES1G52UPDIN)

Front View

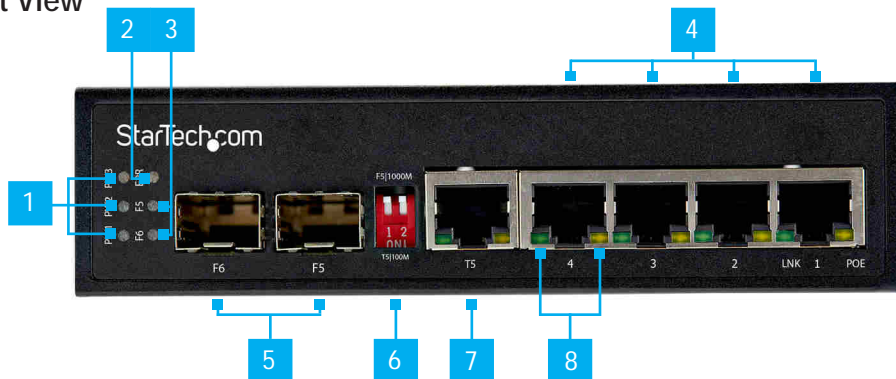

Side View

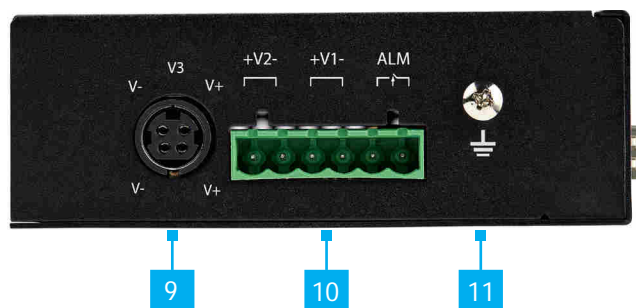

Component	Function
1 Power (PW) LED Indicators	<ul style="list-style-type: none"> Color - Green DIN P3 (top), Terminal P2 (middle), Terminal P1 (bottom) On - PW1/2/3 is connected O - PW1/2/3 is not connected
2 RLY LED Indicator	<ul style="list-style-type: none"> Color - Amber On - Alarm Relay short O - Alarm Relay open
3 F5/6 Port LED Indicators	<ul style="list-style-type: none"> Color - Green F5 (top), F6 (bottom) On - SFP link/connection is detected O - SFP link/connection is not detected Flashing - SFP is active

4	PoE Ports	<ul style="list-style-type: none"> Connect any Network Device to provide an Ethernet Connection to up to 4 Network Devices Provide a Power over Ethernet (PoE) Connection to 4 Devices Maximum PoE power budget is 30W per port up to a total overall power budget of 126W
5	SFP Slots F6 (Left) and F5 (Right)	<ul style="list-style-type: none"> Supports 100/1000Base-X SFP Transceiver Modules
6	DIP Switches	<ul style="list-style-type: none"> Enable SFP Slot F5 or T5 Network Port
7	Non-PoE Port	<ul style="list-style-type: none"> Provide an Ethernet Connection to one Network Device Connect using a Fiber or Copper Network Cable
8	PoE Port LED Indicators	<ul style="list-style-type: none"> Indicates the link and PoE Powered Device (PD) status LNK(Green) <ul style="list-style-type: none"> On - Network connection detected O - Network connection not detected PoE (Amber) <ul style="list-style-type: none"> On - PoE PD is detected O - PoE PD is not detected
9	DIN Power Port	<ul style="list-style-type: none"> Connect a DIN Connector Terminated Power Supply
10	Terminal Block Power Input Port	<ul style="list-style-type: none"> Provides power to the PoE Ports Supported power input voltage range is 48-56V
11	Grounding Screw	<ul style="list-style-type: none"> Attach a Grounding Wire to protect Network Equipment

Requirements

For the latest requirements, please visit www.startech.com/IES1G52UPDIN.

- DC Power Supply x (up to) 2
- (Optional) DIN Connector Terminated Power Supply x 1
- PoE Powered Device x (up to) 4
- RJ45 Terminated UTP/STP Cat 5e (or better) Network Cable x (up to) 5
- MSA-Compliant 100/1000Base-X SFP Transceiver Module x (up to) 2
- Fiber Cable x (up to) 2
- Earth Ground Connection x 1

- Grounding Wire x 1
- (Optional - for power) Flat Head Screwdriver x 1
- (Optional - for mounting) #2 Phillips Head Screwdriver x 1
- (Optional - for mounting) Screws for Wall Mounting x 2

Installation

Grounding the Switch

Connect a **Grounding Wire** to the **Grounding Point** on the **Switch** and to the **Earth Ground Connection**.

Connect the Redundant Power Sources

Terminal Block

Connecting and installing the **Terminal Block** must be completed by a licensed Electrician.

Notes: Make sure that you turn off the power source before connecting the power wire to the **Terminal Block**.

Do not exceed the recommend voltage as it may result in personal or product damage.

This unit includes an additional **24V@1A Relay Circuit**. When two **Terminal Power Sources** are connected the **Relay** stays in **Open Mode**. If only one **Power Source** is connects the **Relay** switches to **Short Mode**.

1. Connect the **Power Wires** from a **DC Power Source (48 - 56V DC)** or the provided **Barrel Power Connector Adapter** to the **Terminal Block Connectors** on the **Switch**. The terminals are marked on the exterior of the **Switch** (connect the **Positive Wire** to **V+** and the **Negative Wire** to **V-**).
 - Secure the **Wires** by tightening the **Screws** in the **Terminal Block** with a **Flat Head Screwdriver**
2. (Optional) Repeat step 1 to add a redundant **Power Source**.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

Industry Canada Statement

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe [A] est conforme à la norme NMB-003 du Canada.

CAN ICES-3 (A)/NMB-3(A)

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

Warranty Information


This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty.

DIN Power

Connect a **DIN Connector Terminated Power Supply** to an available **Power Source** and to the **DIN Power Port** on the **Switch**.

Power Pinout Diagram

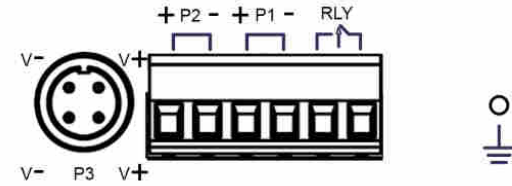

Select the Default Function and Speed using the DIP Switches

Toggle the **DIP Switches** up and/or down to select the **SFP Slot F5 (Right)** or **T5 Network Port** and the **Network Speed**.

Note: If DIP 1 is set to T5 then DIP 2 must be set to 1000M.

F5 1000M

	Dip 1 to select port 5 TX or SFP	F5	F5 ON (default)
		T5	T5 ON
	Dip 2 to select SFP speed	1000M	1000M (default)
		100M	100M

T5 100M

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

Safety Measures

• If product has an exposed circuit board, do not touch the product under power.

Mesures de sécurité

• Si l'un des circuits imprimés du produit est visible, ne pas touchez le produit lorsqu'il est sous tension.

安全対策

• 製品に露出した状態の回路基板が含まれる場合、電源が入っている状態で製品に触らないでください。

Misure di sicurezza

• Se il prodotto ha un circuito stampato visibile, non toccare il prodotto quando è acceso.

Säkerhetsåtgärder

• Rör aldrig vid enheter med oskyddade kretskort när strömmen är påslagen.

StarTech.com Ltd.
45 Artisans Cres
London, Ontario
N5V 5E9
Canada

StarTech.com LLP
2500 Creekside
Parkwy
Lockbourne, Ohio
43137
U.S.A.

StarTech.com Ltd.
Unit B, Pinnacle 15
Gowerton Rd,
Brackmills
Northampton
NN4 7BW
United Kingdom

FR: startech.com/fr
DE: startech.com/de
ES: startech.com/es
NL: startech.com/nl
IT: startech.com/it
JP: startech.com/jp