Memor[™] 30/35 Family

USER'S MANUAL



Rugged Mobile Computer/ Barcode Reader with 1D/2D Imager



Datalogic S.r.l.

Via S. Vitalino, 13 40012 Calderara di Reno (BO) Italy Tel. +39 051 3147011 Fax +39 051 3147205

© 2024 Datalogic S.p.A. and /or its affiliates

All rights reserved. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates.

Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation.

Electronic versions of this document may be downloaded from the Datalogic website (www.datalogic.com). If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic shall not be liable for technical or editorial errors or omissions contained herein, nor for incidental or consequential damages resulting from the use of this material. Datalogic reserves the right to change any specification at any time without prior notice.

Trademarks

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U.

Memor, Halogen, DeepSight and SoftSpot are trademarks of Datalogic S.p.A. and/or its affiliates. Google, Google Play and other marks are trademarks of Google LLC. All other brand and product names may be trademarks of their respective owners.

Patents

See www.patents.datalogic.com for patent list.

TABLE OF CONTENTS

INT	RODUCTION	'
	Conventions	
	Product Overview	
	Flexible Best Data Capture Performance	
	Streamlined Computing and Connectivity	
	Easy of Use and Versatility	
	Proven Reliability	
	Future Proof: Lower TCO and Sustainability	
	Features	
	Industry - Applications	
	Available Models	
	Out of the Box	
	General View	4
	Top View	
	Front View	
	Bottom View	
	Side View	
	Back View	
	Accessories	
	Charging Docks	
	Cases/Holsters	
	Power Supplies/Cords	
	Miscellaneous	
DAT	TTERY	
DA		
	Install the Battery	
	Charge the Battery	
	Charge with USB	
	Charge with the dock	
	Battery Information	
	Battery Safety Guidelines	
SD	CARD/ SIM CARD	
	Access the SIM/SD card slots	
	Install the SIM Card	.1
	Install the SD Card	.1
GFT	TTING STARTED	1
U L.	Turn on the Device	
	Home Screen	
	Home Screen Items	
	Status Bar Icons	
	Suspend Mode	
	Long Press Power Menu	
	Emergency	
	Power Off	
	Restart	
	Screenshot	
	Battery Swap	
	Dattery Swap	. 1

Batt	tery Swap	••••
App	lications	
	Datalogic Utilities	
	Datalogic Tools	
	Google Applications	
	Android Applications	
Tou	ch Gestures	
	et the Device	
	Configuration Reset	
	Reset Wi-Fi, Mobile & Bluetooth	
	Reset App Preferences	
	• • • • • • • • • • • • • • • • • • • •	
	Factory Reset	
	Enterprise Reset	
LED	Indicators	••••
TIN	GS	
	rview	
	alogic Settings	
Duti	Scanner & Decoder	
	Notification	
	Good Read	
	Formatting	
	Scanner Options	
	Input Selection	
	Wedge	
	Symbology Settings	
	Scan Engine Information	
	Symbologies Configuration	
	Power & Sources	
	Suspend Timeout	
	Charging Policies	
	Wake-Up Policies	
	Keyboard & Triggers	
	Lock Keyboard Input	
	Triggers	
	Advanced Keyboard Settings	
	· · · · · · · · · · · · · · · · · · ·	
	Key Remapping	
	View All Remapped Keys	
	Key Mapping Reset	
	Push to Talk	
	Ethernet	••••
	Wi-Fi	
	Wi-Fi Scan	
	Wi-Fi Module	
	Wi-Fi Roaming	
	USB	
	Touch Mode	
	NTP	
	Accessibility	
	Device Information	
	Bluetooth	
	Device Discoverability	
	Pairing Policy	
	Silent Pairing	
	· · · · · · · · · · · · · · · · · · ·	
	System Update	
	Local Upgrade	
Net	work & Internet	
	Connect to Wi-Fi Network	
	Add a Wi-Fi Network	
Con	nected Devices	
	Bluetooth Settings	
	Enable Bluetooth®	

Connect to Other Bluetooth® Devices	
Configure, Rename or Unpair Bluetooth® Devices	
NFC	
Display	
Brightness Level	
Adaptive Brightness	
Lock Screen	
Screen Timeout	
Dark Theme	
Display Size and Text	
Colors	
Auto-Rotate Screen	
Screen Saver	
Recovery Mode	
•	
DATALOGIC APPLICATIONS	
Battery Manager Battery Info	
Battery Info - Realtime	
Battery Info - Lifetime	
Battery Info - Manufacturer	
Charging Profile	
Charging Profile - Setup	
Data Logging	
Setup	
Graphs	
Logs	76
Manage	
Application	
Settings	
Info	
SoftSpot™	
Configure Actions	
SoftSpot Appearance	
Export to File	
Reset Settings	
•	
TOOLSUSB ADB Driver	
SDK Add-on	
Install ADB Driver	
Create a New Application based on Datalogic SDK Add-on with Android Studio	
Datalogic SDK	
Datalogic OEMConfig	
Wi-Fi QR Code Generator	
Scan2Deploy	83
Datalogic Launcher	
Datalogic Enterprise Browser	83
DATA CAPTURE	84
Models with DE2121-DL	
Models with DE2121-ER	
CONNECTIONS	
USB Connection	
USB Direct Connection	
USB Dock Connection	
Ethernet Connection	
Ethernet Dock Connection	
Wi-Fi Connection	
WWAN Connection	90

Bluetooth® Serial Connection	91
Near Field Communication (NFC)	
Read NFC Tags	
Wireless and Radio Frequencies Warnings	
TECHNICAL FEATURES	94
Technical Data	
TEST CODES	98
MAINTENANCE	102
Cleaning	
Ergonomic Recommendations	
SAFETY AND REGULATORY INFORMATION	103
General Safety Rules	
TECHNICAL SUPPORT	104
Support Through the Website	104
Reseller Technical Support	
Reference Documentation	104
Warranty Terms and Conditions	104
GLOSSARY	106

INTRODUCTION

CONVENTIONS

"PDA", "mobile computer", "device", "Memor 30/35" refer a Memor 30/35 family device.

"Dock" refer to a Memor 30/35 family device dock.

The label artworks may be only a draft. Refer to the product labels for more precise information.

PRODUCT OVERVIEW

Flexible Best Data Capture Performance

Based on Datalogic state-of-the-art DeepSight^m technology, the Memor 30/35 family embeds the new Halogen^m DE2121-ER scan engine, delivering impressive versatility for any application thanks to its extended range of working distances from 5 cm / 1.97 in up to 10 m / 32.8 ft.

The impressive sensitivity and the high visible illumination system guarantee first-class reading performances even in extreme light and dark environment conditions. The DE2121-ER delivers outstanding motion tolerance and decodes poorly printed barcodes as well as bar codes displayed on mobile devices and LCD screens.

Datalogic's Green Spot technology enhances productivity providing good-read feedback directly on the label.

A powerful 13 MP rear camera helps to capture damaged goods and barcodes.

Memor 30/35 leverages 50 years of decoding library know-how to deliver superior decoding performance on any application.

Streamlined Computing and Connectivity

Based on the latest generation enterprise grade Octa-Core Qualcomm chipset, Memor 30/35 delivers unmatched processing power and industry-leading performance with future-proof connectivity technologies: Wi-Fi 6/6E, Bluetooth® 5.2; and on Memor 35 models: 5G, CBRS for private LTE networks and Band 14 for US Public Safety.

Easy of Use and Versatility

With a full HD+ a 6" 500 nits brightness touch screen display, users can operate in any kind of lighting and weather conditions using fingers, gloves, and a stylus. Multi-side NFC patented reading capability eases quick acceptance of contactless payments. Smart long-lasting battery, integrated Qi compatible wireless charging and SafeSwap™ technology optimize battery lifetime, controlling battery health and ensuring uninterrupted operations even for challenging use cases. The 8 MP front camera and PTT key take col-

laboration among users to the next level providing hi-definition video calls and instant communication.

Soft Spot™ enhances the user experience providing a configurable scan trigger on the display for smoother operations.

Memor 30/35 optimizes the company investment by easily switching a mobile device to a desktop workstation thanks to the docking station/charger accessory.

Proven Reliability

An enterprise MIL-STD 810H rugged industrial design with IP65/IP68 protection and a Gorilla® Glass 5 touch panel provide reliable proven performances against dust (no ingress), water (resists under 1 m / 3.2 ft for more than 30 mins), and repeated drops/tumbles onto concrete.

Future Proof: Lower TCO and Sustainability

Powered by Datalogic Mobility Suite that offers comprehensive software tools for effective deployment, enhanced lock-down security measures, and full Android™ Enterprise integration, Memor 30/35 enhances asset performance and ensures sensitive data protection.

A future proof device with longevity up to Android 18 ensures a lower total cost of ownership for the company.

EASEOFCARE services guarantee worldwide post sales assistance on hardware and software and include the Datalogic Shield™ security monthly updates. Packaging is plastic free and made with recycled materials.

Features

- Industry leading scan performance: reading up to 10 m / 32.8 ft with Green Spot
- Superior connectivity and processing power: Wi-Fi 6 / 6E + BT5.2 + 5G, Qualcomm
 Octa-Core chipset + 6 / 128 GB + up to 2 TB micro SD memory capability
- 6 in capacitive multi-touch FHD+ display, 500 NITS
- Contactless wireless charging helps reduce maintenance costs and promotes proper charging of the device
- Ultra-reliable swappable long lasting battery with SafeSwap™ capability and Smart
- Battery Management
- IP65/68 certified, passed 3,000 tumbles at 0.5 m and multiple 1.8 m / 6 ft drops with protective boot accessory across operating temperatures
- Android[™] 13 with GMS (platform upgradeable to Android 18)
- Access to full value-added Datalogic Mobility Suite software tools
- EASEOFCARE post sales Service Plans and Datalogic Shield to extend the lifecycle and extend years of protection on the device
- Sustainability: plastic-free recycled paper and carton box packaging

Industry - Applications

- Retail: Assisted sales, Inventory Management, Markdowns/Markups, Shelf Replenishment, Online Order Fulfillment, BOPIS/ BORIS, Access control/ Ticketing, Hospitality: Order taking
- Warehouse & Manufacturing: Inbound/ Outbound Logistics, Sort, Pick, and Pack, Shipping/ Receiving, Production & Quality Control, Inventory Management, Track & Trace, Intralogistics
- Transportation and Logistics: Field Service/ Maintenance, Deliveries/ DSD, Route accounting/ Order processing, Proof of Delivery/ Damage, Workforce management

AVAILABLE MODELS

The Memor 30/35 is available in different models depending on the features it is equipped with. All options are listed below:

- 944850001 Memor 30 Full Touch PDA std range 2D Imager w/Green Spot feed-back, Camera (13MP), front camera (8MP), Wi-Fi6E, 6GB/128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh
- 944850002 Memor 35 Full Touch PDA EMEA+ROW, std range 2D Imager w/Green Spot feedback, Camera (13MP), front camera (8MP), Wi-Fi6E+5G, 6GB/128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh
- 944850003 Memor 35 Full Touch PDA NA, std range 2D Imager w/Green Spot feedback, Camera (13MP), front camera (8MP), Wi-Fi6E+5G, 6GB/128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh
- 944850004 Memor 30X Full Touch PDA long range 2D Imager w/Green Spot feedback, Camera (13MP), front camera (8MP), Wi-Fi6E, 6GB/128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh
- 944850005 Memor 35X Full Touch PDA EMEA+ROW, long range 2D Imager w/ Green Spot feedback, Camera (13MP), front camera (8MP), Wi-Fi6E+5G, 6GB/ 128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh
- 944850006 Memor 35X Full Touch PDA NA, long range 2D Imager w/Green Spot feedback, Camera (13MP), front camera (8MP), Wi-Fi6E+5G, 6GB/128GB, Qualcomm Octa Core, 2,4GHz, Android v13, NFC, PTT, IP 65, IP68, Black Color, includes Google Mobile Services, battery 4680 mAh

For further details about the Memor 30/35 models refer to the web site:

http://www.datalogic.com.

For further information regarding Android refer to the website:

www.android.com.

OUT OF THE BOX

The Memor 30/35 package contains:

- Memor 30/35 PDA
- Rechargeable one-piece battery pack
- Quick Start Guide
- Safety & Regulatory Addendum
- End User License Agreement (EULA) Sheet

Remove all the components from their packaging; check their integrity and compare them with all the packing documents.



CAUTION: Keep the original packaging for use when sending products to the technical assistance center. Damage caused by improper packaging is not covered under the warranty.

GENERAL VIEW

Top View




Front View



Bottom View



Side View

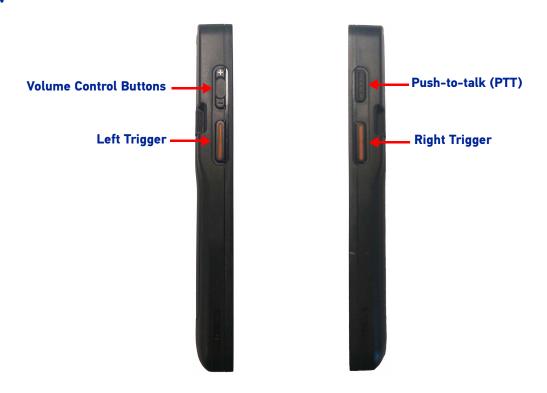

Back View





CAUTION: Do not apply any sticker to the Memor 30/35.



ACCESSORIES

Charging Docks

- 94A150112 Single Slot Charging Dock charge only
- 94ACC0383 Power Wall Adapter Kit, Memor 30-35, 4 regional plugs USB-C
- 94A150114 Single Slot Charging/ Communication Dock w/ Spare Battery Slot charge + data
- 94A150117 4-Slot Charging Dock charge only
- 94A150119 4-Slot Charging/ Communication Dock charge + data
- 94A150113 Single Slot Wireless Charging Dock charge only
- 94A150118 4-Slot Wireless Charging Dock charge only
- 94ACC0372 4-Slot Multi-battery Charger
- 94A150115 Vehicle Wireless Charging Dock Charge Only
- 94ACC0382 CLA Adapter for Vehicle Wireless charging dock (USB-C cable sold separately)

Cases/Holsters

- 94ACC0375 Handstrap (5 pieces) for Memor 30-35
- 94ACC0373 Pistol grip (Scan Trigger Handle) for Memor 30-35
- 94ACC0377 Belt Holster (w/Belt clip) for Memor 30/35
- 94ACC0378 Wearable 360° turning Forearm Holder to be used with rubber boot (mandatory) for Memor 30-35

Power Supplies/Cords

- 94ACC0380 Power Supply, for Charging Docks, Memor 30-35 (power cord to be purchased separately)
- 95A051041 Power Cord Europe
- 95A051041 Power Cord Europe
- 95ACC1113 Power Cord NA
- 95ACC1213 Power Cord UK
- 95ACC1212 Power Cord Japan
- 95ACC1215 Power Cord Australia
- 95ACC1284 Power Cord Argentina
- 91ACC0049 Daisy chain connector (5 pieces) for M30-35/JT/M1/SX5 charging docks and multi battery chargers.

Miscellaneous

- 94ACC0386 Battery, Standard + Wireless charging 4680 mAh, for Memor 30-35
- 94ACC0327 USB-C cable / 1.2m long
- 94ACC0386 Battery, Standard + Wireless charging 4680 mAh, for Memor 30-35
- 94ACC0374 Protective Boot for Memor 30-35
- 94ACC0388 Screen Protector (5 pieces) for Memor 30-35
- 94A150116 Mobile Docking Station (Desktop mode)

BATTERY

INSTALL THE BATTERY

Insert the battery pack into the slot, bottom first, and press it into place:





INSTALL THE PROTECTIVE BOOT

The protective boot provides additional protection to the device and is available as optional accessory (P/N 944CC0374).

Insert the device into the protective boot, top first.



To remove the protective boot, grab the protective boot sides with your fingers while pressing the back bottom of the device with your thumbs, as shown in the picture below.



CHARGE THE BATTERY


The battery pack is not initially fully charged. After installing the battery, charge it with a USB Type-C cable or with a dock (single slot dock, 4-slot dock, vehicle dock, 4-slot battery charger).

During the charging process the notification LED positioned at the top right side of the display glows red constantly. Once the charging process has been completed, the notification LED glows green constantly.

Charge with USB

Use a USB Type-C cable in conjunction with the power supply adapter (sold separately, p/n 94ACC0383) to charge the device from a power outlet.

The charger is modular, with one adapter and five switchover plugs.

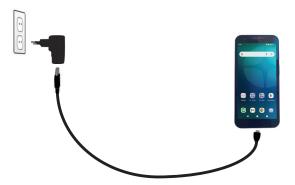

You can also use the USB cable to charge the Memor 30/35 from any self-powered USB hub or USB port on a computer.





NOTE: Use only the Datalogic power supply 94ACC0383 to power the Memor 30/35.

Charge with the dock

Install the protective boot on the device, or insert the adapter into the dock as shown below.



Insert the device into the dock with the screen facing front and the head facing up.



Memor 30/35 with Protective Boot



Memor 30/35 without Protective Boot

To remove the device from the dock, pull it upwards while holding the dock firmly down.



CAUTION: Use only the Datalogic power supply 94ACC0383 to power any of the docks.

Do not put any foreign object such as, but not limited to, coins, paper clips, stickers inside the slot of any of the docks (see the examples below).





NOTE: For information on the single slot dock/ 4-slot dock/ vehicle dock/ 4-slot battery charger refer to the Quick Start Guide included in the dock's box.



NOTE: The Memor 30/35 may get warm during charging. This is normal and does not mean a malfunction.

BATTERY INFORMATION



CAUTION: Do not incinerate, disassemble, short terminals, or expose to high temperature. Risk of fire and explosion. Use specified charger only. Risk of explosion if the battery is replaced by an incorrect type. Dispose of batteries as required by local authorities.



ATTENTION: Ne pas incinérer, démonter, court-circuiter les appareils et ne pas les exposer à des températures élevées. Risque d'incendie et d'explosion. Utilisez uniquement le chargeur spécifié. Risque d'explosion si la batterie est remplacée par un type incorrect. Jetez les piles conformément aux exigences des autorités locales.

By default, the main battery pack is disconnected at the factory to avoid damage due to excessive draining.

Rechargeable battery pack is less than half of full charge when delivered. Before using the Memor 30/35, charge the battery pack as indicated in "Charge the Battery" on page 9.

The battery pack autonomy varies according to many factors, such as the frequency of barcode scanning, RF usage, battery life, storage, environmental conditions, etc. To maximize battery life, turn off radios when they are not needed.

Close to the limits of the working temperature, some battery performance degradation may occur. The Memor 30/35 should be charged at an ambient temperature between 20 - 35° C (68 to 95°F) to achieve the maximum charging rate.

Never charge the device battery in a closed space where excessive heat can build up. As a safety precaution, the battery may stop charging to avoid overheating.

Even if the storage temperature range is wider, in order to achieve the longest battery life, store the device and the spare batteries between 20 to 30°C (68 to 86°F).

To maximize operating autonomy, the Memor 30/35 checks its battery level at all times. If the battery is not sufficiently charged, the Memor 30/35 will not turn on when the ON/OFF Power button is pressed.

In this case, either substitute with a charged battery, insert the Memor 30/35 into a powered cradle, or plug it into a wall charger.



CAUTION: Avoid storing batteries for long periods in a state of full charge or very low charge or in a state of continuous charging, especially at temperature higher than 30°C.

We recommend charging the battery pack every two to three months, if it is not used for long time, to keep its charge at a moderate level to maximize battery life.

Annual replacement of rechargeable battery pack avoids possible risks or abnormalities and ensures maximum performance.



WARNING: Use only Datalogic approved batteries and accessories for battery charging.

Risk of explosion if battery is replaced by an incorrect type.

Dispose of used batteries according to the instructions.

Il y a risque d'explosion si la batterie est remplacée par une batterie de type incorrect.

Mettre au rebut les batteris usagées confor mément aux instructions.

BATTERY SAFETY GUIDELINES



WARNING: Installing, charging and/or any other action should be done by authorized personnel and following this manual.

The battery pack may get hot, explode, ignite, and/or cause serious injury if exposed to abusive conditions.

If the battery pack is replaced with an improper type, there is risk of explosion.

Do not place the battery pack in or near a fire or other heat source; do not place the battery pack in direct sunlight, or use or store the battery pack inside unventilated areas in hot weather; do not place the battery pack in microwave ovens, in clothes dryers, in high pressure containers, on induction cook surfaces or similar devices. Doing so may cause the battery pack to generate heat, explode or ignite. Using the battery pack in this manner may also result in a loss of performance and a shortened life expectancy.

To power the cradle, use only a Datalogic approved power supply. The use of an alternative power supply will void the product warranty, may cause product damage and may cause heat, an explosion, or fire.

The area in which the units are charged should be clear of debris and combustible materials or chemicals.

Do not use the battery pack of this device to power devices other than this device.

Avoid storing batteries for long periods in a state of continuous charging, full charge or very low charge, especially at temperature higher than 30°C.

Periodically check the battery status and immediately discontinue use of the battery pack if, while using, charging or storing the battery pack, the battery pack emits an unusual smell, feels hot, changes colour or shape, swelling or appears abnormal in any other way.

Do not short-circuit the battery pack contacts connecting the positive device and negative device. This might happen, for example, when you carry a spare battery pack in your pocket or purse; accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the contacts of the battery pack (these look like metal strips on the battery pack). Short-circuiting the devices may damage the battery pack or the connecting object.

Do not apply voltages to the battery pack contacts.

Do not pierce the battery pack with nails, strike it with a hammer, step on it or otherwise subject it to strong impacts, pressures, or shocks.

Do not disassemble or modify (i.e. bend, crush or deform) the battery pack. The battery pack contains safety and protection devices, which, if damaged, may cause the battery pack to generate heat, explode or ignite.

In case of leakage of liquid from the battery, avoid contact with liquid the skin or eyes. If the contact occurs, immediately wash the affected area with water and consult a doctor.

Do not solder directly onto the battery pack.

Do not expose the battery pack to liquids.

Avoid any knocks or excessive vibrations. If the device or the battery is dropped, especially on a hard surface, you should take it to the nearest Authorised Repair Centre for inspection before continuing to use it.



WARNING: If your device stops working for any reason, do not use its battery on other electronic devices without a prior check and approval by an Authorised Repair Centre.

Do not remove or damage the battery pack's label.

Do not use the battery pack if it is damaged in any part.

Battery pack usage by children should be supervised.

Collect and recycle waste batteries separately from the device in compliance with European Directive 2013/56, 2011/65, 2012/79 and subsequent modifications, with US and China regulatory laws and regulations about the environment.

SD CARD/ SIM CARD

ACCESS THE SIM/SD CARD SLOTS

- 1. Turn off the Memor 30/35.
- 2. Press the battery latches and remove the battery pack.



3. Remove the SIM/SD rubber cover.



Install the SIM Card¹

1. Slide the cardholder to the left and then pull it up.





^{1.} Phone feature is available only on SGVNR/SGVNRNA Models.

2. Insert the SIM card with the written part upward. Push the cardholder down and then slide it to the right.





3. Replace the SIM/SD rubber cover and press it, then replace the battery (see "Install the Battery" on page 8).

Install the SD Card

1. Slide the cardholder to the left and then pull it up.





2. Insert the SD card as shown below. Push the cardholder down and then slide it to the right.






3. Replace the SIM/SD rubber cover and press it, then replace the battery (see "Install the Battery" on page 8).

GETTING STARTED

TURN ON THE DEVICE

To turn on the Memor 30/35, press and hold the power button for at least 4 seconds.

HOME SCREEN

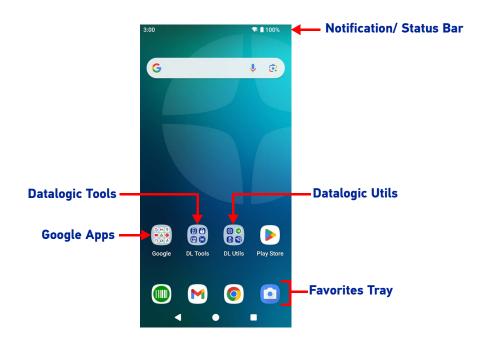

Home Screen Items

Notification/Status Bar	Displays the time, status icons (right side), and notification icons (left side).
Favorites Tray	It is like a dock for your home screen. By default, it includes commonly used apps, but you can customize it.
Datalogic Utils	Shortcut to Datalogic's native applications and settings: Datalogic Settings, SoftSpot, Battery Manager, WiFi Guard.
Datalogic Tools	Shortcut to Datalogic's tools: Scan2Deploy, Launcher, Browser, Scan Demo.
Google Apps	Shortcut to Google's native applications: Google, Gmail, Maps, YouTube, Drive, YT Music, Google TV, Meet, Photos.

Status Bar Icons

\Diamond	Wi-Fi is on.		Battery is low.
?	Wi-Fi not connected.	B	External power source is connected.
▼ i	Wi-Fi connected no internet.		Battery is full.
	Connected to a Wi-Fi network.		Battery is partially drained.
*	Bluetooth is on.	∱	Airplane mode.
101	Vibrate mode.		SD storage.

SUSPEND MODE

Suspend mode automatically turns the screen off and locks the terminal to save battery power when the terminal is inactive for a programmed period of time.

Press and release the power button to toggle the terminal in or out of suspend mode:



To unlock the home screen, press and hold the lock icon, or tap anywhere else on the screen and drag your finger upward.

To set the timeout limit, see "Suspend Timeout" on page 46.

LONG PRESS POWER MENU

Press and hold the **Power** button until the **Long Press Menu** menu displays:





SGVWF Models

SGVNR/SGVNRNA Models

Emergency

Tap Emergency to make an emergency call.

Power Off

Tap Power Off to turn off the terminal. When you turn off the terminal, the session you are working on expires and it won't be possible to restore it.

Restart

Tap **Restart** to restart the terminal.

Screenshot

Tap **Screenshot** to take a screenshot.

Battery Swap

See "Battery Swap" on page 20.

BATTERY SWAP

Battery Swap mode is a low power suspend mode that allows you to replace the battery pack without closing files and applications. It maintains the main memory contents and keeps applications running but does not allow you to operate any of the device's functions.

To switch to Swap Battery mode:

 Press and hold the Power button to display the Long Press Menu and tap Battery Swap:



- 2. Tap Confirm.
- 3. The notification LED starts blinking blue and the battery swap LED lights up solid red.



4. Wait for the LED to turn solid green and then replace the battery (see "Install the Battery" on page 8).



5. Press and release the power button to resume your session. The notification LED will turn off.



CAUTION: Be sure to insert a charged battery pack. If the battery is fully discharged, the device may turn off. If this happens, insert a charged battery and press the power on button to boot-up the device.



CAUTION: The battery swap procedure is not available when the device is connected via USB cable.



CAUTION: The battery swap procedure is not available if the backup battery is fully discharged.



CAUTION: Do not replace the SIM card during a battery swap.



NOTE: Replace the battery pack within 1 minute after its removal from the device. Otherwise it may fail.

APPLICATIONS

The **All Apps** screen displays icons for all installed applications. The table below lists the default applications installed on the Memor 30/35.

Datalogic Utilities

lcon	Description
(D)	Datalogic Settings - See "Datalogic Settings" on page 29.
	SoftSpot - A configurable application meant to provide easy access to frequently used functionalities, as well as activating the scan engine of the device (see "SoftSpot TM " on page 78).
	Battery Manager - Provides information on the battery type, charge, status and temperature, allows to set the charging profile and to log battery data (see "Battery Manager" on page 70)
P	WiFi Guard - Android application that collects information on a Wi-Fi network and provides tools to assist in improving network performance and diagnosing connection problems.

Datalogic Tools

lcon	Description	
(I)	Scan2Deploy - Configuration tool (see "Scan2Deploy" on page 83).	
1	Launcher - Android application that locks down the device to launch only allowed applications (see "Datalogic Launcher" on page 83).	
(A)	Browser - Android application for web browsing to only allowed sites and to expose JavaScript access to the scanner (see "Datalogic Enterprise Browser" on page 83.	
	Scan Demo – Enables data capture (see "Data Capture" on page 84).	

Google Applications

lcon	Description
G	Google - Google's own web search engine.
	Gmail - Use it to send and receive email.
	Maps - Google's own mapping mobile app.
	Youtube - Google's own video-sharing website
	Drive - Google's own file storage and synchronization service. Use it to safely store, synchronize and share your photos, videos, files and more in the cloud.
	YT Music - Music streaming service from YouTube
	Google TV - Google's own online video on demand service. It offers movies and television shows for purchase or rental, depending on availability.
	Meet - Google's own video communication service. Use it to make video calls in high definition.
	Photos - Google's own photo sharing and storage service.

Android Applications

lcon	Description
- x + =	Calculator - Provides the basic and scientific arithmetic functions.
	Camera - Use it to take photos or record videos.
	Clock - Lets you schedule alarms for appointments or as a wake-up.
	Contacts - Allows you to manage contacts information.
	Keep Notes - Note-taking service developed by Google. It offers a variety of tools for taking notes, including text, lists, images, and audio.
Ø	Settings - Use it to configure the Memor 30/35 (see "Settings" on page 28).
	Sound Recorder - Tool for recording the sound and editing the saved recordings.

TOUCH GESTURES

Тар	Tap the screen with your finger or with the stylus to open items and select options.	
Drag	Hold your finger or the stylus on the screen and drag across the screen to scroll or pan. Drag in a list to select multiple items.	
Tap-and-hold	Tap and hold your finger or the stylus on an item to see a list of actions available for that item. On the pop-up menu that appears, tap the action you want to perform.	

RESET THE DEVICE

Configuration Reset

Configuration reset sets the configuration of the device (all its settings) to a known status: the factory status or an enterprise-user-defined status.

Reset Wi-Fi, Mobile & Bluetooth

Resets all network settings.

1. Tap Settings > System > Reset options > Reset Wi-Fi, mobile & Bluetooth.



2. Tap Reset settings.

Reset App Preferences

Resets all preferences for:

- disabled apps
- disabled app notifications
- default applications for actions
- background data restrictions for apps
- any permission restrictions
- battery usage settings.
- 1. Tap Settings > System > Reset options > Reset app preferences.




2. Tap Reset apps.

Factory Reset

Brings the device to the default configuration, clearing all the user-customized settings.

Tap Settings > System > Reset options > Erase all data (factory reset).

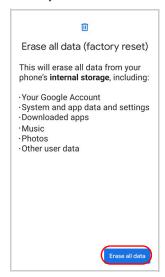


2. Tap Erase all data.

Enterprise Reset

Enterprise Reset brings the device to an enterprise-user-defined configuration, clearing all data and settings except the ones persisted by the enterprise system applications in the **enterprise** flash partition and in the **splash** flash partition.

The Enterprise folder is a file system storage that is used for deployment and deviceunique data. It is persistent and maintains data after an Enterprise reset. Applications and custom settings (i.e. custom boot animation and wallpaper) can persist data after an Enterprise Reset by saving them to the enterprise folder.

1. Tap Settings > System > Reset options > Enterprise reset.

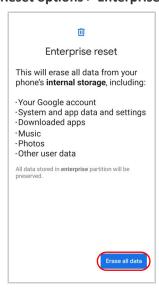

2. Tap Erase all data.

LED INDICATORS


The LEDs illuminate to indicate various functions or errors on the reader. The following tables list these indications. The good read LED indicator is programmable, and may or may not be enabled ("Scanner & Decoder" on page 29 for more details). The notification LED is configurable via SDK.

LED	Status	Description
	Red Constant	The device is charging.
Notification LED	Green Costant	Charging is complete.
Notification LLD	Red Blink	Charge fault.
	Blue Blink	Battery swap.
Good Read Indicator	Red	Light is solid red from the time the user presses the scan key until the barcode is decoded, until the scanner times out, or until the user releases the scan key.
	Green	Light changes to solid green when a good decode is completed.
Battery Swap LEDs	Red	Do not remove the battery.
Datter y Swap LEDS	Green	Battery can be replaced.

SETTINGS

OVERVIEW

The **Settings** app allows you to check or set system parameters to customize your device. To open the **Settings** screen, tap the **Settings** icons on the **All Apps** screen.

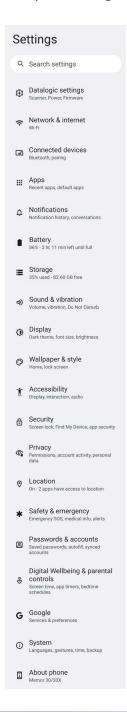

DATALOGIC SETTINGS

The Datalogic Settings app allows you to configure scanner and decoder, control power and source behaviour, configure keyboard, trigger and mappings, Wi-Fi roaming, USB data and features, touch mode settings, NTP server address status and navigation bar, update device firmware and display device information.

Tap Reset device configuration at the end of the Datalogic Settings main screen to reset all configuration settings to the factory default settings:




Tap Reset configuration at the end of a specific settings screen to reset those configuration settings to default:



Scanner & Decoder


Before you start reading barcodes, use the Settings app to view and configure all settings for the scanner.

From the applications menu, tap Settings > Datalogic Settings > Scanner & decoder. Select the desired configuration from the following options:

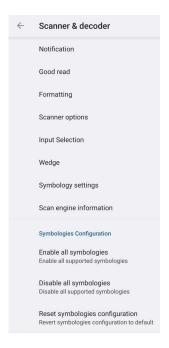

Notification

Use it to configure the good read tone and display notification:

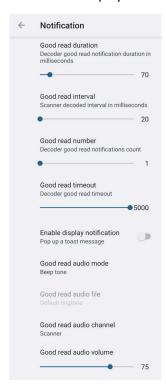

Good Read Duration

Sets the duration of the notification (LED, green spot or beep) the scanner emits on a good read.

Good Read Interval

Sets the interval between each notification (LED, green spot or beep) the scanner emits on a good read.

Good Read Number

Sets the number of notifications (LED, green spot or beep) the scanner emits on a good read.

Good Read Timeout

Sets the amount of time before the good read LED and the green spot turn off after a successful decoding (unless the trigger is released or the SDK release function is called before that time).

Enable Display Notification

Enables display notifications (toasts). If cleared, the scanner is disabled until you launch a scanner listener application developed using the Datalogic SDK or enable a keyboard/intent wedge.

Good Read Audio Mode

Sets the audio tone to:

- None
- Beep tone
- Audio file
- Viper beep
- Baroque beep


If **Audio file** is selected, the option **Good read audio file** displays. Tap it to select the file you want to use as good read ringtone.



NOTE: The Notification settings do not apply to an audio file.

Good Read Audio Channel

Allows to select the audio channel to be used for scanner notifications.

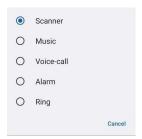


Good Read Audio Volume

Sets the volume of beep tone or audio file (if enabled).

Good Read


Use it to enable good read notifications (LED, Green Spot, Vibrator):

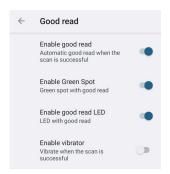

Formatting


Standard Formatting

Allows to format the barcode text by enabling and configuring the use of prefix, suffix, group separator and code identifier:

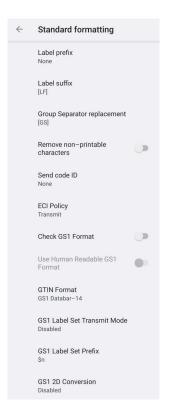

Label Prefix

Tap Label prefix to enter the characters you will be using as prefix. Tap Add special to select a special character to be added in the current cursor position:

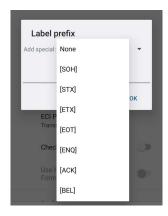

Label Suffix


Tap **Label suffix** to enter the characters you will be using as suffix. Tap **Add special** to select a special character to be added in the current cursor position:



Group Separator Replacement

The Group Separator replacement is a non printable data separator character (ASCII code 1D hex). Tap **Group Separator replacement** to enter a string that will be used as GS data separator substituting the standard GS character.

Tap Add special to select a special character to be added in the current cursor position:

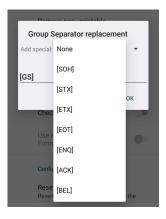


Remove Non-Printable Characters

Enable it to remove non-printable characters from a unicode string.

Send Code ID

Tap Send code ID to add a code identifier prefix or suffix to the barcode string:

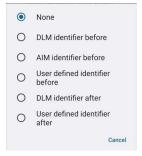

The AIM ID (Association for Automatic Identification and Mobility) is an international barcode identifier. When **AIM identifier before** is enabled, the AIM ID is inserted at the beginning of the decoded barcode.

DLM identifier is a Datalogic specific character identifier.

User defined identifier is a user specific character identifier you can set in the related symbology settings menu.

ECI Policy

Extended Channel Interpretation (ECI) is an extension to the communication protocol that is used to transmit data from a bar code reader to a host when a bar code symbol is scanned. It enables the application software to receive additional information about the intended interpretation of the message contained within the barcode symbol and even details about the scan itself.

There are two reference models for data interchange in bar coding systems:

The Basic Channel Model (BCM) describes the functional components that co-operate to convey a message via a traditional bar coding system.

The Extended Channel Model (ECM) adds a processing layer to the front and back ends of the Basic Channel, to enable ECI-capable data carriers to convey both the message and information about that message.

Select Transmit to set the data interface in "Extended Channel Mode".

Select Remove to set the data interface in "Basic Channel Mode".



Check GS1 Format

Enables the check for the GS1 format (applicable to GS1-128, GS1 Databar, GS1 DataMatrix, GS1, QR Code, etc.).

Use Human Readable GS1 Format

Enables conversion of GS1 barcodes to the readable GS1 string format when the barcode is compliant with GS1 format.

GTIN Format

Sets the representation used for the GTIN-14 format. You can choose between **GS1 Databar-14** and **GS1-128**.

GS1 Label Set Transmit Mode

Sets the mode used to transmit GS1 label sets. A label set consists of all the GS1 barcodes that have the same GTIN value. The available options are:

- Disabled: the feature is disabled
- **First Label**: Send only the first GS1 label found with a given GTIN. The same label can be sent if the double read timeout has expired without decoding it
- All Labels: Send all the labels found with a given GTIN, adding a prefix to identify
 the same label set. The same label set can be sent if the double read timeout has
 expired without decoding it
- Prioritize 2D Label: Send 2D label with a given GTIN if decoded, otherwise send the 1D label if found and if the double read timeout has expired.

GS1 Label Set Prefix

Sets the label set prefix to use when the label set mode is set to All Labels.

GS1 2D Conversion


Sets the conversion used for GS1 2D barcodes. The available options are:

Disabled: No conversion

- GS1-128: Convert the barcode to GS1-128 format
- GTIN: Take only the GTIN portion of the barcode and convert it to GTIN format
- UPCA/EAN13 Compatibility: Take only the GTIN portion of the barcode and convert it to the shortest option between GTIN, EAN13 and UPCA
- Shortest UPC/EAN Compatibility: Take only the GTIN portion of the barcode and convert it to the shortest option between GTIN, EAN13, UPCA, EAN8 and UPCE.

Visual Formatting


Enable to set up barcode visual formatting.

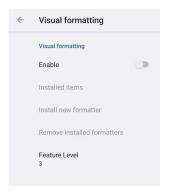

For more details, refer to https://datalogic.github.io/scan2deploy/visual-formatterbasic-concepts.

Scanner Options

Tap Scanner Options to customize the Memor 30/35 scanning behavior.

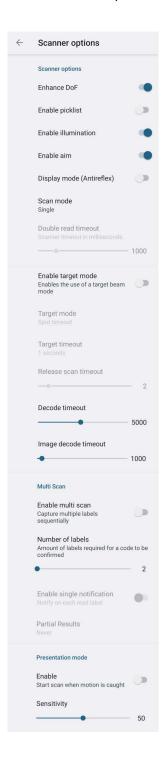

Enhance DoF

If enabled, allows to enhance the maximum reading distance.

Enable Picklist

If enabled, it allows you to pick and decode a barcode from multiple barcodes printed close together, when the scan illumination intersects more than one barcode. Only the targeted barcode will be returned.

Enable Illumination

If enabled, it causes the scanner to turn on the illumination to aid decoding.

Enable Aim

Enables the laser aim.

Display Mode (Antireflex)

Optimizes the reading of a barcode from a screen.

Scan Mode

Selects the scan operating mode for the reader.



Single

When the trigger is pulled, scanning is activated until one of the following occurs:

- a label has been read
- · the trigger is released
- the decode timeout has elapsed.

Hold Multiple

When the trigger is pulled, the device scans barcodes until the trigger is released or the decode timeout has elapsed.

Pulse Multiple

When the trigger is pulled, continuous scanning is activated until the decode timeout has elapsed or the trigger has been released and pulled again.


Always On

No trigger pull is required to read a bar code. Scanning is continually on.

Enable Target Mode

If enabled, when the scan button is pressed, the scanner will project an aiming pattern to assist in centering over the barcode before scanning.

Tap **Target mode** to select the desired targeting behavior:

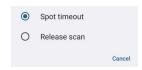


Spot Timeout

Scanning takes place after a programmable time upon pressing the scan button. Tap **Target timeout** to set the duration of the spot:



Release Scan

Scanning takes place after the scan button is released. Drag the **Release scan timeout** slider to set the scanning timeout after releasing the scan button:

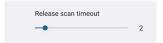


Decode Timeout

Drag the **Decode timeout** slider to set the maximum amount of time the scanner attempt to decode after target timeout (in case **Spot Timeout** is enabled) or after the scan button is pressed (in case **Target mode** is disabled):



Image Decode Timeout

You can share any image (picture, jpg/png, etc.) with the Datalogic Service to try to decode it. Drag the **Image decode timeout** slider to set the decode timeout applied with image decoding.

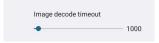

Enable Multi Scan

If selected, the scanner captures multiple labels sequentially.

Number of Labels


Drag the slider to indicate the amount of labels required for a code to be confirmed.

Enable Single Notification

If selected, it enables indicators for each label, in order to get an intermediate notification for each label decoded.

Partial Results

When multi scan mode is enabled, it selects the behaviour when partial results are present.

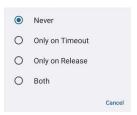

Never

The decoding session is ended successfully and all the collected labels are returned together, only if the **Number of Labels** is reached.

Only on Timeout

The decoding session is ended successfully and all the collected labels are returned together, only if the decode timeout has elapsed.

Only on Release

The decoding session is ended successfully and all the collected labels are returned together, only if the trigger is released.

Both

The decoding session is ended successfully and all the collected labels are returned together if the trigger is released or the decode timeout has elapsed.

Presentation Mode

If enabled, the device starts to scan when motion is caught.

Sensitivity

Drag the Sensitivity slider to configure the motion detector's sensitivity.

Input Selection


Tap Input Selection > Input type to select the hardware to use for scanning. The two options are: Scan engine and Camera rear.



The default value is **Scan engine**. If **Camera rear** is selected, you can set the **Preview display mode**:




The default value is **Fit screen**. Select **Manual positioning** to configure the following settings:

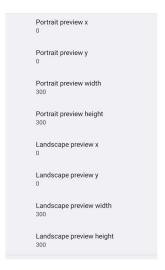

Wedge

Use it to enable or disable the keyboard wedge and the intent wedge:

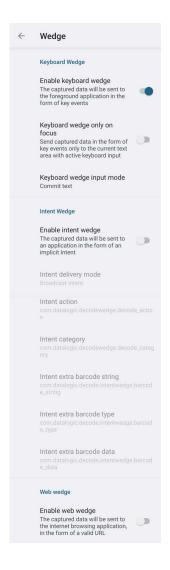

Enable Keyboard Wedge

Enables/disables the keyboard wedge mode.

Keyboard Wedge Only on Focus

If selected, the scanner is enabled whenever a text area is in focus and can receive text.

It provides a safer way to input keystrokes into the foreground application, allowing to send captured data in the form of key events only to the current text area with active keyboard input.

If this setting is not enabled, keystrokes will be always dispatched to the foreground application.

Keyboard Wedge Input Mode

Allows to select the scanned data input mode.



Text Injection

The scanned barcode is injected into the text area.

Key Pressure

The scanned barcode is translated into keyboard strokes.

Commit Text

The printable characters are injected into the text area, emulating the pressure of keyboard keys for not printable keys.

Enable Intent Wedge


Enables the broadcast of specific intents to the listening applications. The broadcasted intent can have its custom Action, Category and extra content fields. The scanner is enabled whenever the intent option is flagged.

Enable Web Wedge

Enables direct data input into internet browsing applications, in the form of a valid URL.

Symbology Settings

Each barcode symbology can be customized with additional settings that may affect that specific barcode decoding. Tap **Symbology settings** to configure symbology decoding options:

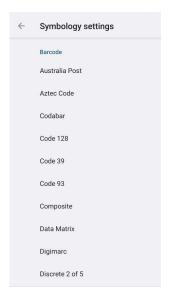

Refer to the sample symbology control panels for examples of the types of fields and options you can modify. The example below shows the settings of a Code 128 barcode symbology:




Advanced Barcode Options



Linear Quiet Zones

Tap Linear quiet zones to reduce the blank margin on either side of a linear barcode.

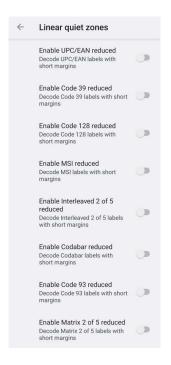

Inverted Decoding


Defines the decoding mode for regular/reverse barcodes for both 1D and 2D barcodes:





Scan Engine Information

Provides information on the scan engine.

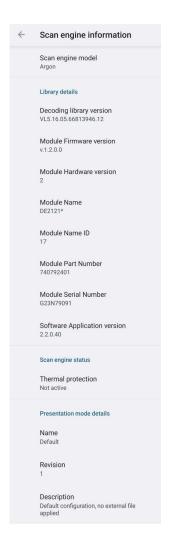

Symbologies Configuration

Use this section to change symbologies settings globally and to persist them.




Power & Sources


Suspend Timeout

You have two options to set the suspend timeout (see "" on page 18 for more information on Suspend Mode):


- 1. Tap Settings > Datalogic Settings > Power & sources:
- **External power** sets the number of seconds without user input activity before the system is suspended while running on external power.

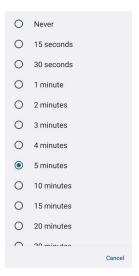

 Internal battery sets the number of seconds without user input activity before the system is suspended while running on battery power.

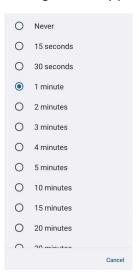

2. Tap Settings > Display > Screen timeout to set the number of seconds without user input activity before the system is suspended while running on either battery power or external power.

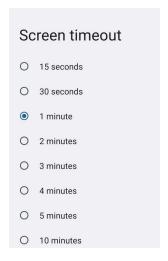

If you use the **Screen timeout** page to set the auto-suspend timeouts, the **Display** page will display the **Suspend on internal battery** timeout if no external power is connected; if the device is connected to an external power source (USB or dock), it will display the **Suspend on external power** timeout.

Charging Policies

Battery Charging Profile


This setting allows to customize the charging process according to the user's needs and priorities.

You can configure up to 6 different charging profiles:



Battery Charging Profile Policy

- Select Persistence set by device to save the selected profile into the device memory.
- Select Persistence set by battery to save the selected profile into the battery memory

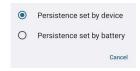

Off-Mode Charge


Controls how the charge behaves when the device is powered off.

Policy

Tap Policy to enable/disable auto power on.



Drag the Threshold slider to set the threshold for automatic start.

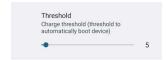

Charging Sources

Allows to select the charging source of your device.



Wake-Up Policies

The default wake-up sources are the side triggers, the pistol trigger and the PTT. Tap Settings > Datalogic Settings > Power & sources > Wake-up sources to enable/disable wake-up sources.




Keyboard & Triggers

Lock Keyboard Input

If enabled, it locks user input from the keyboard.

Triggers

Tap **Triggers** to enable/disable the trigger keys. The physical triggers are enabled by default.

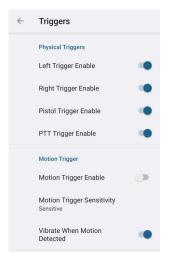

Motion Trigger

Barcode reading can be triggered by any rapid movement of the Memor 30/35. Tap **Motion Trigger Enable** to automatically read barcodes with the described specific gesture, without pressing any trigger button.

Tap **Motion Trigger Sensitivity** to select the intensity/amplitude/rapidity of the movement at which the device will automatically start scanning barcodes.



Select Vibrate When Motion Detected to enable the vibrator.


Advanced Keyboard Settings

Multitap Delay

The numeric keypad uses a multitap ABC input mode. **Multitap Delay** defines after how much time from the first key press the associated character will be submitted to the user interface.



Custom Keyboard

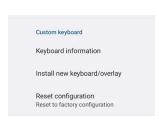

Keyboard Information

Displays keyboard info.

Install New Keyboard/ Overlay


Allows to install a new keyboard.

Reset Configuration

Restores default keyboard.

Key Remapping

Tap Add new mapping to remap an input key, then press the key you want to remap. The following window displays on screen:

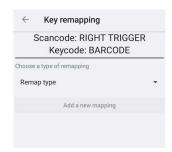


- Scancode represents the physical location of a keyboard key.
- Keycode represents the value that is mapped to a specific key.

Tap Remap type to select the remapping type:



Keycode

Select **Keycode** to map the selected key to a new function:

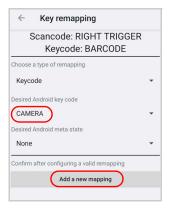


- Tap the second menu (default = **DISABLE KEY**) to select the new function you want to assign to the selected key.
- Tap the last menu (default = None) to add a modifier key (such as Ctrl, Shift or

Tap Add a new mapping. A window displays showing the new keymap.




Unicode

Select Unicode to remap a key to display Unicode characters (such as symbol "\$"):

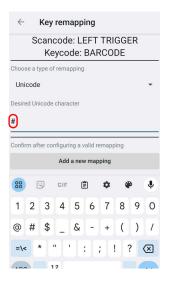


Tap Add a new mapping. A window displays showing the new keymap:

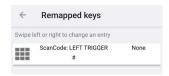


Launch an Application


Select **Start activity** to remap a key to launch an application loaded on your device. Tap **Launch An Application**:

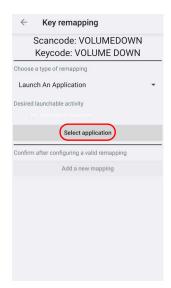



Select the desired application and then tap **Add a new mapping**. A window displays showing the new keymap:

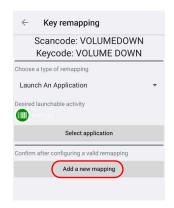

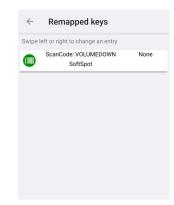

View All Remapped Keys

Tap View all remapped keys to display all remapped keys. Swipe left to edit an entry. Swipe right to remove an entry.



Key Mapping Reset

Resets all the remapped keys default.

Push to Talk

Push to talk (PTT) is a means of instantaneous communication that uses a button to switch a device from voice transmission mode to voice reception mode. Memor 30/35's PTT is compatible with Zello.

Use the Push to talk settings to:

- enable/disable notifications when PTT configuration changes
- launch a walkie-talkie app by pressing the PTT key while the screen is locked
- select a walkie-talkie application.

Ethernet

Use the Single Slot Charging/Communication Dock (available as an accessory, p/n 94A150114) or the 4-Slot Charging/Communication Dock (available as an accessory, p/n 94A150119) to connect your device to an Ethernet network (see "Ethernet Connection" on page 88).

To enable ethernet communication, tap **Datalogic Settings** > **Ethernet** and switch right to the on position.




Tap Ethernet module to configure the ethernet settings.



Wi-Fi

Wi-Fi Scan

Use the Wi-Fi scan Settings to set the interval between scans when the device is connected and when it is disconnetted.

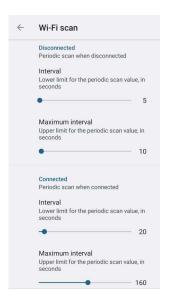

Wi-Fi Module


Use the Wi-Fi module settings to select the 802.11 mode and the band, and to enable/ disable power save and the verbose Wi-Fi module logging.

If enabled, the verbose Wi-Fi module logging increases the Wi-Fi logging level for each wireless network (SSID) you connect to according to its relative received signal strength (RSSI).



Wi-Fi Roaming

Tap Roaming profile and select Custom to configure the roaming profile of your device.

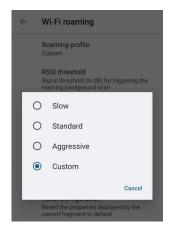



RSSI Threshold

Sets the signal strength a radio needs to see before searching for another site.

RSSI Difference

It controls the signal difference between the current access point the device is connected to and the target access point the device wants to roam to. If the target AP signal is higher than the current by at least the value of this parameter, the device will roam.

USB

To enable/disable USB communication, tap

- Datalogic Settings > USB > USB host data when the device is host.
- Datalogic Settings > USB > USB client data when the device is client.




Use the **USB** settings to set the USB function (None, MTP, PTP, MIDI).



Touch Mode

Tap **Touch mode** > **Screen sensitivity** to adjusts touch-screen sensitivity for input with a bare, a gloved finger or a stylus.

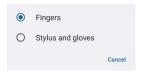

NTP

Tap NTP to set the primary NTP server addresses and to configure the NTP timeout.




Accessibility


Use the Accessibility settings to hide/unhide the status bar and the navigation bar.



Device Information


The Device info screen displays information about the device including: serial number, scan engine, sdk, system versions.

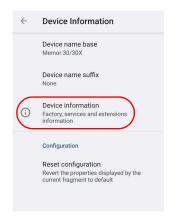

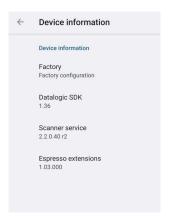

Bluetooth

Use the Datalogic Bluetooth settings to control the device visibility and set the pairing policy.

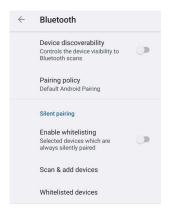

Device Discoverability

Enables/disables the device visibility to Bluetooth scans.

Pairing Policy

Tap to select one of the following options:

- Default Android Pairing
- Simple Pairing (requires user confirmation)
- Silent Pairing (no user confirmation)

Silent Pairing

Use the silent pairing settings to enable whitelisting, select and show the devices that bcan be silently paired.

System Update


The A/B system update ensures a workable booting system remains on the disk during an over-the-air (OTA) update. OTA updates can occur while the system is running, without interrupting the user. Users can continue to use their devices during an OTA, the only downtime during an update is when the device reboots into the updated disk partition.

To transfer the OTA package from your PC to the Memor 30/35, follow the steps below:


- 1. Connect the device and the PC via USB cable (see "USB Connection" on page 86);
- 2. Copy the OTA package to the device Download folder;

Local Upgrade

From the **Datalogic Settings** menu, tap **System Update** > **Local upgrade**. Tap the menu icon on the top left corner of the screen and then tap **Downloads**.

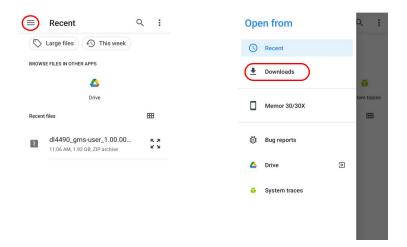

Select the update package you want to install:

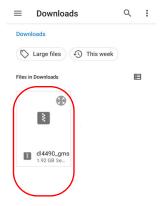



NOTE: The OTA package would be also available if copied into another folder. You just need to select the right folder.

The following window displays on screen, showing information about the device and the update package components:




The **PROPERTIES** section shows information about the device model and OS version and the update package version.

The **ACTIONS** section allows to:

- reset the device configuration after the update (see "Reset the Device" on page 25).
- force the update of all components, including those already updated.

Tap **Install Update**. The device will reboot and a success notification will be displayed. Tap the notification to display a report showing the installed update components.

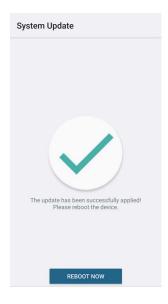





NOTE: During the update, ensure that:

 battery level is more than 20% if the Memor 30/35 is not connected to a power source;

or

• battery level is more than 15% if the Memor 30/35 is connected to a power source (USB or dock).

NETWORK & INTERNET

Connect to Wi-Fi Network

1. To turn on/off the Wi-Fi, tap Settings > Network & Internet > Internet > Wi-Fi.



If the device finds a network that you connected to previously, it will connect to it automatically.

The device also scans for available Wi-Fi networks within range and lists them. Secured networks are indicated with a lock icon.



- 2. Select the network name you want to connect to from the available network list.
- 3. If the network is open, tap the profile and then tap **Connect**, or press and hold and then select **Connect**.


If the network is secured, a dialog box appears requesting information relevant to the network security protocol (e.g., password, key, or certificate). Enter the required information, then tap **Connect**:



Add a Wi-Fi Network

- 1. Tap **Settings** > **Network & Internet** > **Internet** and verify that the Wi-Fi is turned on.
- 2. Tap Add network at the end of the available network list:
- Enter the Network SSID (Wi-Fi network name). For secure Wi-Fi network connections, tap None under Security, and then select the type of security protocol required from the pop-up menu. Enter any additional security information required by the type of security protocol selected.



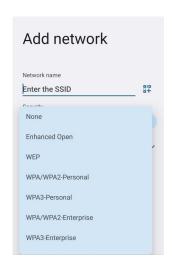

4. Tap Save.

To connect Wi-Fi with a QR code, tap the QR code icon and then scan the Wi-Fi QR Code to join the network.






CONNECTED DEVICES

Bluetooth Settings

To create a Bluetooth® pairing between your device and another device that has Bluetooth® capabilities, ensure that the two devices are turned on, discoverable, and within operable range.


Enable Bluetooth®

To enable/disable Bluetooth® connection, tap Settings > Connected Devices > Connection preferences > Bluetooth > Use Bluetooth.

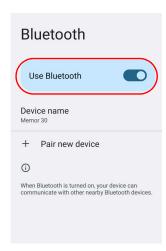

Connect to Other Bluetooth® Devices

1. Tap **Pair new device**. The device automatically starts searching for discoverable devices.

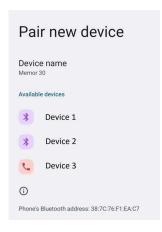

2. Swipe up the list and select a device. The **Bluetooth pairing request** dialog box displays on the screen:





- 3. Make sure both devices show the same passkey and tap Pair.
- 4. The selected Bluetooth® device is added to the **Saved devices** list and a paired connection is established.

Configure, Rename or Unpair Bluetooth® Devices

Tap Settings > Connected devices.


Select a device under **Saved devices** and tap the settings icon next to its name. The **Device Details** window displays on the screen. Type the **Edit** icon to rename the paired device.

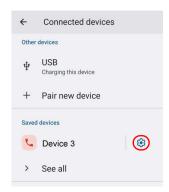


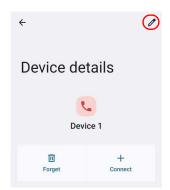



Tap **FORGET** to unpair:

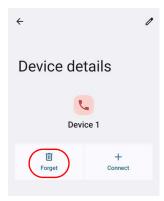

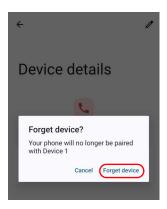

To rename your device, tap Settings > Connected Devices > Connection preferences > Bluetooth > Device name. Type in the new name.






Tap Rename to confirm.


NFC

To enable/disable short-range wireless data exchange, tap **Settings** > **Connected Devices** > **Connection preferences** > **NFC** > **Use NFC**.

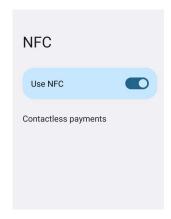

DISPLAY

Use the Display settings to set the screen brightness and theme, enable night light, change the screensaver, enable screen rotation, set display and font size.

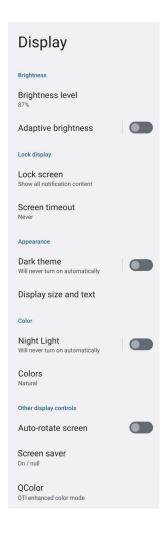

Brightness Level

Tap Brightness level and use the slider at the top of the screen to adjust the screen brightness level.



Adaptive Brightness

If enabled, your screen brightness will automatically adjust to your environment.

Lock Screen

Tap to customize your lock screen.

Screen Timeout

Tap to set the suspend timeout (see "Suspend Timeout" on page 46).

Dark Theme

Tap to enable black background.

Display Size and Text

Tap to set the size of the items on your screen and to customize the font.

Night Light

Tap to enable Night Light and adjust its intensity.

Colors

Tap to adjust the color settings.

Auto-Rotate Screen

Enables/disables screen auto-rotation.

Screen Saver

Tap to select the screen saver, set the style and time (When to start).

RECOVERY MODE

Recovery is an independent, runtime environment that's included on a separate bootable partition from the main Android OS. It contains tools to help repair your installations as well as install official OS updates by using a combination of key presses. Its main purpose is to reset the device, wipe data or perform system updates when the system crashes and the screen is unresponsive.

To enter in Recovery Mode:

- 1. Turn off the Memor 30/35 (see "Power Off" on page 19).
- 2. Press the power button and the volume up button simultaneously.
- 3. The device turns on in Recovery Mode.
- 4. Use the volume up/down buttons to navigate the menu. You can apply/force updates and perform a configuration reset. Press the power key to select.
- 5. Select **Reboot system now**. The device reboot is complete.



NOTE: In Recovery mode, you can only apply updates from external storage (see "Local Upgrade" on page 60).


DATALOGIC APPLICATIONS

BATTERY MANAGER

This application provides information about the battery features and status, allows to configure the battery charging profile and to log battery data.

Tap the **Battery Manager** icon, then tap the menu icon on the top left corner of the screen, or swipe right to display the menu.



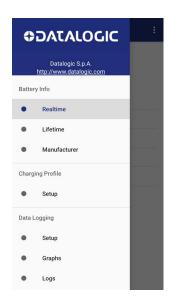

Battery Info

The **Battery Info** section provides information about the battery's health, capacity, manufacturer, level and charging status.

Battery Info - Realtime

This window provides real-time information about the battery.





Discharging Mode

Charging Mode

The top section shows the battery level.

Status

Displays the charging status.

Source

Displays the charging source.

Temperature

Displays the real-time temperature.

Voltage

Displays the real-time voltage.

Current

Displays the real-time current.

Battery Info - Lifetime

This window displays information and statistics about battery life, health and usage over its whole life cycle.



Health

Shows the current battery health and warns potential errors.

State of Health

Shows the current battery's health level.

Total Discharge

Shows how much the battery has been used over its whole life cycle.

Temperature

Shows the maximum and minimum temperature reached by the battery.

Voltage

Shows the maximum and minimum voltage reached by the battery.

Charge Current

Shows the maximum charge current.

Discharge Current

Shows the maximum discharge current.

Battery Info - Manufacturer

This window displays the model name, the type, the nominal capacity, the serial number, the product number and the manufacture date of the battery.



Charging Profile

Charging Profile - Setup

This window allows to customize the charging process according to the user's needs and priorities.


To configure a charging profile, select 1 or 2 of the following preferences:

- · Battery Lifetime.
- Maximum Capacity.
- · Charging Speed.

If a third preference is selected, the system will automatically clear the oldest option.

Tap Apply Profile to confirm.

You can configure up to 6 different charging profiles:

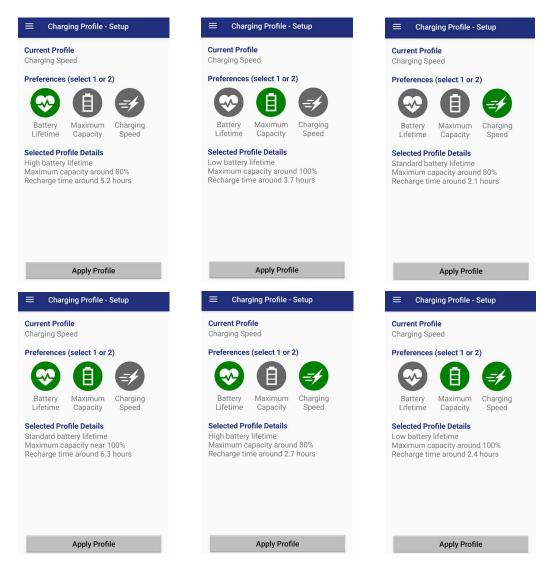

Once you have set your profile, it will be applied by default whenever you charge the device.



NOTE: The selected profile is saved into the device memory. When the battery is replaced, the device applies the current profile from the device memory.

You can change your profile at any time, even during charging.

Data Logging


The data logging feature allows to collect, store, display and analyze minute-by-minute battery data.

Setup

Use the **Setup** window to select the data you want to log.

The data logging is disabled by default. To enable it, tap **Enable Data Logging**. When enabled, the log is always running, even when the device is in suspend mode.



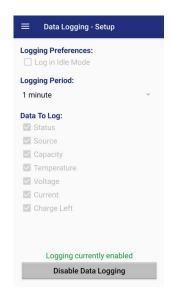


Graphs

The **Graphs** window provides a graphical display of selected data on a specific date.




Select Date

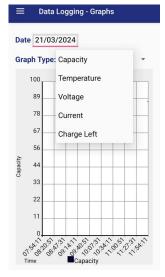

Select Data


Logs

The Logs window displays data details by date.

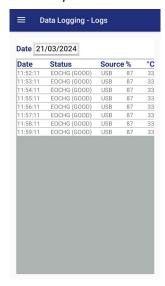


Manage

The Manage window allows to remove or export logs.

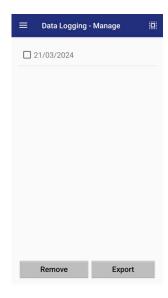

Select one or more logs and tap **Remove** to remove them. Tap **OK** to confirm:

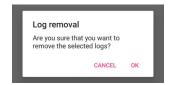


Select one or more logs and tap **Export** to export data and store them for extended periods.

The selected log files will be saved in the "battery" folder in the internal storage of your device.

Application

Settings

The **Settings** section allows to set the value ranges that will be used to create the graphs.

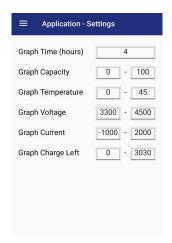

Info

The Info section displays information about the device name and the software version.




SOFTSPOT™

Datalogic's SoftSpot technology is a user-definable "floating soft trigger" meant to provide easy access to the barcode scanner application and other frequently used functionalities on mobile scanning devices.


Tap the **SoftSpot** icon on the favorites tray or on the All Apps screen to enable the **Soft-Spot**.

Tap **Show SoftSpot** to show the SoftSpot trigger on your screen.

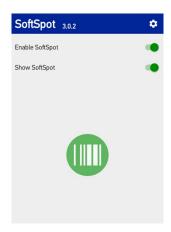

Tap the Settings icon on the top right corner to configure the SoftSpot settings.




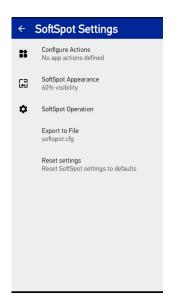


Configure Actions


You can use SoftSpot to quickly switch between the applications you actively use.

From the SoftSpot settings screen, tap **Configure Actions** > + to add the applications you want to launch with SoftSpot.

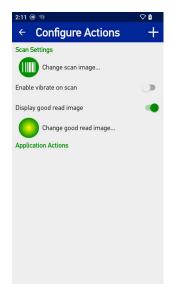

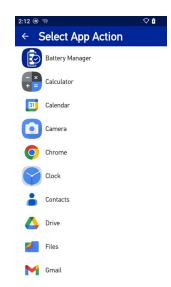

Only one action is active at a given moment. Tap the SoftSpot to launch the application. You can switch between actions by swiping left and right on the SoftSpot.

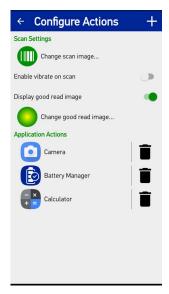



To remove an application from the actions list, tap the trash bin icon on its right.



You can also use the **Configure Actions** screen to change the SoftSpot image, to display and change the good read image and to enable the vibrator.

SoftSpot Appearance

Tap **SoftSpot Appearance** and drag the **Visibility** slider to set the SoftSpot transparency level.

Pinch to change the SoftSpot size.

Flag the **Lock position** checkbox to lock the position of the SoftSpot on your screen.



SoftSpot Operation

Tap SoftSpot Operation to:

- Enables SoftSpot on boot.
- Enables the swipe up to hide feature, that allows to hide the SoftSpot from the screen by swiping it up in the Notification/Status bar.



Export to File

Allows to export your settings to a configuration file.



Reset Settings

Resets SoftSpot settings to default.

TOOLS

Refer to the Datalogic Mobile Computers Software Tools main page to find more detailed and up-to-date information: https://datalogic.github.io/.



USB ADB DRIVER

USB connection allows to read and write files on both the internal storage memory and the external storage memory, but doesn't allow to install applications.

Android Debug Bridge (ADB) is a command-line utility included with Google's Android SDK and you can use it to control your device over USB from a computer, copy files back and forth, install and uninstall apps and run shell commands.

SDK ADD-ON

SDK add-on is a library which extends the Android SDK and development tools.

For more information and instructions to install SDK Add-on, Android™ Studio and Android SDK, visit the website https://datalogic.github.io/android/overview.

Install ADB Driver

1. Download and install the Google USB Driver (see https://developer.android.com for further information).



NOTE: Before installing the Google USB Driver, ensure you have installed the Datalogic plug-in.

2. In order to use ADB with your device connected over USB, you must enable USB debugging in the device system settings. To enable Android Developer options, go to Settings > About phone and tap on the Build Number section 7 times. After the 7th tap, the Developer options will be unlocked and available. Go back to Settings > System and tap Developer options. Enable USB debugging:



Create a New Application based on Datalogic SDK Add-on with Android Studio

For information and instructions to configure Datalogic SDK Add-on in Android Studio, refer to the website:

https://datalogic.github.io/android/overview.

DATALOGIC SDK

For information on the Datalogic SDK APIs, visit the web site: https://datalogic.github.io/android/overview.

DATALOGIC OEMCONFIG

OEMConfig is a new Android standard that enables device manufacturers to create custom device features that can be immediately and universally supported by enterprise mobility management (EMM platforms). Instead of integrating enterprise APIs from each OEM to support their custom features such as control of barcode scanners or enabling extra security features, EMMs can easily use an OEM-built application that configures all of the unique capabilities of a device.

OEMConfig utilizes a feature in Android Enterprise called managed configurations, which allows developers to provide built-in support for the configuration of apps. With OEMConfig, EMMs can support all of a device manufacturer's diverse set of controls without any incremental development work on their end.

For more details, visit the website: https://datalogic.github.io/oemconfig.


WI-FI QR CODE GENERATOR

Allows to generate a QR code that will automatically connect your device to a Wi-Fi network when scanned.

For more details, visit the website: https://datalogic.github.io/wifiqr.

SCAN2DEPLOY

Scan2Deploy is a configuration tool that uses special barcode labels.

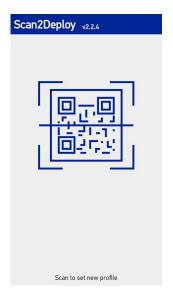

For more details, visit the website: https://datalogic.github.io/scan2deploy.

DATALOGIC LAUNCHER

Datalogic Launcher is an Android application used to lock down the device to launch only allowed applications. It can also limit access to several system device features, such as the Overview button (for switching apps) and the Global Actions dialog (for restarting the device). Once started, it behaves as the device Home screen (when you tap the Home button).

For more details, visit the website: https://datalogic.github.io/launcher/overview.

DATALOGIC ENTERPRISE BROWSER

Datalogic Enterprise Browser is an Android application used for web browsing to only allowed websites. It also includes a JavaScript interface which exposes access to the barcode scanner. These features combine to allow the device to run web-based applications which need to access the scanner in a safe, controlled environment.

For more details, visit the website: https://datalogic.github.io/browser/overview.

DATA CAPTURE

Embedding new Datalogic Halogen™ DE2121-DL and DE2121-ER scan engines, the Memor 30/35 family delivers impressive versatility for any application in an extended range of working distances from 5cm/1.97in up to 10m /32.8ft.

DeepSight™ integrated technology provides superior sensitivity and high visible illumination system, guaranteeing first-class reading performances even in extreme light and dark environment conditions. Its outstanding motion tolerance allows to decode poorly printed barcodes as well as barcodes displayed on mobile devices and LCD screens.

See "Scanner & Decoder" on page 29 for instructions on configuring the scanner settings.


Models with DE2121-DL

To scan a bar code symbol:

- 1. Point the scan window at the barcode from a distance within the reading range.
- 2. Press one of the scan triggers. The imager projects a red laser aiming cross that is used to position the barcode or object within the field of view.



3. Center the symbol in any orientation within the aiming pattern. Ensure the entire symbol is within the rectangular area formed by the brackets in the aiming pattern, then either wait for the timeout or release the scan trigger to capture the image. A red beam illuminates the symbol, which is captured and decoded.

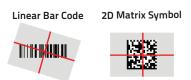

If the scan has been successful:

- If enabled, the good read beep plays.
- If enabled, the GreenSpot projects a green spot onto the bar code image.
- If enabled, the good read indicator glows solid green.

Models with DE2121-ER

To scan a bar code symbol:

- 1. Point the scan window at the barcode.
- 2. Press one of the scan triggers. A red laser aiming spot illuminates the symbol, which is captured and decoded.



If the scan has been successful:

- If enabled, the good read beep plays.
- If enabled, the GreenSpot projects a green spot onto the bar code image.
- If enabled, the good read indicator glows solid green.




NOTE: In models with DE2121-ER scan engine the green spot is visible on short range.

CONNECTIONS

USB CONNECTION

USB Direct Connection

You can use a standard USB Type-C cable (not included in the box) to directly connect to directly connect the Memor 30/35 to a host computer and transfer data through the USB interface.

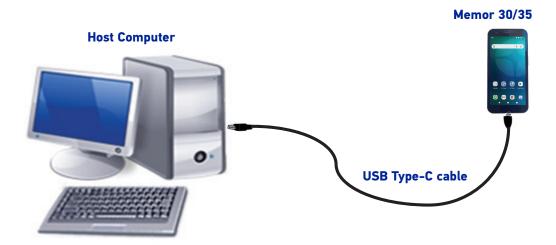

- 1. Turn on the Memor 30/35.
- 2. Turn on the host computer.
- 3. Connect the device to the host PC via USB cable.
- 4. Scroll down the notification bar, tap the charging notification and change to **File Transfer**.




5. The device is now visible in your PC as a USB disk. You can start the data transfer.



NOTE: Connection through the cable complies to USB Type-C standard.

USB Dock Connection

You can use a standard USB Type-C cable (not included in the box) to directly connect the Memor 30/35 to a host computer and transfer data through the USB interface.

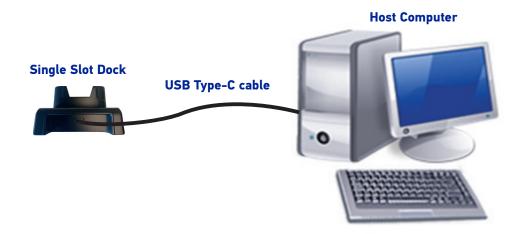

- 1. Turn on the host computer.
- 2. Connect the dock to the host computer by means of a standard USB type-C cable.
- 3. Turn on the Memor 30/35.
- 4. Insert the Memor 30/35 into the dock.
- 5. Scroll down the notification bar, tap the charging notification and change to File Transfer.



6. The device is now visible in your PC as a USB disk. You can start the data transfer.



NOTE: When the device is inserted into the dock, all ongoing USB connections shall be kept until the corresponding port is unplugged.

ETHERNET CONNECTION

Use the Use the Single Slot Charging/Communication Dock (available as an accessory, p/n 94A150114) or the 4-Slot Charging/Communication Dock (available as an accessory, p/n 94A150119) to build a reading system for the collection, decoding and transmission of barcoded data.


Ethernet Dock Connection

- 1. Connect the dock to the power supply (available as an accessory, p/n 94ACC0380).
- 2. Plug a CAT-5 ethernet cable into the ethernet port on the back of the dock.
- 3. Plug the ethernet cable into the ethernet hub or a port on the host device.
- 4. Insert the Memor 30/35 into the dock.



WI-FI CONNECTION

The Memor 30/35 has a Wi-Fi 6e WLAN (Wireless Local Area Network) radio and can communicate with other Wi-Fi compliant products including access points, workstations via PC card adapters and other wireless portable devices.

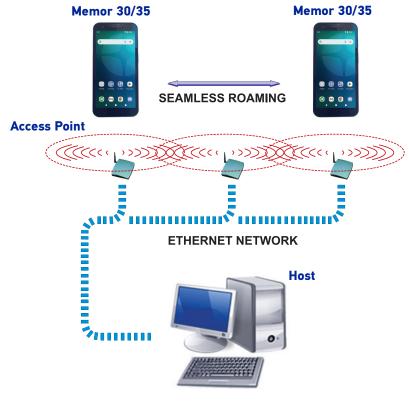

APPLICATION SERVER



NOTE: Area coverage and radio performance may vary, due to environmental conditions, access point types or interference caused by other devices (microwave ovens, radio transmitters, etc.).

WWAN CONNECTION¹

The Memor 35 enhances your connectivity solutions giving you an opening to an international wireless infrastructure that is the global standard. It is optimized for the following two-way communications:

- Voice: voice data (including VoLTE, VoNR and Wi-Fi calling)
- Data: Available speed depends on the wireless network carrier and their supported packet-data technology in addition to network conditions.

The Memor 35 supports the following 2G bands:

- EU (ROW): GSM 850/900/1800/1900 MHz
- NA: GSM 850/1900 MHz.

The Memor 35 supports the following 3G bands:

- EU (ROW): WCDMA B1/2/4/5/8
- NA: WCDMA B/2/4/5.

The Memor 35 supports the following LTE bands:

- EU (ROW): FDD_LTE B1/2/3/5/7/8/17/19/20/25/28/66, TDD_LTE B38/40/41/42/43
- NA: FDD_LTE B2/4/5/7/12/13/14/17/19/25/26/29/30, TDD_LTE B38/41/48.

The Memor 35 supports the following 5G bands:

- EU (ROW): 5G NR n1/2/3/5/7/8/20/25/28/38/40/41/66/71/77/78
- NA: 5G NR n2/5/7/12/13/14/25/26/29/30/38/41/48/66/77/78

Private networks, CBRS and FirstNET supported.





In order to use a WWAN Connection you have to install a SIM Card (See "Getting Started" on page 17).



NOTE: Area coverage and cellular performance may vary, due to environmental conditions, tower/ base station types or interference caused by other devices (microwave ovens, radio transmitters, etc.).

^{1.} Available only on SGVNR/SGVNRNA Models.

BLUETOOTH® SERIAL CONNECTION

The Memor 30/35 can communicate with a Bluetooth® device, such as a printer, within a range of 10 m, using the on-board Bluetooth® module.





NOTE: In order to extend battery life, the Bluetooth® module is off by default. If you need to have Bluetooth® working, the module must be powered on (see "Bluetooth Settings" on page 64).

Area coverage and Bluetooth® radio performance may vary, due to environmental conditions or interference caused by other devices (microwave ovens, radio transmitters, etc.).

NEAR FIELD COMMUNICATION (NFC)

NFC technology allows short-range, wireless data transfer between the terminal and NFC tags or other NFC enabled devices placed in close proximity to the back of the terminal.

Memor 30/35 support the following modes of operation:

- NFC tag reader/writer mode: the terminal reads and/or writes digital information from or to an NFC tag.
- NFC card emulation mode The terminal emulates an NFC card (smart card) that an external card reader can access.

Read NFC Tags

- 1. Make sure NFC is enabled (see "NFC" on page 66).
- 2. Hold the NFC tag close to the back of the terminal.
- 3. When an NFC tag is recognized, the terminal emits a sound and the tag data displays on the terminal screen.



NOTE: Suspend mode and the screen lock temporarily turns the NFC radio off.

WIRELESS AND RADIO FREQUENCIES WARNINGS



WARNING; Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals generated by Memor 30/35.

Datalogic recommends persons with pacemakers or other medical devices to follow the same recommendations provided by Health Industry Manufacturers Associations for mobile computers.

Persons with pacemakers:

- Should ALWAYS keep this device more than twenty five (25) cm from their pacemaker and/or any other medical device;
- Should not carry this device in a breast pocket;
- Should keep the device at the opposite side of the pacemaker and/or any other medical device;
- Should turn this device OFF or move it immediately AWAY if there is any reason to suspect that interference is taking place.
- Should ALWAYS read pacemaker or any other medical device guides or should consult the manufacturer of the medical device to determine if it is adequately shielded from external RF energy.

In case of doubt concerning the use of wireless devices with an implanted medical device, contact your doctor.

Turn this device OFF in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may use equipment that could be sensitive to external RF energy.

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

An air bag inflates with great force. DO NOT place objects, including either installed or portable wireless equipment, in the area over the air bag or in the air bag deployment area. If a vehicle's wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Turn off the device when in any area with a potentially explosive atmosphere. Observe restrictions and follow closely any laws, regulations, warnings and best practices on the use of radio equipment near fuel storage areas or fuel distribution areas, chemical plants or where any operation involves use of explosive materials.

Do not store or carry flammable liquids, explosive gases or materials with the device or its parts or accessories.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked or shown.

Sparks in such areas could cause an explosion or fire, resulting in injury or even death.

TECHNICAL FEATURES

TECHNICAL DATA


ITEM	DESCRIPTION	
PHYSICAL CHARACTERISTICS		
Dimensions	167.6 x 78.6 x 17.7 mm / 6.61 x 3.09 x 0.70 in	
Weight	With Battery: 312 g/ 10 oz	
Primary Display	6.0 inch in LTPS in 18:9 format – FHD+ resolution 2160 x 1080; LED backlight; 500 NITS typical	
Touch Panel	Touch Screen: 5 points multi-touch capacitive panel with hardened Gorilla Glass 5 and optical bonding; Support for gloves and stylus; water drops rejection and anti-finger-print surface finishing	
Keys	Physical Keys: 2 side scan keys; PTT; Power On/Off; Volume Up/ Down; 3 Android soft keys	
ELECTRICAL		
Battery	1 piece swappable battery pack with rechargeable Li-Ion batteries; 3.86V; 4,680 mAh typical (18.0 Watt-hours) 'Safe Swap' for application data protection	
Wireless Charging	WPC Qi EPP compatible; 7W charging	
SENSORS		
Vibration	Software programmable for duration and intensity	
Accelerometer	3-Axis accelerometer to detect orientation	
Gyroscope	Senses angular velocity	
Ambient Light	Auto adjusts display backlight	
Proximity	Auto deactivates display when close to face	
Magnetometer	E-compass for direction and orientation detection	
Barometer	Atmospheric pressure / Z-location (Memor 35/35X only)	

ITEM	DESCRIPTION	
ENVIRONMENTAL		
Drop Resistance	Multiple 1.8m/6ft drops to concrete over operating temp (-20°C to 50°C/-4°F to 122°F) with protective boot per MIL STD 810 H; Multiple 1.2/4ft m drops to concrete over operating temp (-20°C to 50°C/-4°F to 122°F) per MIL STD 810 H;	
Tumbles	3000 0.5m/1.6 ft tumbles at room temperature with protective boot, meets and exceed 60068-2-32 Procedure 2 specification; 1500 1m/3.2 ft tumbles at room temperature with protective boot, meets and exceed IEC 60068-2-32 Procedure 2 specification; 600 0.5m/1.6 ft tumbles at room temperature without protective boot, meets and exceed IEC 60068-2-32 Procedure 2 specification	
Sealing	IP65 and IP68 with battery, per IEC60529 specification	
Chemical Resistance	General purpose chemical cleansers: Water solution of Sodium Hypochlorite 0,8% Windex Multisurface / Glassex with ammonia Formula 409, Glass and Surface cleaner / Glassex with ammonia Ethyl alcohol 70%, Isopropyl alcohol 70%, Hydrogen peroxide 3%	
Temperature	Operating: -20 to 50 °C / -4 to 122 °F Storage/Transport: -30 to 70 °C / -22 to 158 °F	
ESD	15kV air discharge / 8kV contact discharge	
SYSTEM		
SIM Slot	1 Nano SIM; 1 eSIM (Memor 35/35X only)	
Expansion Slots	1 Ultra High-Speed Micro SD card (up to 2 TB)	
Memory	System RAM: 6 GB; UFS Flash: 128 GB	
Microprocessor	Qualcomm QCx4490 Octa-core 2.4 GHz	
Operating System	Android v13 GMS (platform upgradeable to Android 18)	
Real-Time Clock	Time and date stamping under software control	
INTERFACES		
Interfaces	High Speed USB 3.2 gen1 Host and Client (Type-C); Super Speed USB 2.0 (Type-C, Bottom I/O)	
AUDIO		
Microphones	2 mics, with advanced AI noise cancellation	
Loudspeaker	Speaker for handsfree calls and audio application	
Receiver	Speaker for voice calls	

ITEM	DESCRIPTION		
WIRELESS COMMUNICATIONS			
Local Area Network (WLAN)	Wi-Fi 6e IEEE 802.11 a/b/g/n/ac/ax and 802.11 d/h/i/k/r/v/w/mc; Frequency range: Country dependent, typically 2.4 GHz, 5 GHz and 6 GHz bands; 2 x 2 MU-MIMO; WPA3 Enterprise 192-bit mode supported		
Personal Area Network (WPAN)	Bluetooth wireless technology v5.2 (Classic Bluetooth wireless technology and BLE)		
NFC Communication	Support for the following standards: Tag types 1/2/3/4/5 (ISO14443-4 A/B; ISO15693; Mifare; Felica) Card emulator. Contactless payments and Apple ECP protocol supported.		
WWAN/Cellular (Memor 35/35X only)	 5G NR FR1; LTE-Advanced / 4G+; 3GPP Rel.16; EMEA and ROW Configuration: GSM: Quad band; WCDMA: B1/2/4/5/8; FDD_LTE: B1/2/3/4/5/7/8/17/19/20/25/28/66; TDD_LTE: B38/40/41/42/43; 5G: n1/2/3/5/7/8/20/25/28/38/40/41/66/71/77/78; North America Configuration (AT&T and Verizon certified): GSM: 850/1900; WCDMA: B2/4/5; FDD_LTE: B2/4/5/7/12/13/14/17/19/25/26/29/30/66; TDD_LTE: B38/41/48; 5G: n2/5/7/12/13/14/25/26/29/30/38/41/48/66/77/78; VoLTE, VoNR and Wi-Fi calling enabled; CBRS (4G and 5G) 		
Global Positioning System (GPS)	Integrated Assisted-GPS (A-GPS) Supported Types: GPS, Galileo, GLONASS, BeiDou		
READING PERFORMANCE			
Camera	Rear Camera: Resolution: 13 megapixel; Auto focus Illumination: User controllable LED flash (torch mode); Front Camera: Resolution: 8 megapixel; Fixed focus		
Scan Engine	Halogen™ DE2121-DL 1D/2D scan engine; Halogen™ DE2121-ER Extended Range 1D/2D scan engine; Datalogic's 'Green Spot' for good-read feedback		

ITEM	DESCRIPTION	
SOFTWARE		
Datalogic Mobility Suite		
Protection	Shield - Android Security Updates Launcher – to lockdown device to kiosk mode Enterprise Browser - to web-browse only to a set of approved URLs Integrity KIT - to safeguard HW interfaces	
Configuration	Scan2Deploy Studio – to configure and stage devices OEMConfig – for UEM/EMM Compatibility AE QR Code Enrollment – for easy EMM/UEM enrollment	
Development	SDKs (Java, Kotlin, Xamarin, NET MAUI JavaScript) Visual Formatter – a no-code platform for barcode formatting Wedge – a configurable bar code scanning input method	
Optimization	SoftSpot – a draggable touch scanner trigger Logger – to collect advanced device events log Wi-Fi Guard – to collect Wi-Fi data and statistics Battery Manager – to select from different charging policies	
Additional Features		
Provisioning	Android Zero-Touch, Android Enterprise QR Code, NFC Bump, EMM Token, DPC Identifier enrollment	
UEM/EMM	SOTI MobiControl, VMWare Workspace One, Microsoft Intune, 42Gears SureMDM, Ivanti Neurons, Ivanti Avalanche, and any 0EM Config compliant UEM/EMM	
Terminal Emulator and PTT Compatibility Highlight	Ivanti Velocity, StayLinked Smart TE, Zello PTT	
SAFETY & REGULATORY		
Agency Approvals	The product meets necessary safety and regulatory approvals for its intended use	
Enviromental Compliance	Complies to EU RoHS	
WARRANTY		
Warranty	1-Year Factory Warranty	

TEST CODES

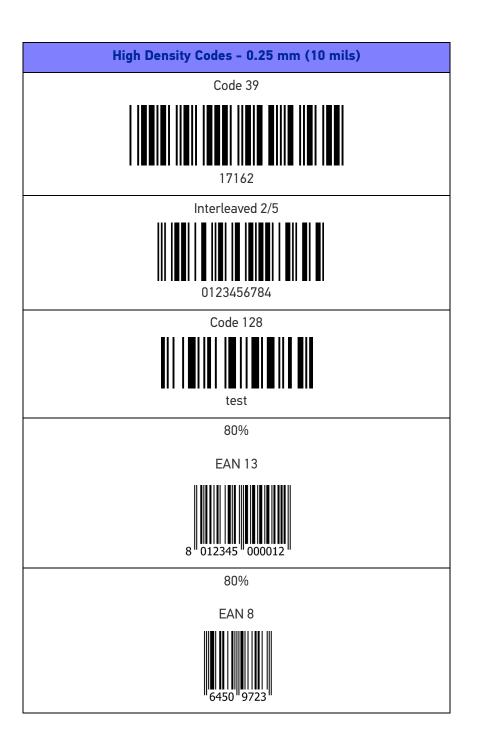

Medium Density Codes - 0.38 mm (15 mils)

Code 39



Interleaved 2/5



Code 128



100%

EAN 13




100%

EAN 8



Low Density Codes - 0.50 mm (20 mils) Code 39 Interleaved 2/5 Code 128 120% **EAN 13** 120% EAN 8

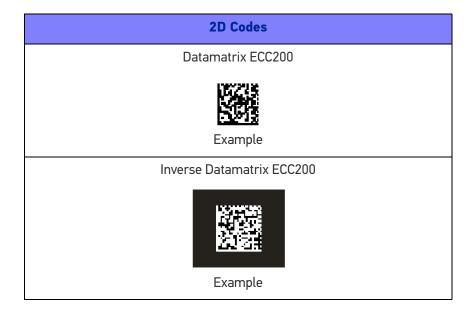

MAINTENANCE

CLEANING

Periodically clean the Memor 30/35 device and the docks using a soft cloth slightly dampened with only water, or one of the following allowed cleaning agents:

- Water solution of Sodium Hypochlorite 0,8%
- Windex Multisurface / Glassex with ammonia
- Formula 409, Glass and Surface cleaner / Glassex with ammonia
- Ethyl alcohol 70%
- Isopropyl alcohol 70%
- Hydrogen peroxide 3%.

Do not use any other cleaning agents (e.g. different alcohol, abrasive or corrosive products, solvents) or abrasive pads to clean the device.

Do not spray or pour liquids directly onto the device.

The device is IP65 waterproof.

ERGONOMIC RECOMMENDATIONS



CAUTION: In order to avoid or minimize the potential risk of ergonomic injury follow the recommendations below. Consult with your local Health & Safety Manager to ensure that you are adhering to your company's safety programs to prevent employee injury.

- Reduce or eliminate repetitive motion
- Maintain a natural position
- Reduce or eliminate excessive force
- Keep objects that are used frequently within easy reach
- Perform tasks at correct heights
- Reduce or eliminate vibration
- Reduce or eliminate direct pressure
- Provide adjustable workstations
- Provide adequate clearance
- Provide a suitable working environment
- Improve work procedures.

SAFETY AND REGULATORY INFORMATION



NOTE: Read carefully the Memor 30/35 User Manual before performing any type of connection to the Memor 30/35.

The user is responsible for any damage caused by incorrect use of the equipment or by inobservance of the indication supplied in the user manual.

GENERAL SAFETY RULES

- Before using the device and the battery pack, read carefully the chapter "Battery" on page 8.
- Use only the components and accessories supplied by the manufacturer for the specific Memor 30/35 being used.
- Do not attempt to disassemble the Memor 30/35 PDA, as it does not contain parts that can be repaired by the user. Any tampering will invalidate the warranty.
- When replacing the battery pack or at the end of the operative life of the Memor 30/35 PDA, disposal must be performed in compliance with the laws in force in your jurisdiction.
- Do not submerge the Memor 30/35 in liquid products.
- For further information or support, refer to this manual and to the Datalogic web site: www.datalogic.com.



NOTE: See the Safety & Regulatory Addendum included with your product for additional regulatory, safety and legal information.

TECHNICAL SUPPORT

SUPPORT THROUGH THE WEBSITE

Datalogic provides several services as well as technical support through its website. Log on to (www.datalogic.com).

For quick access, from the home page click on the search icon , and type in the name of the product you're looking for. This allows you access to download Data Sheets, Manuals, Software & Utilities, and Drawings.

Hover over the Support & Service menu for access to Services and Technical Support.

Reseller Technical Support

An excellent source for technical assistance and information is an authorized Datalogic reseller. A reseller is acquainted with specific types of businesses, application software, and computer systems and can provide individualized assistance.

REFERENCE DOCUMENTATION

For further information regarding Memor 30/35 refer to the SDK Help on-line and to the Memor 30/35 User's Manual, downloadable from our developer portal: https://developer.datalogic.com/mobile-computers.

WARRANTY TERMS AND CONDITIONS

Datalogic warrants that the Products shall be free from defects in materials and workmanship under normal and proper use during the Warranty Period. Products are sold on the basis of specifications applicable at the time of manufacture and Datalogic has no obligation to modify or update Products once sold. The Warranty Period shall be **one year** from the date of shipment by Datalogic, unless otherwise agreed in an applicable writing by Datalogic.

Datalogic will not be liable under the warranty if the Product has been exposed or subjected to any: (1) maintenance, repair, installation, handling, packaging, transportation, storage, operation or use that is improper or otherwise not in compliance with Datalogic's instruction; (2) Product alteration, modification or repair by anyone other than Datalogic or those specifically authorized by Datalogic; (3) accident, contamination, foreign object damage, abuse, neglect or negligence after shipment to Buyer; (4) damage caused by failure of a Datalogic-supplied product not under warranty or by any hardware or software not supplied by Datalogic; (5) any device on which the warranty void seal has been altered, tampered with, or is missing; (6) any defect or damage caused by natural or man-made disaster such as but not limited to fire, water damage, floods, other natural disasters, vandalism or abusive events that would cause internal and external component damage or destruction of the whole unit, consumable items; (7) use of counterfeit or replacement parts that are neither manufactured nor approved by Datalogic for use in Datalogic-manufactured Products; (8) any damage or malfunctioning caused by non-restoring action as for example firmware or software upgrades, software or hardware reconfigurations etc.; (9) loss of data; (10) any consumable or equivalent (e.g. cables, power

supply, batteries, etc.); or (11) any device on which the serial number is missing or not recognizable.

THE DATALOGIC WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, WHETHER WRITTEN, EXPRESS, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE. DATALOGIC SHALL NOT BE LIABLE FOR ANY DAMAGES SUSTAINED BY BUYER ARISING FROM DELAYS IN THE REPLACEMENT OR REPAIR OF PRODUCTS UNDER THE ABOVE. THE REMEDY SET FORTH IN THE WARRANTY STATEMENT IS THE BUYER'S SOLE AND EXCLUSIVE REMEDY FOR WARRANTY CLAIMS. NO EXTENSION OF THIS WARRANTY WILL BE BINDING UPON DATALOGIC UNLESS SET FORTH IN WRITING AND SIGNED BY DATALOGIC'S AUTHORIZED REPRESENTATIVE. DATALOGIC'S LIABILITY FOR DAMAGES ON ACCOUNT OF A CLAIMED DEFECT IN ANY PRODUCT DELIVERED BY DATALOGIC SHALL IN NO EVENT EXCEED THE PURCHASE PRICE OF THE PRODUCT ON WHICH THE CLAIM IS BASED. DATALOGIC SHALL NOT BE LIABLE FOR DAMAGES RELATING TO ANY INSTRUMENT, EQUIPMENT, OR APPARATUS WITH WHICH THE PRODUCT SOLD UNDER THIS AGREEMENT IS USED. Further details on warranty coverage, rights and conditions are addressed under and regulated by the Terms and Conditions of Sales of Datalogic available at https://www.datalogic.com/terms_conditions_sales.

GLOSSARY

Access Point

A device that provides transparent access between Ethernet wired networks and IEEE 802.11 interoperable radio-equipped mobile units. Hand-held mobile computers, PDAs or other devices equipped with radio cards, communicate with wired networks using Access Points (AP). The mobile unit (mobile computer) may roam among the APs in the same subnet while maintaining a continuous, seamless connection to the wired network.

ASCII

American Standard Code for Information Interchange. A 7 bit-plus-parity code representing 128 letters, numerals, punctuation marks and control characters. It is a standard data transmission code in the U.S.

Barcode

A pattern of variable-width bars and spaces which represents numeric or alphanumeric data in binary form. The general format of a barcode symbol consists of a leading margin, start character, data or message character, check character (if any), stop character, and trailing margin. Within this framework, each recognizable symbology uses its own unique format.

Bit

Binary digit. One bit is the basic unit of binary information. Generally, eight consecutive bits compose one byte of data. The pattern of 0 and 1 values within the byte determines its meaning.

Bluetooth@

A standard radio technology using a proprietary protocol, targeted for short-range and low-power communication networks.

Boot

The process a computer goes through when it starts. During boot, the computer can run self-diagnostic tests and configure hardware and software.

Byte

On an addressable boundary, eight adjacent binary digits (0 and 1) combined in a pattern to represent a specific character or numeric value. Bits are numbered from the right, 0 through 7, with bit 0 the low-order bit. One byte in memory can be used to store one ASCII character.

Character

A pattern of bars and spaces which either directly represents data or indicates a control function, such as a number, letter, punctuation mark, or communications control contained in a message.

Decode

To recognize a barcode symbology (e.g., Codabar, Code 128, Code 3 of 9, UPC/EAN, etc.) and convert the content of the barcode scanned from a visual pattern into electronic data.

Depth of Field (DOF)

The portion of a scene that appears acceptably sharp in the image. Although a lens can precisely focus at only one distance, the decrease in sharpness is gradual on each side of the focused distance, so that within the DOF, the unsharpness is imperceptible under normal viewing conditions.

Dock

A dock is used for charging the terminal battery and for communicating with a host computer, and provides a storage place for the terminal when not in use.

Ethernet

The standard local area network (LAN) access method. A reference to "LAN", "LAN connection" or "network card" automatically implies Ethernet. Defined by the IEEE as the 802.3 standard, Ethernet is used to connect computers in a company or home network as well as to connect a single computer to a cable modem or DSL modem for Internet access.

Firmware

A software program or set of instructions programmed on a hardware device. It provides the necessary instructions for how the device communicates with the other computer hardware. Firmware is typically stored in the flash ROM of a hardware device. While ROM is "read-only memory," flash ROM can be erased and rewritten because it is actually a type of flash memory.

Flash Memory

Non-volatile memory for storing application and configuration files.

GSM

Global System for Mobile communication. It is a standard for digital cellular communications, currently used around the world on as many as seven bands.

Host

A computer that serves other mobile computers in a network, providing services such as network control, database access, special programs, supervisory programs, or programming languages.

IEC

International Electrotechnical Commission. This international agency regulates laser safety by specifying various laser operation classes based on power output during operation.

IEEE 802.11

A set of standards carrying out wireless local area network (WLAN) computer communication in the 2.4, 3.6, 5 and 6 GHz frequency bands. They are created and maintained by the IEEE LAN/MAN Standards Committee.

LAN

Local area network. A wireless or wired network that supports data communication within a local area, such as within a warehouse of building.

Laser

Light Amplification by Stimulated Emission of Radiation. The laser is an intense light source. Light from a laser is all the same frequency, unlike the output of an incandescent bulb. Laser light is typically coherent and has a high energy density.

Light Emitting Diode (LED)

A low power electronic light source commonly used as an indicator light. It uses less power than an incandescent light bulb but more than a Liquid Crystal Display (LCD).

Liquid Crystal Display (LCD)

A display that uses liquid crystal sealed between two glass plates. The crystals are excited by precise electrical charges, causing them to let the backlight illumination pass through them according to their bias. They use little electricity and react relatively quickly.

MIL

1 mil = 1 thousandth of an inch.

Pairing

A Bluetooth@ pairing occurs when two Bluetooth@ devices agree to communicate with each other and establish a connection.

RAM

Random Access memory. Data in RAM can be accessed in random order, and quickly written and read.

Resolution

The narrowest element dimension which is distinguished by a particular reading device or printed with a particular device or method.

Scanner

An electronic device used to scan bar code symbols and produce a digitized pattern that corresponds to the bars and spaces of the symbol. Its three main components are:

- Light source (laser or photoelectric cell) illuminates a bar code.
- Photodetector registers the difference in reflected light (more light reflected from spaces).
- Signal conditioning circuit transforms optical detector output into a digitized bar pattern.

SDK

Software Development Kit.

Symbol

A scannable unit that encodes data within the conventions of a certain symbology, usually including start/stop characters, quiet zones, data characters and check characters.

Symbology

The structural rules and conventions for representing data within a particular bar code type (e.g. UPC/EAN, Code 39, PDF417, etc.).

USB

Universal Serial Bus. Type of serial bus that allows peripheral devices (disks, modems, printers, digitizers, data gloves, etc.) to be easily connected to a computer. A "plug-an play" interface, it allows a device to be added without an adapter card and without rebooting the computer (the latter is known as hot-plugging).

WLAN

A Wireless Local Area Network links devices via a wireless distribution method (typically spread-spectrum or OFDM radio), and usually provides a connection through an access point to the wider internet. This gives users the mobility to move around within a local coverage area and still be connected to the network.

WPAN

A Wireless Personal Area Network is a personal area network - a network for interconnecting devices centered around an individual person's workspace - in which the connections are wireless. Typically, a wireless personal area network uses some technology that permits communication within about 10 meters - in other words, a very short range.

WWAN

Stands for "Wide Area Network." It is similar to a Local Area Network (LAN), but it is not limited to a single location and it uses Mobile telecommunication cellular network technologies such as UMTS, GPRS, CDMA2000, GSM, CDPD, Mobitex, HSDPA or 3G to transfer data. WWAN connectivity allows a user with a laptop and a WWAN card to surf the web, check email, or connect to a Virtual Private Network (VPN) from anywhere within the regional boundaries of cellular service.

