

USER MANUAL

LCD Monitor

ENGLISH

ProLite XUB2293HS ProLite XU2293HS

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read this comprehensive manual carefully before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.

iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at https://iiyama.com

Things to check before you call the iiyama information line

- | if the power cable is connected securely and turned on?
- | if the display has been turned on?
- | if the signal cable is connected securely and the correct input selected?
- | if the computer has been restarted with the display connected?
- | if the graphics card is correctly installed with the latest drivers possible?
- | if the correct native resolution has been selected via 'Display Properties'?
- | If the R/G/B signal configuration is correct?
- | if the displays On Screen Menu is shown?
- | if the correct brightness and contrast settings have been set?
- if given display tolerances and compatibility have been considered?
- | if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

| model number *

purchase receipt and serial number *

name and address for collection

| telephone/fax number, for availability during the day

convenient collection date (date, time)

short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

Feedback on health and safety issues

If you have any health and safety concerns or questions about the product (including when using the product), please contact iiyama support through our website. You can also contact us by calling +31 204460404. After receiving your feedback, we will ask the responsible unit to handle it as soon as possible and a dedicated person will get back to you. Your feedback will also be recorded and incorporated into our evaluation for improvements

 * see the identification plate on the back of the case.

https://iiyama.com







Say hello to a more sustainable product

IT products are associated with a wide range of sustainability risks throughout their life cycle. Human rights violations are common in the factories. Harmful substances are used both in products and their manufacture. Products can often have a short lifespan because of poor ergonomics, low quality and when they are not able to be repaired or upgraded.

This product is a better choice. It meets all the criteria in TCO Certified, the world's most comprehensive sustainability certification for IT products. Thank you for making a responsible product choice, that help drive progress towards a more sustainable future!

Criteria in TCO Certified have a life-cycle perspective and balance environmental and social responsibility. Conformity is verified by independent and approved verifiers that specialize in IT products, social responsibility or other sustainability issues. Verification is done both before and after the certificate is issued, covering the entire validity period. The process also includes ensuring that corrective actions are implemented in all cases of factory non-conformities. And last but not least, to make sure that the certification and independent verification is accurate, both TCO Certified and the verifiers are reviewed regularly.

Want to know more?

Read information about TCO Certified, full criteria documents, news and updates at **tcocertified.com.** On the website you'll also find our Product Finder, which presents a complete, searchable listing of certified products.

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2293H



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- The font used in the OSD menu is licensed under the Apache License, Version 2.0. You may obtain a copy of the License at http://www.apache.org/licenses/LICENSE-2.0
- Eprel registration number XUB2293HS-B6 : 2013357, XU2293HS-B6 : 2013350

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	3
BEFORE YOU OPERATE THE MONITOR	4
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
USING ARM OR STAND	5
FITTING AND REMOVAL OF STAND : ProLite XUB2293HS	7
FITTING AND REMOVAL OF STAND : ProLite XU2293HS	8
CONTROLS AND CONNECTORS : ProLite XUB2293HS	9
CONTROLS AND CONNECTORS : ProLite XU2293HS	10
CONNECTING YOUR MONITOR : ProLite XUB2293HS	11
CONNECTING YOUR MONITOR : ProLite XU2293HS	12
DISCONNECTING YOUR MONITOR	13
COMPUTER SETTING	13
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE :	
ProLite XUB2293HS	14
ADJUSTING THE VIEWING ANGLE : ProLite XU2293HS	15
OPERATING THE MONITOR	16
ADJUSTMENT MENU CONTENTS	17
STANDBY FEATURE	24
TROUBLE SHOOTING	25
RECYCLING INFORMATION	26
APPENDIX	27
SPECIFICATIONS : ProLite XUB2293HS-B6	27
SPECIFICATIONS : ProLite XU2293HS-B6	28
DIMENSIONS : ProLite XUB2293HS	29
DIMENSIONS : ProLite XU2293HS	29
COMPLIANT TIMING	30

ENGLISH

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR WHEN YOU SENSE TROUBLE

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on

a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height. (Just for height adjustable model.)

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

REMARK SPECIFIC TO DESKTOP USE

This product is designed for desktop use, not for digital signage (electronic signboard) applications such as ceiling hanging or wall mounting.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

ENGLISH

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

- **WARNING** If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.

NOTE

- To protect the LCD panel, do not scratch or rub the screen with a hard object.
- Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- **LCD** Periodic cleaning with a soft dry cloth is recommended.
- SCREEN Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- Supports Resolutions up to 1920 × 1080
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 300cd/m² (Typical)
- Quick Response Time 4ms (Gray to Gray)
- Flicker-Free

ENGLISH

- Blue Light Reducer
- Digital Character Smoothing
- 2 × 1W Stereo Speakers
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- Power Cable*¹
- Stand-Base*³
- Safety Guide

- HDMI Cable
- Stand-Neck
- Quick Start Guide
- Stand-Base with a screw*²
- Screwdriver*²

- CAUTION
 - *¹ All guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.


An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.

- *2 Accessory for ProLite XUB2293HS
- *3 Accessory for ProLite XU2293HS

USING ARM OR STAND


CAUTION

- This product is designed for desktop use, not for digital signage (electronic signboard) applications such as ceiling hanging or wall mounting.
 - Before installation, make sure the wall, ceiling or desktop arm is strong enough to hold the necessary weight of the monitor and the mount.
- Angle adjustment range : 23 degrees upward and 5 degrees downward
- This product cannot be used with the monitor screen facing downward/upward.



< DISPLAY ARM OR DESK ARM STAND >


CAUTION When you use with the display arm or desk arm stand, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 7mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.



[ROTATING THE MONITOR]

ProLite XUB2293HS

The monitor is designed to be compatible with both landscape and portrait modes. Portrait display must be adjusted using the display settings of the connected device.

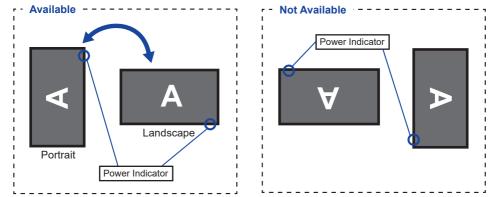


With Stand:

NOTE

- Adjust the monitor's height before panel rotation.
 - Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.

ProLite XU2293HS

The monitor is designed to be compatible only with the landscape mode.

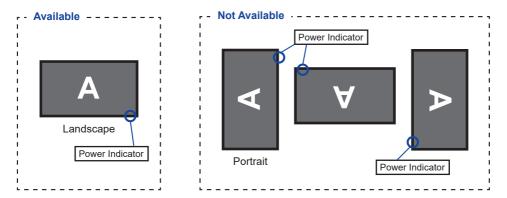


FITTING AND REMOVAL OF STAND : ProLite XUB2293HS

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Install the Stand-Neck to the monitor and then tighten the 'thumb screw' with the provided screwdriver to secure them.

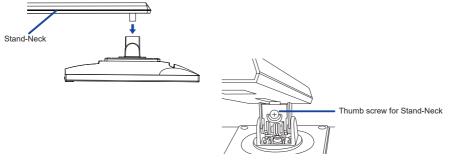

③ Install the Stand-Base to the Stand-Neck and then tighten the 'thumb screw' to secure them.

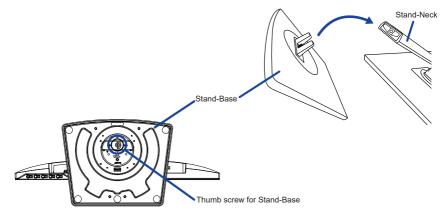

<Removal>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- 2 Loosen the 'thumb screw' to remove the Stand-Base from the Stand-Neck.
- ③ Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Neck from the monitor.


FITTING AND REMOVAL OF STAND : ProLite XU2293HS

CAUTION

- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.


<Installation>


- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Hold the monitor and install the Stand-Neck to the monitor until it clicks to secure.
- ③ Install the Stand-Base to the Stand-Neck.

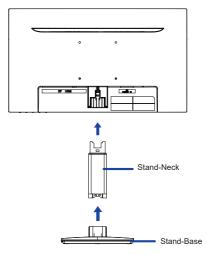


<Removal>

- ① Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Keep pressing the Hooks inward to pull out the Stand-Base.
- ③ Press the Hook on the back of the monitor and remove the Stand-Neck from the monitor.



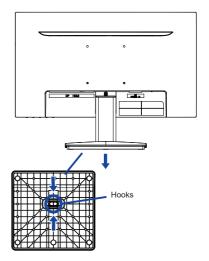

CONTROLS AND CONNECTORS : ProLite XUB2293HS

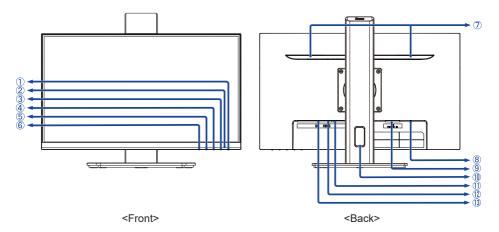

- ① Power Switch (🕛)
- 2 Power Indicator

NOTE Blue: Normal operation Orange: Standby mode

- ③ Menu Button (MENU)
- ④ Up / Right / Volume Button (► / ଏ) *
- ⑤ Down / Left / Eco Button (◀ / ∅) *
- 6 Signal Select / Exit Button (INPUT/EXIT) *
- ⑦ Speakers
- (8) Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.


- (9) AC Connector (~: Alternating current) (AC POWER IN)
- 1 Cable Hole
- 1 Headphone Connector (🔊)

NOTE Proper operation of connected external devices other than headphones is not guaranteed.

- 12 HDMI Connector (HDMI)
- 1 DisplayPort Connector (DP)

* You can skip the Menu items and directly display an option setting screen or an adjustment scale.

CONTROLS AND CONNECTORS : ProLite XU2293HS

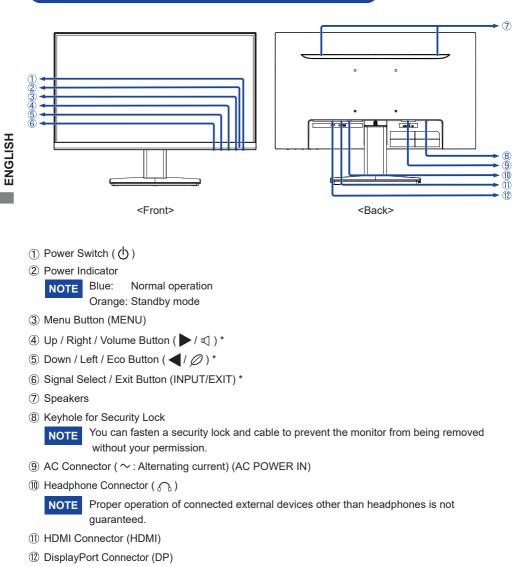


* You can skip the Menu items and directly display an option setting screen or an adjustment scale.

CONNECTING YOUR MONITOR : ProLite XUB2293HS

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the Power Cable to the monitor first and then to the power source.
- ④ Turn on your monitor and computer.

NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).


- The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
- The Class I pluggable equipment Type A must be connected to protective earth.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

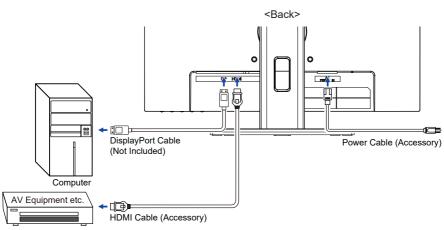

[Example of Connection]


[Collect Cables]

Put the cables through the cable hole to bundle them.

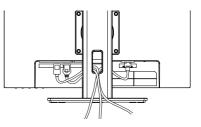

CONNECTING YOUR MONITOR : ProLite XU2293HS

- 1 Ensure that both the computer and the monitor are switched off.
- 2 Connect the computer to the monitor with the signal cable.
- 3 Connect the Power Cable to the monitor first and then to the power source.
- ④ Turn on your monitor and computer.
- NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
 - The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.

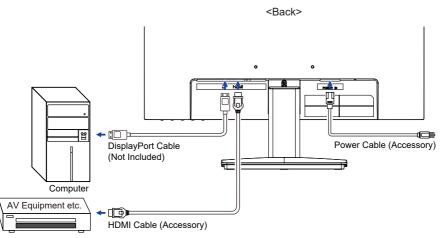

[Example of Connection]

DISCONNECTING YOUR MONITOR

- 1 Ensure that both the computer and the monitor are switched off.
- 2 Disconnect the power source first and then the Power Cable from the monitor.
- ③ Disconnect the signal cable from the computer and the monitor.


COMPUTER SETTING

Signal Timing

Change to the desired signal timing listed on page 30: COMPLIANT TIMING.

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE : ProLite XUB2293HS

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 150mm, angle up to 45° right and left, 23° upward and 5° downward.
- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

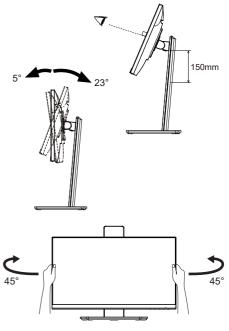




ADJUSTING THE VIEWING ANGLE : ProLite XU2293HS

- For optimal viewing it is recommended to look at the full face of the monitor.
- Hold the stand so that the monitor does not topple when you change the monitor's angle.
- You are able to adjust the monitor's angle up to 20° upward, 5° downward.
- In order to ensure a healthy and relaxed body position when using the monitor at visual display workstations, it is recommended that the adjusted tilt angle should not exceed 10°. Adjust the monitor's angle to your own preference.
- **NOTE** Do not touch the LCD screen when you change the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to catch your fingers or hands when you change the angle.





OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 30. You are also able to adjust the picture by following the button operation shown below.

 Press the MENU Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the ◀ / ▶ Buttons.



② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the MENU Button. Then, use the ◀ / ▶ Buttons to highlight the desired adjustment icon.

- ③ Press the MENU Button again. Use the ◀ / ► Buttons to make the appropriate adjustment or setting.
- ④ Press the EXIT Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for OSD vertical position, select "OSD" of Menu item and then press the MENU Button. Then, select "OSD Vertical Position" by using the ◀ / ▶ Buttons. An adjustment page appears after you press the MENU Button.

Then, use the \triangleleft / \blacktriangleright Buttons to change the OSD vertical position settings. The OSD vertical position should be changing accordingly while you are doing this.



Press the EXIT Button lastly and all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Time has passed. Also, press the EXIT button to quickly turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- All adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS



Adjustment Item	Probler	n / Option Button to Press
Brightness * ^{1,2}	Too dark Too bright	
Contrast *1	Too dull Too intens	se e
	Off	Return to a state set by color adjustment except i-Style Color.
	Standard	For general windows environment and monitor default setting.
i-Style Color * ^{1,2,3}	Game	For PC game environment.
	Cinema	For movie and video environment.
	Scenery	For displaying outdoor scenery images
	Text	For text editing and viewing in a word processing environment.
Adv. Contrast *1	On	Increased Contrast Ratio
	Off	Typical Contrast Ratio
NOTE Adv. Contrast adjusts brightness according to the image, and improve the contrast ratio during movie playing. Contrast, Brightness, i-Style Color, Eco, Gamma and Color Temp. cannot be adjusted and selected while Adv. Contrast is active.		

	co *1 Direct	Off	Normal
F ac * ¹		Mode1	Brightness of back-light is reduced.
ECO		Mode2	Brightness of back-light is reduced more than Mode1.
		Mode3	Brightness of back-light is reduced more than Mode2.

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• Eco: Press the Ø Button when the Menu is not displayed.

		ProLib	XUB2293H
			⊐ 🔅
CONTRAST			
• —			⊐ ()
IT ISTALE COLOR		STANDARD	
ADV. CONTRAST		N (17
2			
OVERCOVE			
X-RES TECHNOLOGY			
	CONTRACT CONTRACT CONTRACT III INTECOLOR ANC CONTRACT III CONTRACT IIII CONTRACT III CONTRACT IIII CONTRACT III CONTRAC		Somes Somes Somes III unitrata 4 subso III unitrata Somes S

Adjustment Item	Problem / Option Button to Pre		Button to Press
Overdrive *4	Off / 1 / 2 / 3 / 4 / 5 It will improve the gray level response time of the LCD panel. A higher level results in a faster response time.		
	Off	Normal	
	Soft	Enhance the picture edge.	
X-Res Technology	Middle	Enhance the picture edge mor	e than the Soft option.
	Hard	Enhance the picture edge n Middle option.	nore than the

*¹ The availability of each item depends on which item is activated. See page 23 Function Correlation Matrix for more details.

*² Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

*³ i-Style Color is disabled when Blue Light Reducer is activated.

 \star4 When Overdrive is activated, some level of image retention will be caused.

Picture Adjust

Q

Color Settings *1		Pack	h 17822768
Adjustment Item	Problem	/ Option	Button to Press
	Gamma 1	High contrast	t
Gamma * ²	Gamma 2	Normal	
	Gamma 3	Dark	
	Auto	Select the RO	GB Range automatically.
RGB Range * ³	Full	For full-range	e color scale signalscale signal.
	Limited	For limited co	olor scale signal.
		Red	Too weak
	User	Green	Too weak \blacktriangleright No strong
Color Temp. *2		Blue	
	Cool	Cool color	
	Normal	Normal color	
	Warm	Warm color	

*¹ Color Settings are disabled when Blue Light Reducer is activated.

*² The availability of each item depends on which item is activated. See page 23 Function Correlation Matrix for more details.

*³ Only HDMI input.

Image Settings

iivama		ProLite	XUB2293F
OF PICTURE ADJUST	MAGE SETTINGS		
R COLOR SETTINGS	VIDEO MODE ADJUST		
IMAGE SETTINGS	MAR LIGHT REDUCER		
050	SHARP AND SOFT		
EITRA	ADAPTIVE SINC		

Adjustment Item	Problem	n / Option	Button to Press
Video Mode Adjust *1	Full	Expansion display	
video mode Adjust	Aspect	Expansion display of Aspect	
	Off	Typical	
Blue Light Reducer *2	Mode 1	Blue light is reduced.	
	Mode 2	Blue light is reduced more than Mo	ode 1.
	Mode 3	Blue light is reduced more than Mo	ode 2.
Sharp and Soft	Mode 3 Blue light is reduced more than Mode 2. 1 / 2 / 3 / 4 / 5 / 6 You can change the picture quality from 1 to 6 (sharp to soft). Press the ◀ Button to change the picture quality in numerical order. Press the ▶ Button to change the picture quality in reverse numerical order. Adjust the picture quality in reverse numerical order. Adjust the picture quality at resolutions of less than 1920 × 1080.		ality ange
Adaptive Sync	On Off	Enable the Adaptive Sync function. The Adaptive Sync function is turn	

*¹ It can display in the center of the screen with a 4:3, 5:4, 16:10 or Real 16:9 aspect ratio.

*² Blue Light Reducer cannot be enabled if i-Style Color, Adv.Contrast or Eco is enabled.

DSD				
Adjustment Item	Problem /	Option		Button to Press
OSD Horizontal Position		OSD is too left OSD is too right		
OSD Vertical Position		OSD is too left Image: Constraint of the second		
OSD Time	You can set the OSD display duration time between 5 and 60 seconds.			
OSD Background	On			
	Off	Return the backg	ground of OSE).
OSD Rotate *	Rotate the O 0° (Normal) /	SD. -90° (Rotate left)		
	English	English	Česky	Czech
	Français	French	Italiano	Italian
Language	Deutsch	German	Русский	Russian
	Nederlands	Dutch	日本語	Japanese
	Polski	Polish		
Display Information	Displays information regarding the current input signal coming from the graphic card in your computer. NOTE See your graphic card user guide for more information			
	about changing the resolution and refresh.			

* Available for ProLite XUB2293HS only.

Extra

- PICTURE ADJUST			
	EKTRA		
🛞 COLOR SETTINGS	L REAT	15	80
MAGE SETTINGS	BC 8000	ON	017
🚯 oso	SIGNAL SELECT		
	🖶 un	CN	062
	# OPENING LODO	ON	677

Adjustment Item	Problem / Option		
Reset	Yes	Factory-preset data is restored.	
Reset	No	Return to Menu.	
DDC/CI On		DDC/CI is On.	
DDC/Cl	Off	DDC/CI is Off.	
	Auto	Select the signal input automatically.	
Signal Select Direct	HDMI	Select the Digital (HDMI) input.	
	DisplayPort	Select the Digital (DisplayPort) input.	
 NOTE If "Auto" is selected, only one source available is selected automatically. If there are more input sources available and you select one of them, the "Auto" option not available. If multiple inputs are connected, the monitor may not recover the last one used after turning it off and on again. It is only possible when you set a specific source. 			
I FD	On	The Power Indicator is turned On.	
LED	Off	The Power Indicator is turned Off.	
NOTE Turn Off the Power Indie	cator when yo	u are bothered by the light.	
Opening Logo	On	Opening Logo is On.	
	Off	Opening Logo is Off.	

Direct

You can skip the Menu items and directly display an option setting screen by using the following button operations.

• Signal Select: Press the INPUT Button when the Menu is not displayed, it shows following Menu.



Direct

You can skip the Menu items and directly display an option setting screen or an adjustment scale by using the following button operations.

• Volume: Press the 📢 Button when the Menu is not displayed.

Adjustment Item	Problem / Option	Button to Press
Volume	Too soft Too loud	\$ \$

 Mute: Keep pressing the ▶ Button for 1-2 seconds when the Menu is not displayed. Mute and Unmute are switched by repeating the above button operation.

Lock Mode:

<OSD>

Pressing and holding the MENU button for 2 seconds when Menu is not displayed, it will lock/unlock the OSD Lock function.

<Power>

Pressing and holding the INPUT button for 2 seconds when Menu is not displayed, will lock/unlock the Power Lock function.

Function Correlation Matrix

Item to be selected	Picture Adjust				Color Settings		
Item activated	Contrast	Brightness	i-Style Color	Adv. Contrast	Eco	Gamma	Color Temp.
			0000	Contrast			Temp.
i-Style Color	-	-		-	-	✓	\checkmark
Adv. Contrast	-	-	-	\geq	-	~	-
Eco	~	-	√	-		~	~

✓ : Available

-: Not available


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

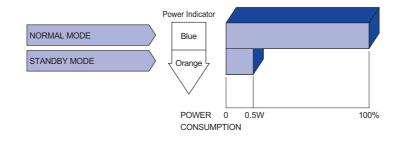

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- 2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

Problem

shaking.

Check

The signal timing of the computer is within the specification of the monitor.

1	The picture does not appear.	
	(Power indicator does not light up.)	 □ The Power Cable is firmly seated in the socket. □ The Power Switch is turned ON. □ The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 If the blank screen saver is in active mode, touch the keyboard or the mouse. Increase the Contrast and/or Brightness. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	 If the monitor is in Standby Mode, touch the keyboard or the mouse. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	 The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	□ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	□ The video output level of the computer is within the specification of the monitor.
5	The screen is	☐ The power voltage is within the specification of the monitor.

Problem

Check

- (6) No sound. □ The audio equipment (computer etc.) is ON.
 - □ The Audio Cable is properly connected.
 - □ The Volume is turned up.
 - □ The Mute is OFF.
 - □ The audio output level of the audio equipment is within the specification of the monitor.
- The sound is too loud or too quiet.The audio output level of the audio equipment is within the specification of the monitor.
- ⑧ A strange noise is □ The Audio Cable is properly connected. heard.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: https://iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS : ProLite XUB2293HS-B6

Size Category		22"			
	Panel technology	IPS (In-Plane-Switching)			
LCD Panel	Size	Diagonal: 21.5" (54.5cm)			
	Pixel pitch	0.249mm H × 0.241mm V			
	Brightness	300cd/m ² (Typical), 195cd/m ² (Default / Energy Saving)			
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 89 degrees each, Up / Down : 89 degrees each (Typical)			
	Response time *1	4ms (Gray to Gray)			
Display (Colors	Approx. 16.7M			
Sync Frequency		Horizontal: 30-115kHz, Vertical: 48-100Hz			
Native Resolution		1920 × 1080, 2.1 MegaPixels			
Support max. resolution		HDMI: 1920 × 1080, 100Hz DisplayPort: 1920 × 1080, 100Hz			
Input Connector		HDMI, DisplayPort			
Input Video Signal		HDMI, DisplayPort			
Headphone Connector *2		ø 3.5mm mini jack (Stereo)			
Speaker	S	1W × 2 (Stereo speakers)			
Maximur	n Screen Size	478.656mm W × 260.280mm H / 18.8" W × 10.2" H			
Power S	ource	100-240VAC, 50/60Hz, 1.2A			
Power Consumption		12W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum			
Dimensions / Net Weight		493.0 × 332.0 - 482.0 × 209.5mm / 19.4 × 13.0 - 18.9 × 8.2" (W×H×D) 4.2kg / 9.2lbs			
Angle		Tilt:Upward: 23 degrees, Downward: 5 degreesSwivel:Left / Right: 45 degrees eachRotation:Counterclockwise: 90 degrees			
Environn Consider		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 90% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)			
Approva	ls	TCO Certified, CE, UKCA, TÜV-Bauart, VCCI, PSE, EAC			

NOTE

*1 When set to Overdrive +5.

*² Proper operation of connected external devices other than headphones is not guaranteed.

SPECIFICATIONS : ProLite XU2293HS-B6


Size Category		22"			
	Panel technology	IPS (In-Plane-Switching)			
	Size	Diagonal: 21.5" (54.5cm)			
1.00	Pixel pitch	0.249mm H × 0.241mm V			
LCD Panel	Brightness	300cd/m ² (Typical), 195cd/m ² (Default / Energy Saving)			
1 anei	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available			
	Viewable angle	Right / Left : 89 degrees each, Up / Down : 89 degrees each (Typical)			
	Response time *1	4ms (Gray to Gray)			
Display C	Colors	Approx. 16.7M			
Sync Fre	quency	Horizontal: 30-115kHz, Vertical: 48-100Hz			
Native R	esolution	1920 × 1080, 2.1 MegaPixels			
Support max. resolution		HDMI: 1920 × 1080, 100Hz DisplayPort: 1920 × 1080, 100Hz			
Input Connector		HDMI, DisplayPort			
Input Video Signal		HDMI, DisplayPort			
Headphone Connector *2		ø 3.5mm mini jack (Stereo)			
Speakers	3	1W × 2 (Stereo speakers)			
Maximun	n Screen Size	478.656mm W × 260.280mm H / 18.8" W × 10.2" H			
Power So	ource	100-240VAC, 50/60Hz, 1.2A			
Power Consumption		12W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum			
Dimensions / Net Weight		493.0 × 374.0 × 211.0mm / 19.4 × 14.7 × 8.3" (W×H×D) 2.6kg / 5.7lbs			
Tilt Angle		Upward: 20 degrees Downward: 5 degrees			
Environm Consider		Operating:Temperature Humidity5 to 35°C / 41 to 95°F 10 to 90% (No condensation)Storage:Temperature Humidity-20 to 60°C / -4 to 140°F 10 to 90% (No condensation)			
Approval	S	TCO Certified, CE, UKCA, TÜV-Bauart, VCCI, PSE, EAC			


NOTE

*1 When set to Overdrive +5.

*² Proper operation of connected external devices other than headphones is not guaranteed.


DIMENSIONS : ProLite XUB2293HS

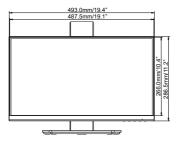








(): Maximum adjustment range



DIMENSIONS : ProLite XU2293HS

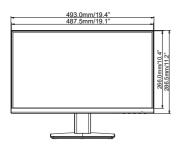





COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock
640 × 480	31.469kHz	59.940Hz	25.175MHz
040 ^ 460	37.500kHz	75.000Hz	31.500MHz
800 × 600	37.879kHz	60.317Hz	40.000MHz
800 ~ 800	46.875kHz	75.000Hz	49.500MHz
1024 × 768	48.363kHz	60.004Hz	65.000MHz
1024 * 700	60.023kHz	75.029Hz	78.750MHz
1280 × 1024	63.981kHz	60.020Hz	108.000MHz
1200 * 1024	79.976kHz	75.025Hz	135.000MHz
1680 × 1050	65.290kHz	60.000Hz	146.250MHz
	67.500kHz	60.000Hz	148.500MHz
1920 × 1080	83.890kHz	74.970Hz	174.500MHz
1920 * 1060	95.540kHz	85.000Hz	198.723MHz
	110.000kHz	100.000Hz	228.800MHz