


Mobilis has designed and makes in France (in our factory in Vierzon) a protective solution dedicated to professionals to guarantee them safety and safety of their customers



### ANTI-PROJECTION FOLDING PROTECTIVE FACE SHIELD

Ref 888006

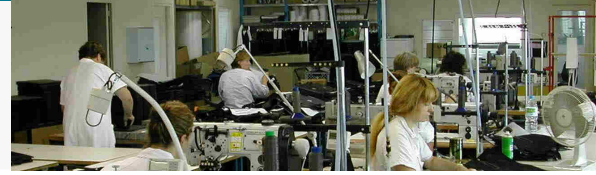

This protective face shield against droplets and splashes is conform to 2001/95/CE directive. It is made of 100% transparent "food" PET to ensure a total viewing comfort. This material is resistant to food standards solvents and alcohols



**MADE IN FRANCE**

- + Washable and reusable, it allows use without time limitation (in replacement or in addition to a protective mask).
- + Light (50g) and comfortable, it perfectly fits around your head by a elastic system
- + Complete transparency for an excellent viewing comfort (material: crystal APET)
- + Its closed cells front foam provides optimal comfort.
- + The space between the face and the shield is also adjustable to avoid mist.
- + The face shield can be folded down 90 ° to temporarily extricate the face.
- + This face shield offers full protection. It exceeds approximately 5cm in below the chin (According to the morphology of the user)
- + Safety and ease of movement.



WASHABLE & REUSABLE



ECO-FRIENDLY



OPTIMAL COMFORT

### SPECIFICATIONS

Color	Ref	Product	EAN Code
Transparent	888006	Folding face shield	3700992518961

**BOX OF 10**

This anti-projection face shield is not a medical device (Regulation EU / 2017/745). It is an alternative or a complement to the wearing of the mask. This product is therefore not intended for use by caregivers in contact with patients

[www.mobiliscase.com](http://www.mobiliscase.com)



**MOBILIS<sup>®</sup>**  
CARE & CARRY



### **Instructions for use of folding anti-projection folding protective face shields**

**Area of use :** This face shield is intended for the professional environment and is exclusively reserved for Non Sanitary Uses (UNS). It is intended to prevent spatters of droplets. This face shield is individual and intended to be offered to professionals who come across a large number of people during their activities (cashier hostesses, law enforcement agents, etc.). It is not intended for use by healthcare personnel in contact with patients. The use of this face shield is part of the strict application of lockdown measures, work organization measures as well as gestures barriers.

**Use :** Attach directly to the top of the head and adjust with the elastic band.  
Attach the face shield to the foam band with the two metal fasteners

#### **Recommendations for use :**

- Before putting on the face shield, clean it with soapy water or with a hydroalcoholic solution
- Apply the face shield by adjusting the Velcro® according to the circumference of your head,
- Adjust the face shield so that it well covers the face and sides of your face (And the closest to the ears).
- Do not bend

**Maintenance :** After use, the face shield must be cleaned with soapy water or with a hydroalcoholic solution and then isolated in a clean place.  
In case of wear or scratches the face shield can be replaced.

**Washing of the face shield :** with soapy water or with an alcoholic solution

#### **Composition :**

- Material of the face shield : APET (Food PET) 100% transparent, 0.5mm thick
- Black polyester elastic

**ANTI-PROJECTION FOLDING PROTECTION FACE SHIELD**  
**MOBILIS [7 Rue Orion, 74650 CHAVANOD] [www.mobiliscase.com](http://www.mobiliscase.com)**