


Industrial RJ45 to Open SFP Media Converter | 1000 Mbps (1G)

Product Diagram (IMC1GSFP)

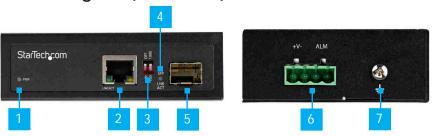

Component		Function
1	PWR LED	 Green: An external DC Power Source is detected. O: An external DC Power Source is not detected.
2	RJ45 Port	Connect a Network Device to the Media Converter. Green LED:
		 On: A Network Device is detected. Flashing: The Media Converter is transmitting/receiving data.
3	DIP Switch	 On: Enables Link Fault Pass Through (LFP) function. LFP highlights link failures, by forcing a link down between both connections during a link failure. O: Disables LFP function (default). DIP 2: On: Sets SFP speeds to 1000Mbps (default). O: Sets SFP speeds to 100Mbps.
4	SFP LED	 Green: Indicates that a link is detected on the SFP. Flashing: Indicates that data is being transmitted or received.
5	SFP Slot	Connect an SFP (100/1000BASE-X) to the Media Converter.

6	4-Pin Terminal Block	 Connect an external DC Power Source (12-56V DC Input) to the Media Converter. Connect an alarm or warning circuit to the relay (ALM) connection. The relay is triggered if the Media Converter loses power.
7	Ground Screw	Connect a ground connection to the Ground Screw when connecting a DC Power Source to the Media Converter .

Requirements

For the latest requirements, please visit www.startech.com/IMC1GSFP

- Network Equipment (ex. Router, Network Switch) x 1
- MSA-Compliant 100/1000BASE-X SFP Transceiver Module x 1
- RJ45 Terminated UTP/STP CAT5e (or better) Network Cable x 1
- Terminated Fiber Optic Cable (dependent on SFP Module) x 1
- DC Power Source x 1
- Phillips Head Screwdriver x 1
- Small Flat Head Screwdriver x 1
- · Alarm or Warning Circuit x 1

Powering the Media Converter

Connecting and installing the **4-Wire Terminal Connector** must be completed by a licensed Electrician.

Notes: Make sure that you turn o the power source before connecting the power wire to the **Media Converter**.

Do not exceed the recommend power source voltage as it may result in personal or product damage.

- 1. Using a **Small Flat Head Screwdriver**, loosen the two screws (+V-) on the **4-Wire Terminal Connector** (included).
- 2. Connect the **Power Wires** from a **DC Power Source** (12 56V DC), or the provided **Barrel Power Connector Adapter** to the proper **Terminal Block Connectors** on the **Media Converter**. The terminals are marked on the **Media Converter**'s **Casing** (connect the positive wire to V+ and the negative wire to V-).
- (Optional) Using a Small Flat Head Screwdriver, loosen the two screws (ALM) on the 4-Wire Terminal Connector.

- (Optional) Connect the Relay Wires from an Alarm or Warning Circuit to the 2 ALM Relay Pins on the Terminal Block Connector.
- 5. Using the Small Flat Head Screwdriver, tighten the four screws on the 4-Wire **Terminal Connector.**
- 6. Insert the 4-Wire Terminal Connector in the 4-Wire Terminal Block on the Media Converter.
- 7. Using a Phillips Head Screwdriver, loosen the Ground Screw on the Media Converter.
- Connect the Ground Wire from an Earth Ground Connection to the Ground Screw on the Media Converter
- 9. Using the Phillips Head Screwdriver, tighten the Ground Screw to secure the Grounding Wire to the Media Converter.

(Optional) Barrel Connector

 Connect a Type N (OD: 5.5 mm, ID: 2.5 mm) Barrel Connector from a Universal Power Adapter to the Terminal Block to Barrel Power Connector Adapter.

Connecting the Media Converter

- 1. Connect a CAT5e/6 Cable to the RJ45 Port on the Media Converter and the other end to an RJ45 port on a Network Device.
- 2. Insert an MSA-Compliant SFP Transceiver Module (sold separately) into the SFP Slot on the Media Converter.
- 3. Remove the **Dust Cover** from the **SFP Module** and connect the appropriate cable (CAT5e/6 or Fiber).

Mounting

DIN Rail Mounting

- 1. Align the **DIN Rail Brackets** (x 1) with the **Mounting Holes** (x 4) on the side of the Media Converter.
- 2. Insert the Mounting Screws (x 3) through the DIN Rail Bracket and into the Media Converter.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modications not expressly approved by StarTech.com could void the user's authority to operate the equipment. **Industry Canada Statement**

This Class A digital apparatus complies with Canadian ICES-003

Cet appareil numérique de la classe [A] est conforme à la norme NMB-003 du Canada. CAN ICES-3 (A)/NMB-3(A)

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of thirdparty companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.


- 3. Using a Phillips Head Screwdriver, tighten the Mounting Screws. Be careful not to over-tighten the **Mounting Screws**.
- 4. Clip the **DIN Rail Bracket** onto a **DIN Rail**, securing the **Media Converter**.

Wall Mounting

It is recommended that you use **Wall Studs** when wall mounting the **Media** Converter.

- 1. Align the Mounting Brackets (x 2) with the Mounting Holes (x 4) on the side of the Media Converter.
- 2. Insert the Mounting Screws (x 4) through each of the Mounting Brackets and into the Media Converter.
- 3. Align the **Media Converter** on the wall in the position you want to mount the Media Converter.
- 4. Using a Writing Utensil mark o both of the Mounting Holes on the Media Converter.
- 5. Using a Level draw a line connecting the two Mounting Holes, making sure that the line is level.
- 6. Align the Mounting Holes on the Media Converter with the Mounting Hole Marks.
- 7. Insert the Mounting Screws (x 2) through the Mounting Holes and into the Wall.
- 8. Using a Phillips Head Screwdriver tighten the Mounting Screws until the Media Converter is securely fastened to the Wall.

Product Dimensions

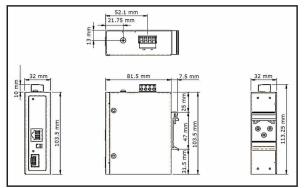

Warranty Information

This product is backed by a two-year warranty.

For further information on product warranty terms and conditions, please refer to www.startech.com/warranty. Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their o cers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of pro ts, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

StarTech.com Ltd. StarTech.com LLP 45 Artisans Cres London, Ontario N5V 5E9

Canada

2500 Creekside Parkwy Lockbourne, Ohio 43137 U.S.A.

StarTech.com Ltd. Unit B, Pinnacle 15 Gowerton Rd. Brackmills Northampton NN4 7BW United Kingdom

FR: startech.com/fr DE: startech.com/de ES: startech.com/es NL: startech.com/nl IT: startech.com/it JP: startech.com/jp